# **Contents**

## LIVING WITH YOUR CITROËN AX

Introduction	Page	0•4
Safety First	Page	0.5
Buying spare parts and vehicle identification numbers	Page	0•6
MOT Test Checks		
Checks carried out from the driver's seat	Page	0.7
Checks carried out with the vehicle on the ground	Page	0•8
Checks carried out with the vehicle raised	Page	0.9
Checks carried out on your vehicle's exhaust emission system	Page	

### **MAINTENANCE**

### Routine maintenance

General dimensions and weights	Page	0•11
Booster battery (jump) starting	Page	0•11
Radio/cassette unit anti-theft system – precaution	Page	0•11
Jacking	Page	0•12
Towing and wheel changing	Page	0•13
Conversion factors	Page	0•14
Maintenance and servicing	Page	1•1
Lubricants, fluids and capacities	Page	1•2
Maintenance schedule	Page	1•3
Weekly checks	Page	1•6
Every 6000 miles/10 000 km	Page	1•9
Every 12 000 miles/20 000 km	Page	1•11
Every 18 000 miles/30 000 km	Page	1•18
Every 24 000 miles/40 000 km	Page	1•19
Every 36 000 miles/50 000 km	Page	1•20
Every 2 years	Page	1•21
Specifications	Page	1•22

# **Contents**

## **REPAIRS & OVERHAUL**

Engine and Associated Systems

Petrol engine in-car repair procedures	Chapter	2A	
Diesel engine in-car repair procedures	Chapter		
Engine removal and general engine overhaul procedures			
Cooling, heating and ventilation systems	Chapter		
Fuel/exhaust systems – carburettor petrol models	Chapter	3	
Fuel/exhaust systems – single-point petrol injection models	Chapter		
Fuel/exhaust systems – multi-point petrol injection models	Chapter		
Fuel/exhaust systems – Diesel models	Chapter		
Emissions control systems	Chapter		
Starting and charging systems	Chapter		
Ignition system (petrol models)	Chapter		
Preheating system (Diesel models)	Chapter	5B	
	Chapter	5C	
Transmission			
Clutch Manual transmission	Chapter	6	
Driveshafts	Chapter	7	
Diffeentits	Chapter	8	
Brakes			
Braking system	Chapter	9	
Suspension and steering			
Suspension and steering	Chapter	10	
Body Equipment			
Bodywork and fittings	Observation		
	Chapter	11	
Electrical			
Body electrical systems	Chapter	12	
Wiring diagrams			
Refer to	Page WD	•1	
D-1			
Reference			
Tools and working facilities  General repair procedures			
Fault finding	Page REF	-	
	Page REF	5	
Index Refer to			
TOIGH LO	Page IND	1	

## Introduction to the Citroën AX

The Citroën AX was introduced in the UK in July 1987 (having being launched in France the previous September), the initial versions being three-door Hatchbacks. The five-door version was introduced in April 1988.

All engines are derived from the well-proven TU series engines which have appeared in many Peugeot and Citroën vehicles. The engine is of four-cylinder overhead camshaft design, mounted transversely, with the transmission mounted on the left-hand side. All models have a four- or five-speed manual transmission.

In early 1989, a 1.4 litre (1360 cc) Diesel engine was added to the range. In September 1991, the "second-generation" AX was introduced, with revised interior and exterior styling. A 1527 cc Diesel engine was introduced in July 1994 - however, at the time of writing, only limited technical information was available for this engine.

All models have fully-independent front and rear suspension. The rear suspension incorporates torsion bars and trailing arms.

A wide range of standard and optional equipment is available within the AX range to suit most tastes, including central locking and electric windows. An anti-lock braking system and air conditioning system are available as options on certain models.

Provided that regular servicing is carried out in accordance with the manufacturer's recommendations, the Citroën AX should prove reliable and very economical. The engine compartment is well-designed, and most of the items requiring frequent attention are easily accessible.

#### About this manual

The aim of this manual is to help you get the best value from your vehicle. It can do so in several ways. It can help you decide what work must be done (even should you choose to get it done by a garage). It will also provide information on routine maintenance and servicing, and give a logical course of action and diagnosis when random faults occur. However, it is hoped that you will use the manual by tackling the work yourself. On simpler jobs it may even be quicker than booking the car into a garage and going there twice, to leave and collect it. Perhaps most important, a lot of money can be saved by avoiding the costs a garage must charge to cover its labour and overheads.

The manual has drawings and descriptions to show the function of the various components so that their layout can be understood. Tasks are described and photographed in a clear step-by-step

References to the "left" or "right" of the vehicle are in the sense of a person in the driving seat, facing forwards.



Citroën AX 11 TZX 5-door



Citroën AX GTi

#### Acknowledgements

Thanks are due to Champion Spark Plug who supplied spark plug information. Certain illustrations are the copyright of Citroën Cars Ltd, and are used with their permission. Thanks are also due to Sykes-Pickavant, who provided many of the workshop tools, and all those at Sparkford who assisted in the production of this manual.

We take great pride in the accuracy of information given in this manual, but vehicle manufacturers make altera-tions and design changes during the production run of a particular vehicle of which they do not inform us. No liability can be accepted by the authors or publishers for loss, damage or injury caused by any errors in, or omissions from, the information given.