



[DealerNation@aol.com](mailto:DealerNation@aol.com)

# **PART 1 ENGINE SYSTEM**

## **Chapter 1 ENGINES**

| <b>Section</b>                       | <b>Page</b> |
|--------------------------------------|-------------|
| A ENGINE — DESCRIPTION AND OPERATION | 1           |
| B ENGINE — OVERHAUL                  | 3           |

## **Chapter 2 COOLING SYSTEM**

| <b>Section</b>                               | <b>Page</b> |
|----------------------------------------------|-------------|
| A COOLING SYSTEM — DESCRIPTION AND OPERATION | 35          |
| B COOLING SYSTEM — OVERHAUL                  | 36          |

## **Chapter 3 TROUBLE SHOOTING, SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>     | <b>Page</b> |
|--------------------|-------------|
| A TROUBLE SHOOTING | 45          |
| B SPECIFICATIONS   | 50          |
| C SPECIAL TOOLS    | 58          |

## **PART 2 FUEL SYSTEMS**

### **Chapter 1 FUEL SYSTEM — DIESEL**

| <b>Section</b>                                     | <b>Page</b> |
|----------------------------------------------------|-------------|
| A. FUEL INJECTION PUMP — DESCRIPTION AND OPERATION | 1           |
| B. THERMOSTART                                     | 5           |
| C. ADJUSTMENTS                                     | 5           |

### **Chapter 2 FUEL SYSTEM — GASOLINE**

| <b>Section</b>                                      | <b>Page</b> |
|-----------------------------------------------------|-------------|
| A. DESCRIPTION AND OPERATION                        | 9           |
| B. ADJUSTMENTS                                      | 13          |
| C. CARBURETOR                                       | 15          |
| D. FUEL TANK, LINES, PUMP, FILTER AND SEDIMENT BOWL | 19          |

### **Chapter 3 INJECTORS**

| <b>Section</b>                           | <b>Page</b> |
|------------------------------------------|-------------|
| A. INJECTORS — DESCRIPTION AND OPERATION | 21          |
| B. INJECTORS — OVERHAUL                  | 22          |

### **Chapter 4 AIR CLEANER**

| <b>Section</b>                             | <b>Page</b> |
|--------------------------------------------|-------------|
| A. AIR CLEANER — DESCRIPTION AND OPERATION | 29          |
| B. AIR CLEANER — OVERHAUL AND SERVICE      | 29          |

## **PART 2 FUEL SYSTEMS**

### **Chapter 5 TROUBLE SHOOTING, SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>      | <b>Page</b> |
|---------------------|-------------|
| A. TROUBLE SHOOTING | 31          |
| B. SPECIFICATIONS   | 36          |
| C. SPECIAL TOOLS    | 38          |

## **PART 3 ELECTRICAL SYSTEM**

### **Chapter 1 WIRING, LIGHTS AND CONTROLS**

| <b>Section</b>                              | <b>Page</b> |
|---------------------------------------------|-------------|
| A. WIRING SCHEMATICS AND DESCRIPTION        | 2           |
| B. WIRING SCHEMATICS — CAB AIR CONDITIONING | 9           |
| C. PRODUCTION CHANGES                       | 12          |

### **Chapter 2 BATTERY**

| <b>Section</b>                         | <b>Page</b> |
|----------------------------------------|-------------|
| A. BATTERY — DESCRIPTION AND OPERATION | 13          |
| B. BATTERY — MAINTENANCE AND TESTS     | 13          |

### **Chapter 3 STARTING MOTOR**

| <b>Section</b>                                      | <b>Page</b> |
|-----------------------------------------------------|-------------|
| A. STARTING MOTOR — DESCRIPTION AND OPERATION       | 19          |
| B. STARTING MOTOR — OVERHAUL                        | 22          |
| C. STARTING MOTOR RELAY — DESCRIPTION AND OPERATION | 24          |
| D. STARTING MOTOR RELAY — OVERHAUL                  | 34          |
| E. SAFETY START SWITCH — DESCRIPTION AND OPERATION  | 34          |
| F. SAFETY START SWITCH — OVERHAUL                   | 34          |
| G. KEY START SWITCH                                 | 36          |

### **Chapter 4 CHARGING SYSTEM**

| <b>Section</b>                                        | <b>Page</b> |
|-------------------------------------------------------|-------------|
| A. CHARGING SYSTEM — DESCRIPTION AND OPERATION        | 37          |
| B. TROUBLESHOOTING — IN-VEHICLE TESTS                 | 42          |
| a. OUTPUT AND SYSTEM CAPACITY TEST                    | 43          |
| b. EXCITATION VOLTAGE TEST                            | 44          |
| c. OPEN OR SHORTED DIODE, OR OPEN POSITIVE DIODE TEST | 45          |
| d. SHORTED POSITIVE RECTIFIER DIODE TEST              | 46          |
| e. OPERATION TEST                                     | 46          |
| f. REGULATOR OR REGULATOR CIRCUIT TEST                | 47          |
| C. CHARGING SYSTEM — OVERHAUL                         | 47          |

## **PART 3 ELECTRICAL SYSTEM**

### **Chapter 5 IGNITION SYSTEM**

| <b>Section</b>           | <b>Page</b> |
|--------------------------|-------------|
| A. DESCRIPTION           | 59          |
| B. IGNITION SYSTEM TESTS | 60          |
| C. DISTRIBUTOR           | 65          |
| D. DISTRIBUTOR DRIVE     | 73          |
| E. IGNITION COIL         | 75          |
| F. SPARK PLUGS AND WIRES | 76          |

### **Chapter 6 TROUBLESHOOTING, SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>     | <b>Page</b> |
|--------------------|-------------|
| A. TROUBLESHOOTING | 79          |
| B. SPECIFICATIONS  | 81          |
| C. SPECIAL TOOLS   | 84          |

## **PART 4 CLUTCH**

### **Chapter 1 CLUTCH OVERHAUL**

| <b>Section</b>                                | <b>Page</b> |
|-----------------------------------------------|-------------|
| A. CLUTCH — DESCRIPTION AND OPERATION         | 1           |
| B. CLUTCH — LINKAGE (FREE TRAVEL) ADJUSTMENT  | 1           |
| C. CLUTCH — REMOVAL AND INSTALLATION          | 2           |
| D. CLUTCH — PRESSURE PLATE AND COVER OVERHAUL | 3           |

### **Chapter 2 SERVICING CLUTCH ASSOCIATED COMPONENTS**

| <b>Section</b>                                       | <b>Page</b> |
|------------------------------------------------------|-------------|
| A. CLUTCH PILOT BEARING — DESCRIPTION AND OVERHAUL   | 9           |
| B. CLUTCH RELEASE BEARING — DESCRIPTION AND OVERHAUL | 9           |
| C. CLUTCH RELEASE SHAFT — OVERHAUL                   | 10          |
| D. CLUTCH PEDAL AND LINKAGE — OVERHAUL               | 10          |

### **Chapter 3 SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>    | <b>Page</b> |
|-------------------|-------------|
| A. SPECIFICATIONS | 13          |
| B. SPECIAL TOOLS  | 13          |

## **PART 5**

# **MANUAL REVERSING TRANSMISSION**

### **Chapter 1**

## **OVERHAULING THE TRANSMISSION**

| <b>Section</b>                                                  | <b>Page</b> |
|-----------------------------------------------------------------|-------------|
| A. MANUAL REVERSING TRANSMISSION —<br>DESCRIPTION AND OPERATION | 1           |
| B. INTRODUCTION TO OVERHAULING THE TRANSMISSION                 | 3           |
| C. GEARSHIFT COVER OVERHAUL                                     | 4           |
| D. FRONT END OVERHAUL                                           | 4           |
| E. REAR END OVERHAUL                                            | 6           |
| F. COMPLETE OVERHAUL                                            | 9           |
| G. COMPONENT INSPECTION AND REPAIR                              | 14          |

### **Chapter 2**

## **SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>    | <b>Page</b> |
|-------------------|-------------|
| A. SPECIFICATIONS | 21          |
| B. SPECIAL TOOLS  | 22          |

## **PART 6**

### **POWER REVERSING TRANSMISSION**

#### **Chapter 1**

#### **POWER REVERSING TRANSMISSION OVERHAUL**

| <b>Section</b>                                                 | <b>Page</b> |
|----------------------------------------------------------------|-------------|
| A. POWER REVERSING TRANSMISSION —<br>DESCRIPTION AND OPERATION | 1           |
| B. INTRODUCTION TO OVERHAULING THE TRANSMISSION                | 12          |
| C. GEARSHIFT COVER OVERHAUL                                    | 14          |
| D. FRONT END OVERHAUL                                          | 19          |
| E. REAR END OVERHAUL                                           | 25          |
| F. COMPLETE OVERHAUL                                           | 28          |
| G. COMPONENT OVERHAUL                                          | 31          |

#### **Chapter 2**

#### **TROUBLE SHOOTING SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>      | <b>Page</b> |
|---------------------|-------------|
| A. TROUBLE SHOOTING | 47          |
| B. SPECIFICATIONS   | 54          |
| C. SPECIAL TOOLS    | 58          |

## **PART 7**

### **REAR AXLE AND BRAKES**

#### **Chapter 1**

##### **REAR AXLE OVERHAUL**

| <b>Section</b>                                                 | <b>Page</b> |
|----------------------------------------------------------------|-------------|
| A. REAR AXLE — DESCRIPTION AND OPERATION                       | 1           |
| B. REAR AXLE SHAFT ASSEMBLY OVERHAUL                           | 4           |
| C. PLANETARY REDUCTION GEAR ASSEMBLY AND AXLE HOUSING OVERHAUL | 10          |
| D. REAR WHEEL BRAKE ASSEMBLY OVERHAUL                          | 12          |
| E. DIFFERENTIAL AND DIFFERENTIAL LOCK ASSEMBLY OVERHAUL        | 14          |
| F. DRIVE PINION ASSEMBLY OVERHAUL                              | 17          |
| G. BRAKE PEDAL LINKAGE AND CROSS-SHAFT                         | 20          |
| H. DIFFERENTIAL LOCK LINKAGE                                   | 21          |

#### **Chapter 2**

##### **HANDBRAKE**

| <b>Section</b>                           | <b>Page</b> |
|------------------------------------------|-------------|
| A. HANDBRAKE — DESCRIPTION AND OPERATION | 23          |
| B. HANDBRAKE — OVERHAUL                  | 23          |

#### **Chapter 3**

##### **SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>    | <b>Page</b> |
|-------------------|-------------|
| A. SPECIFICATIONS | 29          |
| B. SPECIAL TOOLS  | 30          |

# **PART 8**

## **STEERING AND FRONT AXLE**

### **Chapter 1**

#### **STEERING**

| <b>Section</b>                                | <b>Page</b> |
|-----------------------------------------------|-------------|
| A. STEERING — DESCRIPTION AND OPERATION ..... | 1           |
| B. COMPONENT REMOVAL AND INSTALLATION .....   | 4           |
| C. COMPONENT OVERHAUL .....                   | 8           |

### **Chapter 2**

#### **FRONT AXLE**

| <b>Section</b>                                  | <b>Page</b> |
|-------------------------------------------------|-------------|
| A. FRONT AXLE — DESCRIPTION AND OPERATION ..... | 25          |
| B. TOE-IN ADJUSTMENT .....                      | 25          |
| C. COMPONENT OVERHAUL .....                     | 27          |

### **Chapter 3**

#### **FRONT WHEEL DRIVE AXLE ASSEMBLY**

| <b>Section</b>                                                      | <b>Page</b> |
|---------------------------------------------------------------------|-------------|
| A. AXLE — DESCRIPTION AND OPERATION .....                           | 31          |
| B. FRONT WHEEL DRIVE AXLE —<br>REMOVAL AND INSTALLATION .....       | 31          |
| C. FINAL PLANETARY DRIVE AND WHEEL HUB BEARINGS —<br>OVERHAUL ..... | 33          |
| D. STEERING SWIVEL PIN BEARINGS —<br>OVERHAUL .....                 | 36          |
| E. AXLE SHAFTS — OVERHAUL .....                                     | 38          |
| F. DIFFERENTIAL — OVERHAUL .....                                    | 40          |
| G. TOE-IN ADJUSTMENTS .....                                         | 45          |

## Chapter 4

### TRANSFER GEAR ASSEMBLY FRONT WHEEL DRIVE AXLE

| Section                                                        | Page |
|----------------------------------------------------------------|------|
| A. TRANSFER GEAR ASSEMBLY —<br>DESCRIPTION AND OPERATION ..... | 47   |
| B. TRANSFER GEAR ASSEMBLY — OVERHAUL .....                     | 49   |
| C. DRIVE SHAFT — OVERHAUL .....                                | 54   |

## Chapter 5

### TROUBLE SHOOTING, SPECIFICATIONS AND SPECIAL TOOLS

| Section                                                   | Page |
|-----------------------------------------------------------|------|
| A. TROUBLE SHOOTING — STEERING .....                      | 55   |
| B. SPECIFICATIONS — STEERING .....                        | 56   |
| C. SPECIFICATIONS — TWO WHEEL DRIVE<br>FRONT AXLE .....   | 58   |
| D. SPECIFICATIONS — FRONT WHEEL DRIVE<br>FRONT AXLE ..... | 58   |
| E. SPECIFICATIONS — TRANSFER GEAR ASSEMBLY .....          | 58   |
| F. SPECIAL TOOLS .....                                    | 60   |

## PART 9 HYDRAULIC SYSTEM

### Chapter 1 DESCRIPTION AND OPERATIONS

| Section                                                                                      | Page |
|----------------------------------------------------------------------------------------------|------|
| 1. GENERAL INTRODUCTION .....                                                                | 1    |
| 2. STRUCTURAL MEMBERS .....                                                                  | 3    |
| 3. CYLINDERS .....                                                                           | 7    |
| 4. CONTROL VALVES .....                                                                      | 11   |
| A. LOADER CONTROL VALVE .....                                                                | 11   |
| B. BACKHOE MAIN CONTROL VALVE .....                                                          | 19   |
| (Model 555 Sectional)                                                                        |      |
| C. BACKHOE MAIN CONTROL VALVE .....                                                          | 29   |
| (Model 550 Sectional)                                                                        |      |
| D. BACKHOE MAIN CONTROL VALVE .....                                                          | 36   |
| (Model 550 Monoblock)                                                                        |      |
| E. BACKHOE COMBINATION VALVE .....                                                           | 43   |
| F. AUTOMATED BACKHOE CONTROL VALVE .....                                                     | 46   |
| 5. HYDRAULIC PUMP .....                                                                      | 51   |
| 6. MISCELLANEOUS - PUMP DRIVESHAFT, RESERVOIR, OIL COOLER,<br>FILTERS, HOSES AND TUBES ..... | 51   |

### Chapter 2 COMPONENT REMOVAL AND INSTALLATION

| Section                                                                         | Page |
|---------------------------------------------------------------------------------|------|
| 1. GENERAL .....                                                                | 55   |
| 2. LOADER BUCKET .....                                                          | 55   |
| 3. LOADER LIFT ARMS .....                                                       | 56   |
| 4. BACKHOE COUNTERWEIGHT OR BACKHOE .....                                       | 58   |
| 5. SUBFRAME .....                                                               | 65   |
| 6. LOADER CONTROL VALVE .....                                                   | 66   |
| 7. BACKHOE MAIN CONTROL VALVE .....                                             | 67   |
| 8. BACKHOE COMBINATION VALVE .....                                              | 71   |
| 9. AUTO-DIG CONTROLS .....                                                      | 71   |
| 10. CYLINDERS .....                                                             | 73   |
| 11. PUMP .....                                                                  | 78   |
| 12. MISCELLANEOUS — RESERVOIR, OIL COOLER, FILTER, AND<br>PUMP DRIVESHAFT ..... | 79   |
| 13. BACKHOE BUCKET .....                                                        | 81   |
| 14. STANDARD DIPSTICK .....                                                     | 82   |
| 15. EXTENDIBLE DIPSTICK .....                                                   | 82   |
| 16. BACKHOE BOOM .....                                                          | 84   |
| 17. BACKHOE SWING POST .....                                                    | 86   |
| 18. HOSES AND TUBES .....                                                       | 88   |

## Chapter 3 COMPONENT OVERHAUL

| Section                                                      | Page |
|--------------------------------------------------------------|------|
| 1. GENERAL .....                                             | 93   |
| 2. STRUCTURAL MEMBERS .....                                  | 94   |
| A. LOADER LIFT ARMS .....                                    | 94   |
| B. BACKHOE BUCKET .....                                      | 94   |
| C. BACKHOE DIPSTICK-STANDARD .....                           | 94   |
| D. BACKHOE DIPSTICK-EXTENDIBLE .....                         | 95   |
| E. BACKHOE BOOM .....                                        | 96   |
| F. BACKHOE SWING POST .....                                  | 97   |
| G. BACKHOE MAIN FRAME .....                                  | 98   |
| 3. CYLINDERS .....                                           | 99   |
| A. LOADER CYLINDERS .....                                    | 100  |
| B. BACKHOE CYLINDERS (Model 555) .....                       | 103  |
| C. BACKHOE CYLINDERS (Model 550) .....                       | 108  |
| 4. CONTROL VALVES .....                                      | 112  |
| A. LOADER CONTROL VALVE .....                                | 112  |
| B. BACKHOE MAIN CONTROL VALVE (Model 555) .....              | 118  |
| C. BACKHOE MAIN CONTROL VALVE<br>(Model 550-Monoblock) ..... | 127  |
| D. BACKHOE MAIN CONTROL<br>(Model 550-Sectional) .....       | 132  |
| E. BACKHOE COMBINATION VALVE .....                           | 137  |
| F. BACKHOE AUTO-DIG CONTROL VALVE AND CYLINDERS .....        | 139  |
| 5. HYDRAULIC PUMP .....                                      | 143  |

## Chapter 4 TROUBLE SHOOTING

| Section                 | Page |
|-------------------------|------|
| 1. GENERAL .....        | 149  |
| 2. LOADER .....         | 150  |
| 3. BACKHOE .....        | 151  |
| 4. HYDRAULIC PUMP ..... | 154  |

## Chapter 5

### PRESSURE TESTS AND ADJUSTMENTS

| Section                                               | Page |
|-------------------------------------------------------|------|
| 1. MECHANICAL ADJUSTMENTS .....                       | 155  |
| A. LOADER BUCKET LEVEL INDICATOR .....                | 155  |
| B. RETURN TO DIG SWITCH .....                         | 156  |
| C. CAM LEVER - SWING CONTROL (Model 550) .....        | 156  |
| D. AUTO-DIG BACKHOE CONTROL VALVE LINKAGE .....       | 157  |
| 2. PRESSURE TESTING .....                             | 157  |
| A. HYDRAULIC PUMP PERFORMANCE .....                   | 157  |
| B. LOADER CONTROL VALVE .....                         | 162  |
| C. LOADER CIRCUIT AND ACCUMULATIVE LEAKAGE TEST ..... | 165  |
| D. BACKHOE CONTROL — MAIN RELIEF VALVE .....          | 165  |
| Model 555 .....                                       | 165  |
| Model 550 (Monoblock) .....                           | 166  |
| Model 550 (Sectional) .....                           | 167  |
| E. CIRCUIT RELIEF VALVES .....                        | 168  |
| MODEL 555 .....                                       | 168  |
| MODEL 550 .....                                       | 169  |
| BUCKET CYLINDER .....                                 | 171  |
| LIFT CYLINDER .....                                   | 172  |
| CROWD CYLINDER .....                                  | 173  |
| EXTENDIBLE DIPSTICK .....                             | 174  |
| SWING RELIEF .....                                    | 175  |
| SWING CUSHIONING .....                                | 176  |
| BACKPRESSURE RELIEF AND UNLOAD VALVE .....            | 178  |
| MODEL 555 (Monoblock and Sectional) .....             | 179  |
| BUCKET CYLINDER .....                                 | 180  |
| LIFT CYLINDER .....                                   | 181  |
| CROWD CYLINDER .....                                  | 182  |
| SWING RELIEF (Sectional Valve) .....                  | 182  |
| SWING CUSHIONING (Sectional Valve) .....              | 184  |
| COMBINATION VALVE (Monoblock and Sectional) .....     | 184  |
| F. GENERAL HYDRAULIC TESTS .....                      | 184  |
| G. CIRCUIT AND ACCUMULATED LEAKAGE TEE TESTS .....    | 186  |

## Chapter 6

### SPECIFICATIONS AND SPECIAL TOOLS

| Section                 | Page |
|-------------------------|------|
| 1. SPECIFICATIONS ..... | 193  |
| 2. SPECIAL TOOLS .....  | 200  |

## **PART 10 SEPARATING THE UNIT**

### **Chapter 1 COMPONENT REMOVAL AND INSTALLATION**

| <b>Section</b>                           | <b>Page</b> |
|------------------------------------------|-------------|
| A. ENGINE REMOVAL AND INSTALLATION       | 1           |
| B. TRANSMISSION REMOVAL AND INSTALLATION | 9           |
| C. REAR AXLE REMOVAL AND INSTALLATION    | 12          |

### **Chapter 2 SPECIFICATIONS AND SPECIAL TOOLS**

| <b>Section</b>    | <b>Page</b> |
|-------------------|-------------|
| A. SPECIFICATIONS | 15          |
| B. SPECIAL TOOLS  | 16          |

# **PART 11**

## **CAB AND AIR CONDITIONING**

### **Chapter 1**

#### **CAB REMOVAL AND INSTALLATION**

| <b>Section</b>                  | <b>Page</b> |
|---------------------------------|-------------|
| A. CAB REMOVAL AND INSTALLATION | 1           |

### **Chapter 2**

#### **CAB HEATING SYSTEM**

| <b>Section</b>                                    | <b>Page</b> |
|---------------------------------------------------|-------------|
| A. CAB HEATING SYSTEM — DESCRIPTION AND OPERATION | 7           |
| B. CAB HEATING SYSTEM — OVERHAUL                  | 9           |

### **Chapter 3**

#### **AIR CONDITIONING SYSTEM**

| <b>Section</b>                                         | <b>Page</b> |
|--------------------------------------------------------|-------------|
| A. AIR CONDITIONING SYSTEM — DESCRIPTION AND OPERATION | 11          |
| B. AIR CONDITIONING SYSTEM — OVERHAUL                  | 20          |

### **Chapter 4**

#### **TROUBLE SHOOTING, SPECIFICATIONS AND TOOLS**

| <b>Section</b>                                | <b>Page</b> |
|-----------------------------------------------|-------------|
| A. AIR CONDITIONING SYSTEM — TROUBLE SHOOTING | 37          |
| B. CAB HEATING SYSTEM — TROUBLE SHOOTING      | 47          |
| C. SPECIFICATIONS                             | 47          |
| D. TOOLS                                      | 49          |

# NOTES

DealerNation@aol.com