





Bushings - Version with mechanical lift

Renewal

1. Position the lift housing under a press and, using a suitable tool, remove bushes (1).

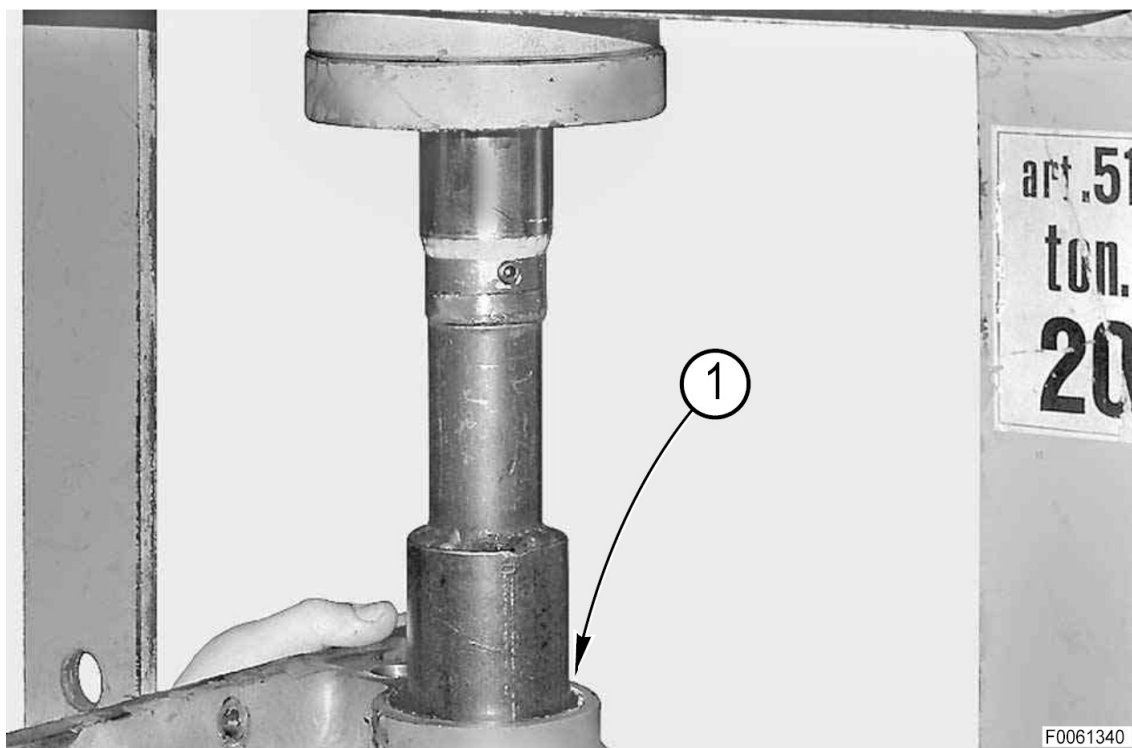


2. Install new bushes (1) making sure that they are inserted flush with the bores in the lift housing.

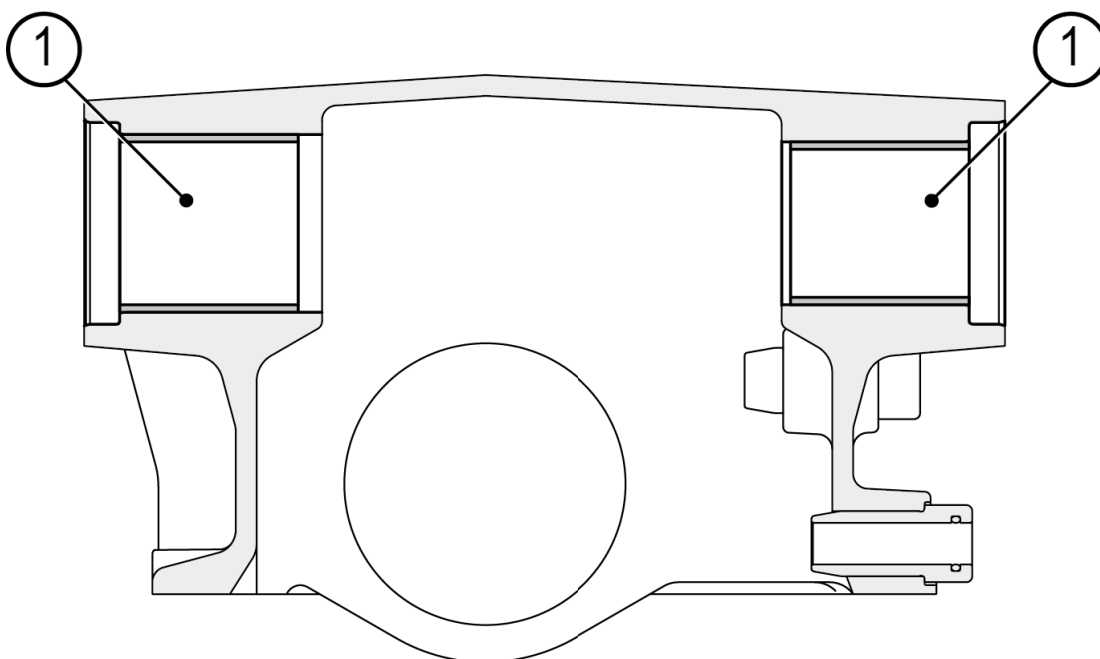

D0020851

3. • Install bushes (1) with the split oriented towards the top of the lift housing.

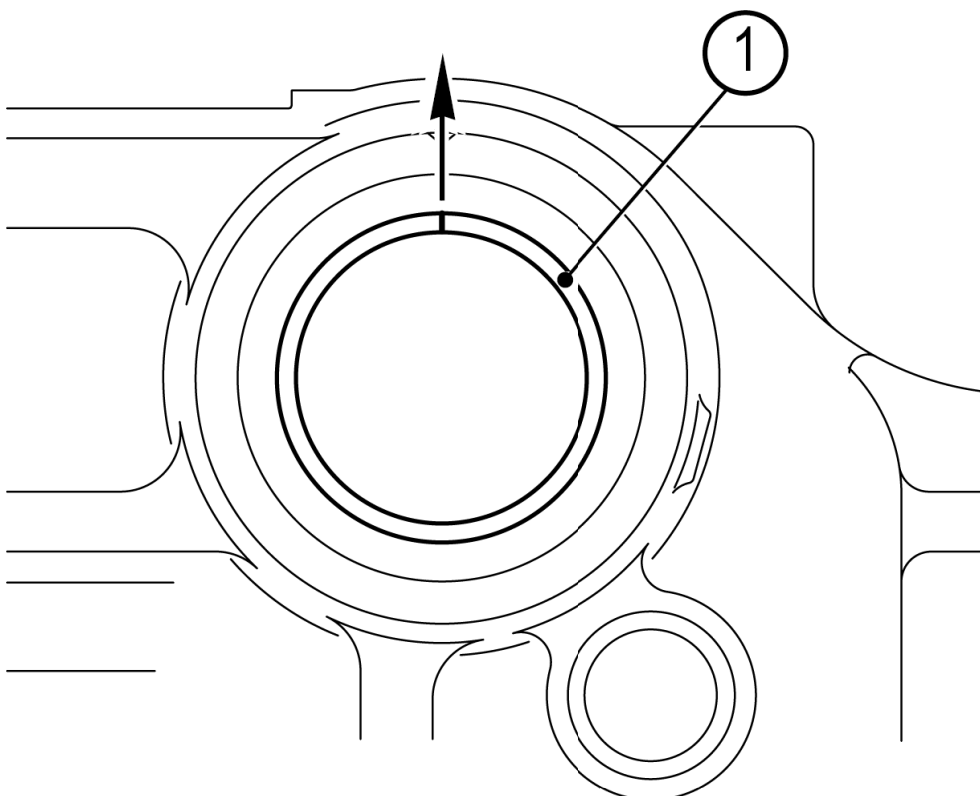

D0020870