


B. Assembling the Dyna-VT unit



CAUTION: Before reassembly, all components, mating faces and grooves must be clean. Any rust, mud or water must be removed.

58. Raise the transmission unit with a hoist, after securing it.
59. Move the range selector (Hare / Tortoise) (arrow (Fig. 34)) to "Neutral" (middle position).

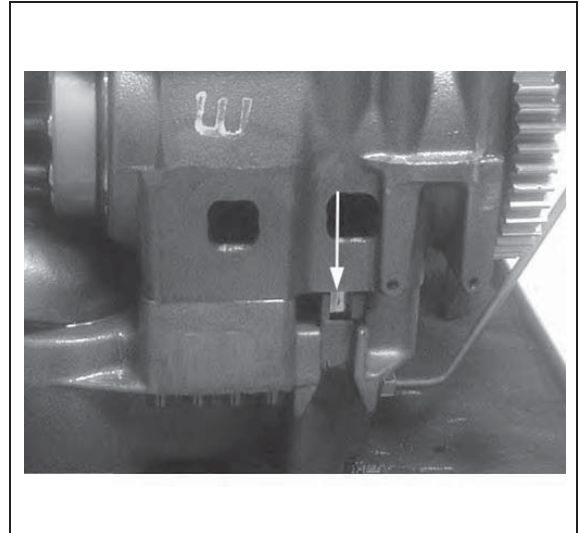

1008287

Fig. 34

60. Clean any oil or seal fragments from the transmission housing mating face.
61. Move the range selector finger (arrow (Fig. 35)) to "Neutral" (middle position).
- If necessary:



1008288

Fig. 35