

544G, 544G LL, and 544G TC Loaders 624G Loader 644G Loader (Serial No. 557739-)



JOHN DEERE

OPERATORS MANUAL

544G, 544G LL, and 544G TC Loaders 624G Loader
644G Loader (Serial No. 557739-)

OMT159816 Issue G6 English

John Deere Dubuque Works

OMT159816 Issue G6

(Mark old manual OMT154907 L4 for
machines up to Serial No. 557738)

LITHO IN U.S.A.
ENGLISH



Introduction



-UN-08SEP92

T7773CX

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these

numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

EMISSIONS CONTROL WARRANTY STATEMENT FOR NEW JOHN DEERE INDUSTRIAL EQUIPMENT (U.S. ONLY)

To determine if the engine in your machine qualifies for the additional warranties set forth below, look for the "Engine Information" label located on your engine. If you reside in the United States and the engine label states: "Engine conforms to US EPA regulations on heavy duty non road diesel cycle engines," you are entitled to the "U.S. Emission Control Warranty Statement." If you reside in California, and the engine label states: "Engine conforms to California regulations on heavy duty non road diesel cycle engines," you are entitled to the "California Emission Control Warranty Statement."

U.S. EMISSIONS CONTROL WARRANTY STATEMENT

Emissions control-related parts and components are warranted by John Deere for five years or 3000 hours of operation, whichever occurs first. John Deere further warrants that the engine covered by this warranty was designed, built, and equipped so as to conform at the time of sale with all U.S. emissions standards at the time of manufacture, and that it is free of defects in materials and workmanship which would cause it not to meet these standards within the period of five years or 3000 hours of operations, whichever occurs first.

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete machine warranty, less emissions-related parts and components, is provided separately as "John Deere "Secure Warranty" For New Industrial Products."

CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board (CARB) and John Deere are pleased to explain the emission control system on your new engine. In California, new heavy-duty engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenance of your machine.

Your emissions control system includes:

- Fuel Metering System
 - Fuel Injection System
- Air Induction System
 - Intake Manifold
 - Turbocharger System
 - Charge Air Cooling System

Miscellaneous Items used in Above Systems

Where a warrantable condition exists, i.e. failure due to defect in John Deere-supplied material and/or workmanship, John Deere will repair your heavy-duty engine at no cost to you including diagnosis, parts and labor.

JOHN DEERE'S WARRANTY COVERAGE:

The emission control system of your heavy-duty engine is warranted for five years or 3000 hours of operation, whichever occurs first. If any emission-related part on your engine is defective, the part will be repaired or replaced by John Deere. Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete machine warranty, less emissions-related parts and components, is provided separately as the "John Deere "Secure Warranty" For New Industrial Products."

OWNER'S WARRANTY RESPONSIBILITIES:

As the heavy-duty engine owner, you are responsible for the performance of the required maintenance as outlined in the

Operator's Manual. John Deere recommends that you retain all receipts covering maintenance on your heavy-duty engine, but John Deere cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

However, as the heavy-duty engine owner, you should be aware that John Deere may deny you warranty coverage if your heavy-duty engine has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with California's emissions requirements.

You are responsible for initiating the warranty process. The CARB suggests that you present your machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the service dealer as expeditiously as possible.

If you have any questions regarding your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

The warranty period begins on the date the machine is delivered to an ultimate purchaser, or when otherwise put into service. John Deere warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform with all applicable regulations adopted by the Air Resources Board, and that it is free from defects in materials and workmanship which would cause the failure of a warranted part.

Any warranted part which is scheduled for replacement as required maintenance by the operator's manual is warranted by John Deere for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement point, the part shall be repaired or replaced under the warranty. Any such part repaired or replaced under warranty is warranted for the remainder of the period prior to the first scheduled replacement point for that part.

Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of repairing or replacing as necessary, is warranted for the warranty period.

Repair or replacement of a warranted part will be performed at no charge to you by an authorized John Deere dealer. You will not be charged for diagnostic labor which leads to the determination that a warranted part is defective, if the diagnostic work is performed by a John Deere dealer.

John Deere is liable for damages to other engine components caused by failure under warranty of any warranted part.

Any replacement part may be used in the performance of any maintenance or repairs, and such use will not reduce the warranty obligations of John Deere. However, the use of add-on or modified parts are grounds for disallowing a warranty claim.

Introduction



-UN-08SEP92

T7779CY



-UN-08SEP92

T7779CZ



-JUN-06OCT92

 
T7799CY



-JUN-06OCT92

T7799CZ

HELP!!



Contents

	Page		Page
Safety	05-1	Heating and Air Conditioning Controls	10-18
Safety Signs	06-1	Adjusting Suspension Seat	10-19
Operator's Station		Seat Belt	10-20
Gauges, Indicators, Switches, and		Storage Compartment	10-20
Accessories	10-1	Break-in	
Stop Indicator and Alarm	10-3	Engine Break-In Oil	15-1
Service Required Indicator (Yellow)	10-4	Every 10 Hours or Daily	15-1
Digital Display	10-4	After First 10 and First 50 Hours	15-2
Engine Coolant Temperature Gauge	10-5	After the First 100 Hours	15-2
Fuel Gauge	10-5	Pre-Start Inspection	
Transmission Oil Temperature Gauge	10-5	Inspect Machine Daily Before Starting	20-1
Engine Oil Pressure Indicator	10-6	Operating the Engine	
Alternator Voltage Indicator	10-6	Check Instruments Before Starting	25-1
Engine Air Filter Restriction Indicator	10-6	Brake Pressure Indicator	25-1
Engine Coolant Level Indicator	10-7	Starting the Engine	25-1
Transmission Oil Pressure Indicator—If		Starting Fluid—If Equipped (Cold Weather	
Equipped	10-7	Starting Aid)	25-4
Hydraulic Oil Filter Restriction Indicator	10-7	Using Coolant Heater—If Equipped	25-5
Right Turn Signal Indicator	10-8	Using Booster Batteries—12 Volt System	25-6
Brake Oil Pressure Indicator	10-8	Check Instruments After Starting	25-7
Park Brake Indicator	10-8	Warm-Up	25-7
Fasten Seat Belt Indicator	10-9	Cold Weather Warm-Up	25-8
Ether Injection Indicator	10-9	Stopping the Engine	25-8
Steering Pressure Indicator—If Equipped	10-9	Driving the Machine	
Left Turn Signal Indicator	10-10	Driving on Public Roads	30-1
Levers	10-10	General Driving Precautions	30-2
Front Axle Disconnect Lever—If Equipped	10-11	Front Axle Disconnect—If Equipped	30-2
Pedals	10-12	Neutral Lock	30-3
Park Brake Switch	10-12	Shifting the Transmission	30-3
Neutral Lock	10-13	Travel Speeds	30-5
Horn Button	10-13	Ride Control Switch—If Equipped	30-6
Turn Signal Switch	10-14	Stopping the Machine	30-6
Dome Light and Swivel Light—If Equipped	10-14	Park Brake Switch	30-7
Vandal Shield—If Equipped	10-14	Parking the Machine	30-7
Operating Windshield Wipers and		Operating the Machine	
Washers—If Equipped	10-15		
Adjusting Steering Wheel Tilt	10-15		
Opening Side Window	10-15		
Opening Sliding Side Window—If Equipped	10-16		
Cab Door Release	10-16		
Operating Lights	10-17		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1996
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual