

Part 1 Safety		Part 3 Inspections, maintenance work and troubleshooting	
1 Repair work (complete vehicle)	1-7	1 Complete vehicle	3-7
2 Engine	1-9	1.1 Inspection log.	3-7
3 Hydraulic system	1-11	2 Engine	3-9
4 Drive and axles	1-13	2.1 Checking and adjusting the valve play.	3-9
5 Brake system	1-15	2.2 Inspecting the exhaust system for leaks.	3-11
6 Vehicle frame and load arm	1-17	2.3 Checking the radiator installation.	3-12
7 Electrical system.	1-19	2.4 Inspect the radiator for leaks.	3-13
Part 2 Technical data, testing equipment and special tools		2.5 Troubleshooting on the engine.	3-14
1 Technical data	2-7	3 Hydraulic system.	3-17
2 Filling quantities	2-9	3.1 Checking and adjusting the starting speed.	3-17
3 Tightening torques	2-11	3.2 Checking and adjusting the inching pedal.	3-17
4 Pressure values	2-13	3.3 Checking and adjusting the pressure cut-off.	3-18
5 Flow rates.	2-15	3.4 Adjusting the driving speed.	3-19
6 Safety stickers	2-17	3.5 Checking the variable displacement pump supply pressure.	3-20
7 Testing equipment	2-23	3.6 Checking the variable displacement pump high pressure.	3-21
7.1 Test pressure gauge.	2-23	3.7 Checking the variable displacement pump positioning pressure.	3-23
7.2 Flow meter	2-23	3.8 Checking and adjusting the control commencement of the variable displacement motor.	3-24
7.3 Test pump.	2-24	3.9 Testing the steering hydraulics.	3-25
8 Special tools	2-25	3.10 Checking the gear pump.	3-27
8.1 Insertion tool.	2-25	3.11 Checking the control valve function.	3-29
8.2 Sealing plate (2 x).	2-25	3.12 Troubleshooting on the hydraulic system.	3-30
8.3 Expulsion and driving sleeves.	2-25	4 Drive and axles	3-33
8.4 Driving bolts.	2-26	4.1 Inspecting the differential lock.	3-33
8.5 Electrical contact key.	2-27	4.2 Checking the water filling of the wheels.	3-34
8.6 Generator tester.	2-27	4.3 Troubleshooting on the drive.	3-35
8.7 Half-shells and pull-off fixture.	2-28	5 Vehicle frame and load arm.	3-37
9 Hose book	2-29	5.1 Checking and adjusting the curling to load and dumping stops.	3-37
		6 Cab.	3-39
		6.1 Checking the heater.	3-39
		6.2 Troubleshooting in the cab.	3-40

7	Electrical system	3-41		
7.1	Checking the generator	3-41	3.2.1	Replacing the variable displacement pump
7.2	Checking the temperature sensors	3-41	3.2.2	Replacing the clutch hub
7.3	Testing the belt buckle circuit	3-42	3.2.3	Replacing the annular shaft seal of the variable displacement pump
7.4	Testing the fuel level sensor	3-43	3.2.4	Replacing the variable displacement motor
7.5	Troubleshooting on the electrical system	3-44	3.3	Steering hydraulics
Part 4 Replacement and repair procedures			3.3.1	Cleaning the priority valve
1	Complete vehicle	4-9	3.3.2	Replacing the priority valve
1.1	Helpful tips	4-9	3.3.3	Replacing the orbital steering valve
1.2	Replacing protective stickers	4-9	3.3.4	Removing the steering cylinder
2	Engine	4-11	3.3.5	Installing the steering cylinder
2.1	Engine (as supplied)	4-11	3.4	Brake hydraulics
2.1.1	Engine removal	4-11	3.4.1	Replacing the main brake cylinder
2.1.2	Engine installation	4-13	3.4.2	Replacing the brake hydraulics tank
2.1.3	Replacing the front rubber buffers	4-16	3.4.3	Replacing the brake fluid
2.1.4	Replacing the rear rubber buffer	4-17	3.4.4	Venting the brake hydraulics
2.1.5	Replacing the clutch PA flange	4-18	3.5	Working hydraulics
2.1.6	Cleaning the engine (after toppling the loader)	4-19	3.5.1	Replacing the gear pump
2.2	Radiator	4-21	3.5.2	Sealing the gear pump
2.2.1	Removing the radiator	4-21	3.5.3	Removing the control valve
2.2.2	Installing the radiator	4-22	3.5.4	Installing the control valve
2.3	Air filter system	4-25	3.5.5	Sealing the control valve
2.3.1	Replacing the complete air filter	4-25	3.5.6	Installing the catch on the control valve
2.3.2	Replacing the air filter housing	4-26	3.5.7	Replacing the cross controller
2.4	Fuel system	4-27	3.5.8	Replacing the lifting cylinder
2.4.1	Replacing the complete fuel filter	4-27	3.5.9	Removing the tipping cylinder
2.4.2	Replacing the complete main fuel filter	4-28	3.5.10	Installing the tipping cylinder
2.4.3	Replacing the water separator	4-29	3.5.11	Replacing the rod-end bearing of the tipping cylinder
2.4.4	Replacing the fuel feed pump	4-30	3.6	Auxiliary hydraulics and hydraulic lock
2.4.5	Replacing the fuel line	4-31	3.6.1	Replacing the cover of the auxiliary hydraulics
2.4.6	Tank lock emergency opening	4-32	3.6.2	Replacing the control lever and cover of the auxiliary hydraulics
2.5	Exhaust system	4-33	3.6.3	Replacing the locking cylinder
2.5.1	Replacing the flue	4-33	3.7	Tank, filter and hydraulic lines
2.5.2	Replacing the muffler and flexi-pipe	4-33	3.7.1	Replacing the hydraulic fluid tank
3	Hydraulic system	4-37	3.7.2	Replacing the complete return filter
3.1	Complete vehicle	4-37	3.7.3	Replacing the pressure filter
3.1.1	Depressurizing the hydraulic system	4-37	3.7.4	Replacing the hydraulic line
3.1.2	Replacing the pivot bearing on the hydraulic cylinder	4-37	4	Drive and axles
3.1.3	Sealing the hydraulic cylinder	4-38	4.1	Replacing the drive shaft
3.2	Driving hydraulics	4-42	4.2	Front axle
			4.2.1	Removing the front axle
			4.2.2	Installing the front axle



4.3	Rear axle	4-91	6.6.1	Replacing the tool attachment	4-133
4.3.1	Removing the rear axle	4-91	6.6.2	Replacing the locking pin	4-134
4.3.2	Installing the rear axle	4-93	6.6.3	Replacing the lock of the tool attachment (US)	4-135
4.4	Changing the wheel of the twin tires	4-95			
5	Brake system (mechanical section)	4-97	7	Operator's platform and cab	4-137
5.1	Service brake	4-97	7.1	Seat	4-137
5.1.1	Replacing the brake shoes	4-97	7.1.1	Replacing the driver's seat	4-137
5.1.2	Replacing the brake drum	4-98	7.1.2	Replacing the complete seat belt	4-138
5.2	Parking brake	4-99	7.1.3	Replacing the belt buckle	4-138
5.2.1	Replacing the Bowden cable of the parking brake	4-99	7.2	ROPS bar and driver's canopy . . .	4-139
			7.2.1	Replacing the ROPS bar	4-139
			7.2.2	Replacing the driver's canopy	4-139
			7.2.3	Replacing the lower section of the ROPS bar/driver's canopy	4-141
6	Vehicle frame and load arm	4-103	7.2.4	Replacing the document compartment	4-142
6.1	Front carriage	4-103	7.2.5	Replacing the storage compartment	4-143
6.1.1	Replacing the front fender	4-103	7.3	Cab	4-144
6.2	Rear carriage and engine hood . . .	4-103	7.3.1	Removing the complete cab	4-144
6.2.1	Replacing the rear fender	4-103	7.3.2	Installing the complete cab	4-146
6.2.2	Replacing the additional weight/base plate	4-104	7.3.3	Replacing the windshield wiper arms	4-149
6.2.3	Replacing the rear weight	4-105	7.3.4	Replacing the windshield washer container	4-150
6.2.4	Replacing the engine hood	4-107	7.3.5	Replacing the door lock	4-151
6.2.5	Replacing the lock of the engine hood	4-108	7.3.6	Replacing the door stay	4-152
6.2.6	Emergency release of the engine hood	4-109	7.3.7	Replacing the complete door	4-153
6.3	Center joint	4-109	7.3.8	Replacing the roof grille of the cab	4-154
6.3.1	Detaching the center joint	4-109	7.3.9	Replacing the window and the rubber clamping profile	4-154
6.3.2	Connecting the center joint	4-111	7.3.10	Replacing a bonded-in window . . .	4-156
6.3.3	Replacing the bearing in the self-aligning bearing	4-115	7.3.11	Replacing the complete heater . . .	4-158
6.3.4	Replacing the lower bearing	4-116	7.4	Steering column	4-159
6.4	Step plate and insulation mats . . .	4-117	7.4.1	Replacing the instrument steering column	4-159
6.4.1	Removing the operator's platform	4-117	7.4.2	Replacing the steering wheel	4-161
6.4.2	Installing the operator's platform	4-120			
6.4.3	Replacing the rubber buffer of the step plate	4-123	8	Electrical system	4-163
6.4.4	Replacing the insulation mat	4-124	8.1	Generator, battery and motors . . .	4-163
6.5	Load arm	4-125	8.1.1	Replacing the generator	4-163
6.5.1	Replacing the complete load arm	4-125	8.1.2	Replacing the starter	4-164
6.5.2	Replacing the bearings of the short drawbar	4-127	8.1.3	Replacing the rear windshield wiper motor	4-165
6.5.3	Replacing the bearings of the short reversing lever	4-128	8.1.4	Replacing the front windshield wiper motor	4-166
6.5.4	Replacing the bearings of the long reversing lever	4-129	8.2	Switches and sensors	4-167
6.5.5	Replacing the upper bearing of the long drawbar	4-131	8.2.1	Replacing the switches in the instrument panel	4-167
6.5.6	Replacing the lower bearing of the long drawbar	4-132	8.2.2	Replacing the combination switch	4-168
6.6	Tool attachment	4-133	8.2.3	Replacing the glow-plug indicator	4-168

8.2.4	Replacing the switches in the cab	4-169
8.2.5	Replacing the ignition lock	4-170
8.2.6	Replacing the battery disconnect switch	4-171
8.2.7	Replacing the parking brake switch	4-172
8.2.8	Replacing the return filter overpressure switch	4-173
8.2.9	Replacing the engine temperature sensor	4-174
8.2.10	Replacing the temperature sensor of the hydraulic fluid tank	4-175
8.2.11	Replacing the fuel level sensor . . .	4-176
8.3	Relays, coils and fuses	4-177
8.3.1	Replacing the relays	4-177
8.3.2	Replacing the solenoid valve drives on the variable displacement motor	4-177
8.3.3	Replacing the solenoid valve of the variable displacement pump	4-178
8.3.4	Replacing the coil on the variable displacement pump	4-179
8.4	Indicator lamps, audible warning generators and instruments	4-180
8.4.1	Replacing the indicator lamp in the instrument panel.	4-180
8.4.2	Replacing the instrument lights . . .	4-181
8.4.3	Replacing the horn	4-182
8.4.4	Replacing the audible warning generator	4-183
8.4.5	Replacing the engine-hour indicator	4-183
8.5	Lighting system	4-185
8.5.1	Replacing a complete headlamp with indicator	4-185
8.5.2	Replacing a complete tail lamp . . .	4-185
8.5.3	Replacing the headlight	4-186
9	Attachments	4-189
9.1	Replacing the earth bucket digging tooth	4-189

Part 5	Circuit diagrams and technical descriptions
1	Hydraulic circuit diagram 5-7
2	Electrical circuit diagram 5-9
3	Plug assignments / contact assignments 5-19
4	Technical description 5-21
Part 6	Supplier service manuals
1	Engine workshop manual (example) 6-7
2	Variable displ. pump repair instructions (example) 6-9
3	Variable displ. motor repair instructions (example) 6-11
4	Planetary axle workshop manual (example) 6-13

A

- Additional weight
 - Replacement 4-104
- Air filter
 - Replacing complete 4-25
 - Replacing the housing 4-26
- Alternator
 - See generator 4-163
- Annular shaft seal, replacement
 - Variable displacement pump 4-45
- Assignment
 - Combination switch 5-19
 - Ignition lock 5-19
 - Multi-function lever 5-19
 - Windshield wiper switch 5-19
- Audible warning generator
 - Replacing 4-183
- Auxiliary hydraulics
 - Replacing the cover 4-77
- Axles
 - Safety instructions 1-13

B

- Base plate
 - Replacement 4-104
- Battery disconnect switch
 - Replacing 4-171
- Bearings, replacing
 - Drawbar, long 4-131, 4-132
 - Drawbar, short 4-127
 - Lower bearing 4-116
 - Reversing lever, long 4-129
 - Reversing lever, short 4-128
 - Self-aligning bearing 4-115
- Belt buckle
 - Replacing 4-138
- Belt buckle circuit
 - Testing 3-42
- Brake cylinder
 - see Main brake cylinder 4-55
- Brake drum
 - Replacing 4-98
- Brake fluid
 - Changing 4-57
- Brake hydraulics
 - Replacing the tank 4-56
 - Venting 4-58
- Brake shoes
 - Replacing 4-97
- Brake system
 - Safety instructions 1-15

C

- Cab
 - Removing complete 4-144, 4-146
 - Switches, replacing 4-169
- Cardan shaft
 - see Drive shaft 4-85
- Center joint
 - Connecting 4-111
 - Detaching 4-109
- Circuit diagram
 - Electrical circuit diagram 5-9
 - Hydraulic circuit diagram 5-7
- Cleanliness 4-9
- Clutch hub
 - Replacing 4-44
- Clutch PA flange
 - Replacing 4-18
- Combination switch
 - Replacing 4-168
- Contact assignment 5-19
- Control valve
 - Checking the function 3-29
 - Installing 4-64
 - Installing the catch 4-70
 - Removing 4-63
 - Sealing 4-66
- Cover, replacing
 - Auxiliary hydraulics control lever 4-78
- Cross controller
 - Replacing 4-70
- Curling to load stop
 - Checking and adjusting 3-37

D

- Depressurize the hydraulic system 4-37
- Description
 - see Technical description 5-21
- Differential lock
 - Inspecting 3-33
- Digging tooth, replacing
 - Earth bucket 4-189
- Document compartment
 - Replacing 4-142
- Door
 - Replacing complete 4-153
- Door lock
 - Replacing 4-151
- Door stay
 - Replacing 4-152

Drawbar, long
 Lower bearing, replacing 4-132
 Upper bearing, replacing 4-131
Drawbar, short
 Replacing the bearings 4-127
Drive
 Safety instructions 1-13
Drive shaft
 Disassembling 4-85
 Replacing 4-85
 Temporary securing 4-86
Driver's canopy
 Lower section, replacing 4-141
 Replacing 4-139
Driver's seat
 Replacing 4-137
Driving bolts 2-26
Driving motor
 see Variable displacement motor 4-45
Driving sleeve 2-25
Driving speed
 Adjusting 3-19
Dumping stop
 Checking and adjusting 3-37

E

Electrical circuit diagram 5-9
Electrical contact key 2-27
Electrical system
 Safety instructions 1-19
Engine
 Cleaning after toppling 4-19
 Installation 4-13
 Removal 4-11
 Safety instructions 1-9
 Temperature sensor, replacement 4-174
 Troubleshooting 3-14
 Workshop manual (example) 6-7
Engine hood
 Emergency release 4-109
 Replacing 4-107
 Replacing the lock 4-108
Engine temperature gauge, replacing
 see Engine-hour indicator, replacing ... 4-183
Engine-hour indicator
 Replacing 4-183
Exhaust system
 Inspecting for leaks 3-11
Expulsion sleeve 2-25

F

Fender
 Replacing front 4-103
 Replacing rear 4-103
Flow meter 2-23
Flow rates 2-15
Flue
 Replacing 4-33
Front axle
 Installing 4-88
 Relieving the load 4-87
 Removing 4-86
Fuel feed pump
 Replacing 4-30
Fuel filter
 Replacing complete 4-27
Fuel level sensor
 Replacing 4-176
 Testing 3-43
Fuel tank gauge, replacing
 see Engine-hour indicator, replacing ... 4-183

G

Gear pump
 Checking 3-27
 Replacing 4-59
 Sealing 4-61
Generator
 Checking 3-41
 Replacing 4-163
Generator tester 2-27
Glow-plug indicator
 Replacing 4-168

H

Half-shells and pull-off fixture 2-28
Handbrake
 see Parking brake 4-99
Headlamp
 Replacing complete 4-185
Headlight
 Replacing 4-186
Heater
 Checking 3-39
 Replacing complete 4-158
High pressure, checking
 Variable displacement pump 3-21
Horn
 Replacing 4-182
 see Audible warning generator 4-183

Hose book	2-29
Hydraulic circuit diagram	5-7
Hydraulic cylinder	
Sealing	4-38
Hydraulic fluid tank	
Replacing	4-80
Temperature sensor, replacement	4-175
Hydraulic line	
Replacing	4-84
Hydraulic motor	
see Variable displacement motor	4-45
Hydraulic pump	
see Gear pump	4-59
see Variable displacement pump	4-42
Hydraulic system	
Safety instructions	1-11

I

Ignition lock	
Replacing	4-170
Inching pedal	
Checking and adjusting	3-17
Indicator lamp	
Replacing	4-180
Insertion tool	2-25
Instrument lights	
Replacing	4-181
Instrument panel	
Switches, replacing	4-167
Instrument steering column	
Replacing	4-159
Insulation mat	
Replacing	4-124

L

Lifting cylinder	
Installing	4-72
Removing	4-72
Replacing	4-71
Load arm	
Replacing complete	4-125
Safety instructions	1-17
Locking agent	4-9
Locking cylinder	
Replacement	4-79
Locking pin	
Replacing	4-134
Lower bearing	
Replacing	4-116

M

Main brake cylinder	
Replacing	4-55
Main fuel filter	
Replacing complete	4-28
Muffler	
Replacing	4-33

O

Operator's platform	
Installing	4-120
Removing	4-117
Orbital steering valve	
Replacing	4-51
Overpressure switch, replacing	
Return filter	4-173

P

Parking brake	
Fitting the Bowden cable	4-89, 4-100
Removing the Bowden cable	4-87, 4-100
Replacing the Bowden cable	4-99
Switch, replacing	4-172
Pivot bearing	
Replacing	4-37
Planetary axle	
Workshop manual (example)	6-13
Plug assignment	5-19
Positioning pressure, checking	
Variable displacement pump	3-23
Pressure cut-off	
Checking and adjusting	3-18
Pressure filter	
Replacing	4-83
Pressure value	
Variable displacement pump and	
variable displacement motor	2-13
Priority valve	
Cleaning	4-48
Replacing	4-50
Protective stickers	
Replacement	4-9

R

Radiator	
Checking installation	3-12
Inspecting for leaks	3-13
Installation	4-22
Removing	4-21