




DESCRIPTION AND OPERATION

Powertrain LH and RH definition

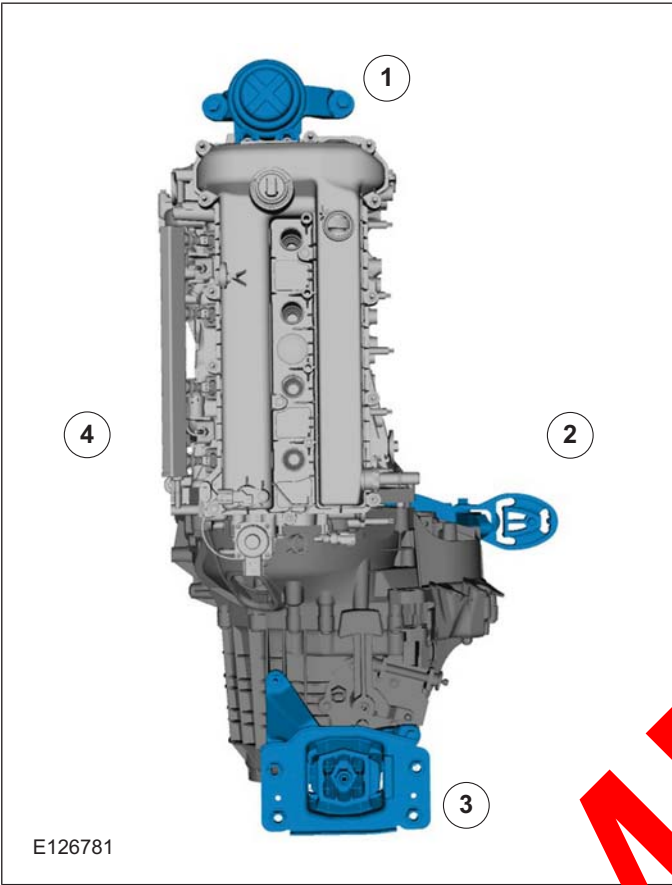

E126781

Item	Description
1	front
2	right hand
3	rear
4	left hand

How to use Repair Procedures

This manual has been written in a format that is designed to meet the needs of technicians worldwide. It provides general descriptions for accomplishing repair work with tested and effective techniques.

Important Safety Instructions

Appropriate service methods and correct repair procedures are essential for the safe and reliable operation of all vehicles as well as the personal safety of the individual carrying out the work.

Anyone who departs from the instructions provided in this manual must first establish that personal

safety or vehicle integrity is not compromised by the choice of method, tools or components.

Warnings, Cautions and Notes in This Manual

- WARNING:** Warnings are used to indicate that failure to follow a procedure correctly may result in personal injury.
- CAUTION:** Cautions are used to indicate that failure to follow a procedure correctly may result in damage to the vehicle or equipment being used.

NOTE: Notes are used to provide additional essential information required to carry out a complete and satisfactory repair.

Generic warnings or cautions are in their relevant description and operation procedure within section 1. If the generic warnings or cautions are required for a procedure, there will be a referral to the appropriate description and operation procedure.

If a warning, caution or note only applies to one step, it is placed at the beginning of the specific step.

Global Authoring Standards (GAS) Repair Procedures

NOTE: GAS style procedures can be identified by steps that have no accompanying step text and the magenta color of the electrical connectors and fasteners such as nuts, bolts, clamps or clips.

A GAS removal and installation procedure uses a sequence of color illustrations to indicate the order to be followed when removing/disassembling or installing/assembling a component.

Many of the GAS procedures will have the installation information within the removal steps. These procedures will have the following note at the beginning of the procedure:

NOTE: Removal steps in this procedure may contain installation details.


Reuse of fasteners and seals and gaskets

The following list details the general policy for the reuse of fasteners and seals and gaskets.





REMOVAL AND INSTALLATION

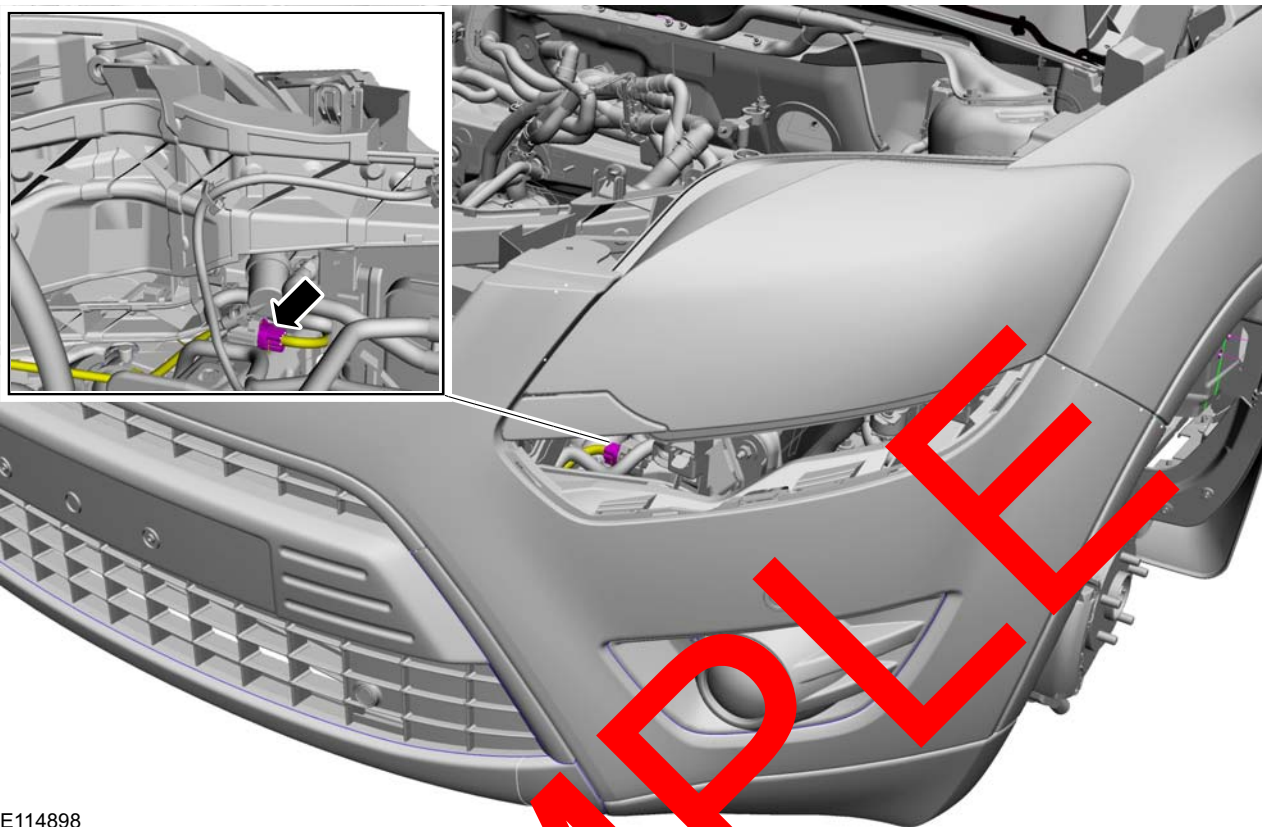

E114898

All vehicles

11.

SAMPLE

