

CHAPTER REFERENCES REGARDING THIS WORKSHOP MANUAL

Use this chart to the appropriate chapter numbers for servicing your particular vehicle.

CHAPTER	MANUAL NO.	S5-YJ08E29E		
	MODEL	J08E-TI		
GENERAL INTRODUCTION	GN01-001			
ENGINE INTRODUCTION	EN01-001			
ENGINE MECHANICAL	EN02-001			
AIR INTAKE SYSTEM	EN03-001			
EXHAUST SYSTEM	EN04-001			
LUBRICATING SYSTEM	EN05-001			
COOLING SYSTEM	EN06-001			
FUEL SYSTEM	EN07-001			
TURBOCHARGER	EN08-001 (VARIABLE NOZZLE TURBINE TYPE)		EN08-002 (WASTE GATE VALVE TYPE)	
FUEL INJECTION PUMP	EN09-001			
EMISSION CONTROL	EN10-001			
ALTERNATOR	EN11-001 (24V-50A)	EN11-002 (24V-60A)	EN11-003 (24V-90A)	
STARTER	EN12-001 (24V, 4.5 kW)		EN12-002 (24V, 5.0 kW)	
AIR COMPRESSOR	EN13-001 (154 cm ³)	EN13-002 (227 cm ³)	EN13-003 (271 cm ³)	EN13-004 (271 cm ³ x 2 CYLINDERS)
ENGINE P.T.O. (POWER TAKE-OFF)	EN14-001			
ENGINE CONTROL	EN16-001			
FUEL CONTROL	DN02-001			

HINO

WORKSHOP MANUAL

INDEX: ENGINE GROUP 1/2

GENERAL INTRODUCTION

ENGINE INTRODUCTION

ENGINE MECHANICAL

AIR INTAKE SYSTEM

EXHAUST SYSTEM

LUBRICATING SYSTEM

COOLING SYSTEM

FUEL SYSTEM

TURBOCHARGER

FUEL INJECTION PUMP

EMISSION CONTROL

ALTERNATOR

STARTER

AIR COMPRESSOR

ENGINE P.T.O.
(POWER TAKE-OFF)

ENGINE RETARDER

ENGINE CONTROL

Hino Motors, Ltd.

All rights reserved. This manual may not be reproduced or copied in whole in part, without the written consent of Hino Motors, Ltd.

ENGINE CONTROL

FUEL CONTROL

BRAKE CONTROL

SUSPENSION CONTROL

CAB EQUIPMENT CONTROL

OTHERS