

Contents

1.	Introduction and safety precautions	3	6.	Ignition system	39	7.	M-Tronic	58
1.1	Introduction	3	6.1	Ignition timing	39	7.1	Calibrating the control unit	58
1.2	Safety precautions	4	6.2	Ignition module	39	7.2	Resetting the control unit to factory defaults	58
			6.2.1	Control unit (ignition module) M-Tronic	41	7.3	Testing	58
2.	Specifications	5	6.3	Testing the ignition module	42	7.3.1	Test preparations	58
2.1	Engine	5	6.4	Spark plug boot / ignition lead	43	7.3.2	Connect the test lead	58
2.2	Fuel system	5	6.5	Flywheel	45	7.3.3	Check screwed and plug connections as well as switch	59
2.3	Ignition system	5	6.6	Short circuit wire	45	7.3.4	Checking the solenoid valve	59
2.4	Gearbox	5	6.6.1	Testing	45	7.3.5	Checking the start detection function	60
2.5	Tightening torques	6	6.6.2	Short circuit wire on engine, removal and installation	46	7.3.6	Checking the wiring harness	60
3.	Troubleshooting	8	6.6.3	Short circuit wire with M-Tronic on engine, removal and installation	48	7.4	Removal and installation	62
3.1	Clutch	8	6.6.4	Short circuit wire on control handle for loop handle, removal and installation	51	7.5	Troubleshooting, M-Tronic	65
3.2	Gearbox	9				7.5.1	Engine does not start	65
3.3	Drive tube assembly	10				7.5.2	Engine does not start in position ▲	66
3.4	Starter	11				7.5.3	Engine speed drops under load – low power	67
3.5	Ignition system	13				7.5.4	Ignition – no ignition spark	68
3.6	Carburetor	14				7.5.5	Engine stops suddenly	69
3.7	Engine	18				7.5.6	Cut-off speed not reached	70
4.	Clutch	19	6.6.5	Short circuit wire on control handle for bike handle, removal and installation	52			
4.1	Clutch drum	19						
4.1.1	Ball bearing	22	6.6.6	Ground wire	54			
4.2	Clutch	23	6.6.7	Contact spring versions with control handle for bike handle	54			
5.	Engine	25	6.7	Troubleshooting, Ignition System	55	8.	Rewind starter	71
5.1	Muffler	25				8.1	General	71
5.2	Leak testing	26				8.2	Starter	71
5.2.1	Preparations	26				8.3	Pawls	71
5.2.2	Vacuum test	27				8.4	ErgoStart/rope rotor	72
5.2.3	Pressure test	27				8.5	Starter rope / starter grip	73
5.3	Oil seals	28				8.6	Tensioning the rewind spring	75
5.4	Shroud	29				8.7	Replacing the rewind spring	75
5.5	Cylinder	30						
5.6	Crankshaft	32						
5.6.1	Ball bearing / crankcase	35						
5.7	Piston	36						
5.8	Piston rings	38						

STIHL®

© ANDREAS STIHL AG & Co. KG, 2011

Contents

9.	Antivibration elements	77	11.	Fuel system	91	12.	Drive tube assembly	112
9.1	Rubber insert		11.1	Air filter	91	12.1	Drive tube assembly with loop handle	112
	1-point antivibration system	77	11.2	Filter housing	91	12.2	Drive tube assembly with control handle for bike handle	113
9.2	Rubber buffers/springs 4-point antivibration system	78	11.3	Carburetor	93	12.2.1	Disassembling the drive tube assembly with a diameter of 25.4 mm	114
			11.3.1	Leakage test	95	12.2.2	Disassembling the drive tube assembly with a diameter of 28 mm	116
10.	Actuating levers	82	11.4	Repairing the carburetor	96	12.2.3	Loop handle with barrier bar	117
10.1	Control handle for loop handle	82	11.4.1	Metering diaphragm	96	12.3	Deflector	118
10.1.1	Throttle trigger / throttle trigger interlock	82	11.4.2	Inlet needle	97	12.3.1	Deflector for gearbox with 25.4 mm drive tube assembly diameter	118
10.1.2	Slide control	84	11.4.3	Pump diaphragm	98	12.3.2	Deflector for gearbox with 28 mm drive tube assembly diameter	119
10.2	Control handle for bike handle	85	11.4.4	Throttle shaft lever	99	12.3.3	One-piece carrying ring	120
10.2.1	Removal and installation	85	11.4.5	Choke lever/choke knob	100	12.3.4	Support	120
10.2.2	Throttle trigger / throttle trigger interlock	86	11.4.6	Adjusting screws, carburetor without M-Tronic	102	12.4	Gearbox for drive tube assembly 25.4 mm with square profile	120
10.2.3	Lever for stop function	89	11.5	Carburetor adjustment with M-Tronic	103	12.4.1	Removal and installation	120
10.2.4	Adjusting the throttle cable	89	11.6	Carburetor adjustment without M-Tronic	103	12.4.2	Disassembly	121
10.2.5	Throttle rod	90	11.6.1	Basic setting	103	12.5	Gearbox for drive tube assembly 28 mm with serration	124
			11.6.2	User adjustment	104	12.5.1	Removal and installation	124
			11.7	Spacer flange	105	12.5.2	Disassembly	124
			11.8	Tank vent	107			
			11.8.1	Testing	107	13.	Special tools	129
			11.8.2	Removal and installation	108			
			11.9	Fuel intake	108	14.	Service accessories	131
			11.9.1	Pickup body	108			
			11.9.2	Fuel hose	109			
			11.9.3	Fuel tank	110			