

TABLE OF CONTENTS

1 To this operator's manual	
1.1 General Information	5
2 Safety	
2.1 General Information	8
2.2 Safety decals	20
2.3 Safety equipment	30
3 Machine description	
3.1 Existing models	34
3.2 Overview and functions	35
3.3 Working and service areas	38
3.4 Identification plate and serial number	39
3.5 General operating principle	41
3.6 Transmission and drive	42
3.7 Crop feeding	46
3.8 Feeder unit	48
3.9 Baling system	49
3.10 Tying system	51
3.11 Bale discharge	55
3.12 Axle	56
3.13 Equipment	57
4 Technical specifications	
4.1 Baler	58
4.2 Safety devices	63
4.3 Tractor	64
5 Machine preparation	
5.1 General Information	66
5.2 Universal drive shaft	67
5.3 Coupling frame	74
5.4 Hydraulic connections	80
5.5 Electrical connections	81
5.6 Twine tying	82
5.7 Wire tying	91
5.8 Loading the machine	96
6 Operation	
6.1 General Information	98
6.2 Travelling with the baler	101
6.3 Before each usage	103
6.4 Commissioning in the field	105
6.5 Drawbar	107
6.6 Pick-up	109
6.7 Baling	112
6.8 Bale parameters	114
6.9 Unblocking the baler	115
6.10 After use	117
7 Faults and remedies	
7.1 Twine tying	120
7.2 Wire tying	125
7.3 Baling	127
8 Maintenance	
8.1 General maintenance Information	128
8.2 Lubricants charts	136
8.3 Maintenance schedules	137
8.4 Basic settings	140
8.5 Maintenance operations gearbox	144
8.6 Maintenance operations clutch	147
8.7 Maintenance operations axle and wheels	150
8.8 Maintenance operations tying	155
8.9 Maintenance operations hitch	178
8.10 Lubrication chart	179
8.11 Winter storage	188
9 Placing out of operation and disposal	
9.1 General Information	191
10 EC-declaration of conformity	
10.1 General Information	193