



First Edition E 15

Technical Data:

Current:	Alternating, 50 or 60 cycle, with appropriate motor pulleys
Line voltage:	selector for 110 or 220 volts (see schematic P. 4)
Drive:	four-pole, single-phase, induction motor
Power consumption:	7.2 watts approximately
Current requirements:	60 ma. maximum at 220 V, 50 cycle; 95 ma. maximum at 117 V, 60 cycle
Turntable speeds:	78, 45, 33 $\frac{1}{3}$ and 16 $\frac{2}{3}$ r.p.m.
Turntable:	non-magnetic, 4 lb., Hi-Fi turntable
Wow and Flutter:	Less than $\pm 0.12\%$
Rumble:	less than 38 dB below signal level
Signal-to-Noise Ratio:	less than 56 dB below signal level
Tonearm:	balanced on all three axes, extremely low mass, and precision, friction-free suspension (vertical 0.01 gm and horizontal friction bearing friction less than 0.04 gm)
Cartridge holder:	Removeable, suitable for acceptance of cartridges having $\frac{1}{2}$ " mounting and possessing a weight of 1—8 grammes (an additional counterbalance is available for use with cartridges of 4—14 grammes).
Weight:	11 lbs. without packing
Dimensions and Mounting Cutouts:	see installation instructions

Contents	Page
Technical Data	1
Tonearm hook-up schematic	2
Motor and drive	4
Turntable does not turn when unit plugged in and "Start" button operated	5
Turntable does not come up to speed	5
Assembly noise	5
Tonearm and suspension	6
Tonearm anti-skating mechanism	7
Needle slides out of groove	7
Tonearm sets down beside arm-rest	7
Horizontal friction too great	7
Arm set-down not free	7
Tonearm movements	8
Tonearm set-down and lift	8
Tonearm does not move onto record when drop cycle actuated	9
Tonearm lowers too quickly onto record when drop cycle actuated	9
Tonearm misses edge of record	9
Tonearm strikes record during change cycle	9
Start Cycle	10
Manual Operation	10
Stop switching	11
Record Drop	11
Shut-off	12
Shut-off and change cycle	12
Tonearm returns to arm rest immediately after being manually placed on record	13
Turntable stops after automatic set-down of Tonearm	13
Tonearm returns to its rest after each record	13
Turntable does not turn in Manual position	13
Last record keeps repeating	13
Record drops after "Stop", then "Start" buttons are depressed	13
Records do not drop	13
Noise during change cycle, arm set-down and lift-off	13
No sound	13
Muting switch remains closed	13
Motor continues to run after tonearm returns to its rest	14
Turntable slows down as record drops	14
Acoustic feedback	14
Replacement parts and exploded view	14—20
Lubrication	20—21