


## ENGINE LUBRICATION

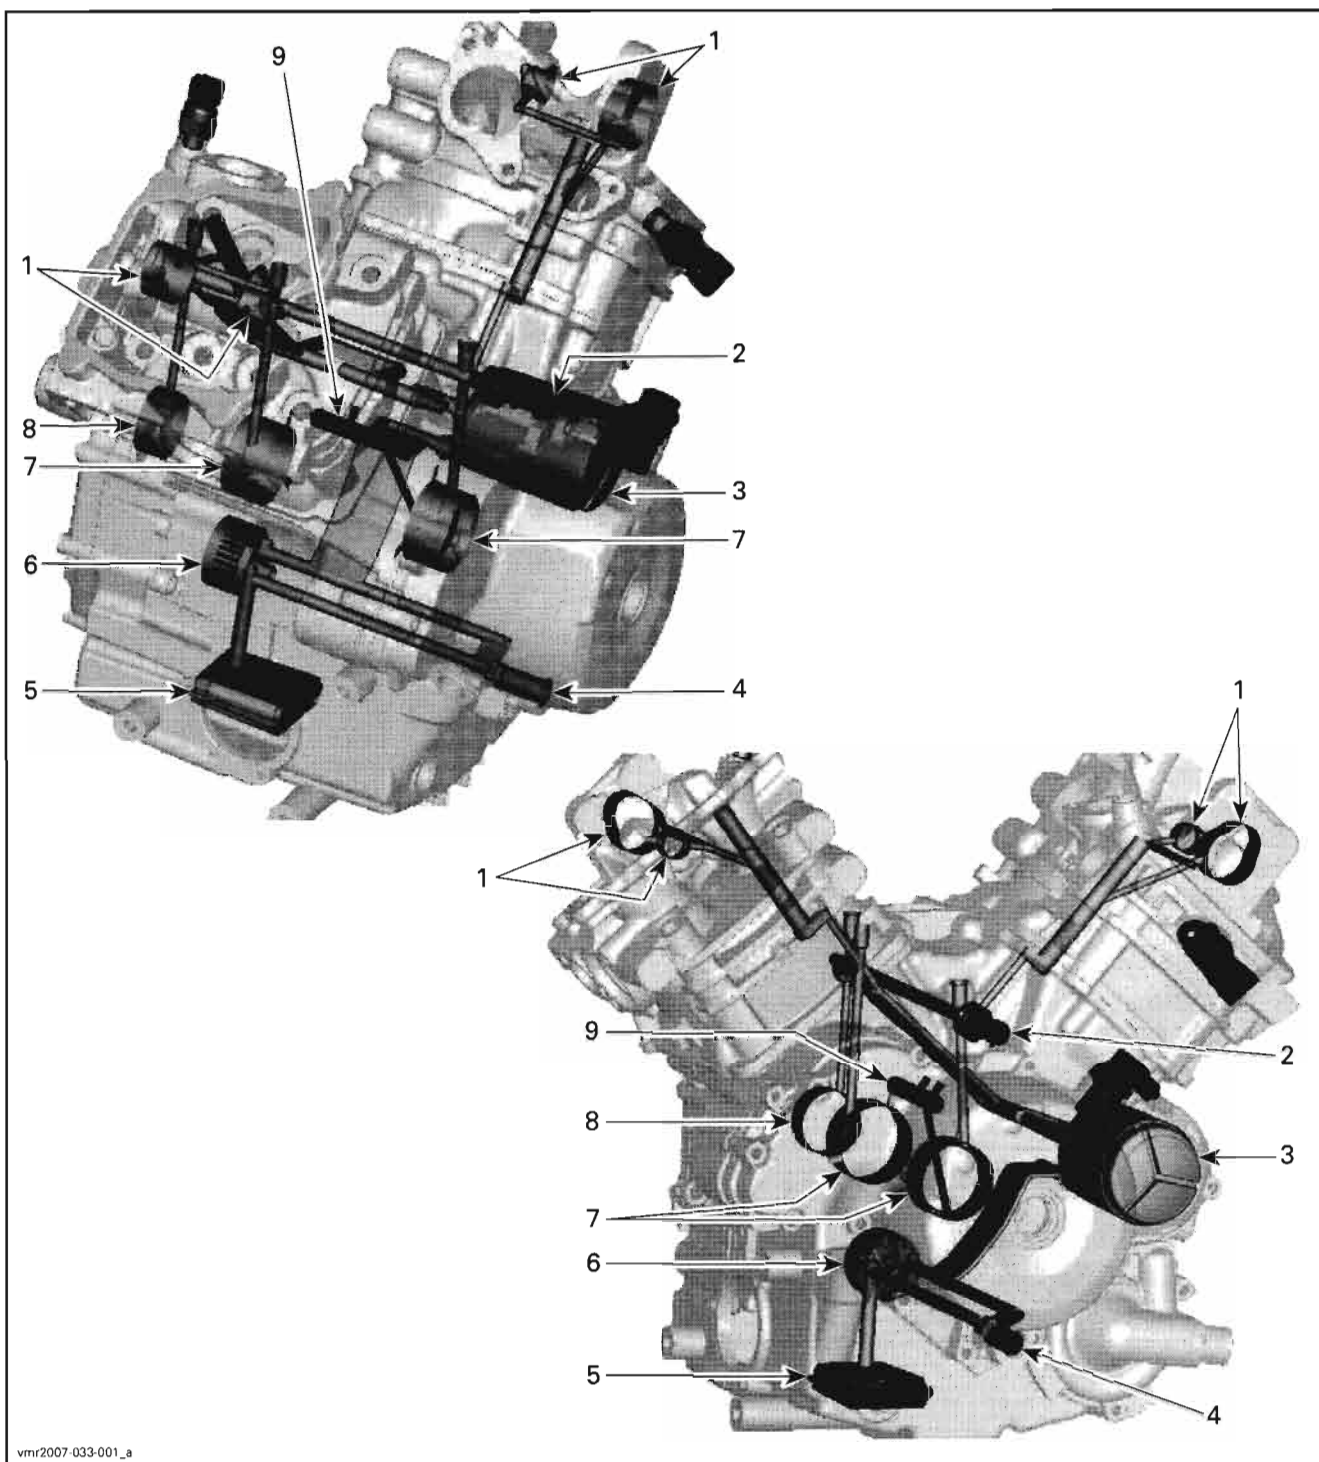

vmr2007-033-001\_a

1. Camshaft bearings
2. Oil pressure switch
3. Oil filter
4. Oil pressure regulator valve
5. Oil strainer
6. Oil pump
7. Crankshaft main bearings
8. Crankshaft support bearing
9. Connecting rod bearings

# ENGINE REMOVAL AND INSTALLATION

## SERVICE TOOLS

| Description               | Part Number       | Page |
|---------------------------|-------------------|------|
| engine lifting tool ..... | 529 036 022 ..... | 31   |

