

GROUP 00

CONTENTS

GENERAL VIEWS	00-2	Engine main mechanical unit	00-31
WHEELS AND TYRES	00-3/1	Replacement of engine oil and oil filter -	
MODEL VARIATIONS	00-3/2	check of lubrication system tightness...	00-31
SERVICE AND IDENTIFICATION		Check of bolts and nuts tightening	00-31
DATA	00-6	Tightening of cylinder head nuts	00-31
Identification labels	00-6	Check and adjustment of valve	
Vehicle identification codes	00-7	clearance	
LIFTING AND TOWING POINTS	00-8	16 18 20	00-31
Jack	00-8	Check of timing system and control	
Hydraulic jack and safety stands	00-9	chain tensioning	
Towing	00-9	16 18 20	00-31
SPECIAL SERVICE TOOLS	00-9	Check and adjustment of valve	
INSTRUCTIONS FOR PRE-DELIVERY		clearance	
INSPECTION	00-10	18 CH SWB 20 CH SWB	00-31
Operations in the engine compartment .	00-10	Check of timing system and control	
Operations on vehicle outer side and in		chain tensioning	
the passenger compartment	00-10	18 CH SWB 20 CH SWB	00-32
Operations on vehicle lower part	00-12	Checking and restoring the timing	
Functional tests	00-12	variator functioning	
MAINTENANCE	00-12	18 CH SWB 20 CH SWB	00-32
VEHICLE MAINTENANCE SCHEDULE	00-13	Checking good conditions, replacing and	
FLUIDS AND LUBRICANTS LAYOUT	00-22	adjusting the alternator drive belt	
RECOMMENDED FUEL AND		tensioning	
LUBRICANTS	00-25	16 18 20	00-32
Fuel	00-25	Checking good conditions, replacing	
Fluids and lubricants	00-26	and adjusting tensioning of drive	
APPROXIMATE REFILL		belts of alternator, air conditioner	
CAPACITIES	00-30	compressor, power steering pump	
ENGINE MAINTENANCE		20	00-32
16 Carburetors,		Check of cylinder compression	00-32
18 Carburetors, 20 Carburetors,		Fuel system	00-32
18 20 Carburetors with timing		Check and adjustment of accelerator	
Variator for CH SWB	00-31	control	(-)

00

CONTENTS (cont.)

Check and adjustment of starter motor control	(○)	
Check of fuel system pressure and system tightness	(○)	
Check and cleaning of air filter, cartridge replacement	(○)	
Cleaning of carburetor jets and spark arrester of breather gas return system	(○)	
Check and adjustment of idle r.p.m. and exhaust emissions		
1.8 (CH) (SWE) 2.0 (CH) (SWE)	(●)	
R.p.m. - activated switch		
1.8 (CH) (SWE) 2.0 (CH) (SWE)	(●)	
Check and adjustment of idle r.p.m. and exhaust emissions		
1.6 1.8 2.0	(○)	
Engine ignition		00-32
Check and adjustment of ignition advance	(○)	
Ignition system		
1.8 (CH) (SWE) 2.0 (CH) (SWE)	(●)	
Check and adjustment of ignition advance		
1.8 (CH) (SWE) 2.0 (CH) (SWE)	(●)	
Check, cleaning or replacement of spark plugs, firing order	(○)	
Engine cooling		00-32
Check of antifreeze mixture level and cooling system tightness	(○) (●)	
Trouble diagnosis and corrections		00-32
Engine		00-32
Ignition		
1.6 1.8 2.0		00-32
Fuel supply		
1.6 1.8 2.0		00-32
Fuel supply/ignition		
1.8 (CH) (SWE) 2.0 (CH) (SWE)		00-32
ENGINE MAINTENANCE		
2.0 (turbo diesel)		00-32
Engine main mechanical unit	(△)	
Replacement of engine oil and oil filter - check of lubrication system tightness	(△)	
Check of bolts and nuts tightening	(△)	
Tightening of cylinder head nuts	(△)	
Check and adjustment of valve clearance	(△)	
Checking good conditions, replacing and adjusting drive belts of alternator, air conditioner compressor, power steering pump	(△)	
Fuel system	(△)	
Check and adjustment of accelerator control	(△)	
Check of fuel system pressure and system tightness	(△)	
Check, cleaning and replacement of air filter cartridge	(△)	
Replacement of fuel filter cartridge	(△)	
Bleeding of fuel system	(△)	
Water drain from fuel system	(△)	
Check and adjustment of idle r.p.m.		00-32
Cleaning and calibration of injectors - spray nozzle replacement	(△)	
Check of end play and running clearance of turbocharger rotor shaft and by-pass valve	(△)	

- (△) As per **Alfa 90** **2.4** (turbo diesel)
 (▲) As per **Alfa 90**
 (○) As per **Alfa 90** **1.8** Carburetors, **2.0** Carburetors
 (●) As per **Alfa 90** **2.0** Carburetors with timing variator for (CH) (SWE)
 (*) As per **Alfa 90** **2.5** (iniezione)

CONTENTS (cont.)

Check and replacement of pre-heating glow plugs	(△)	Check of timing system and drive belt tensioning	(*)
Engine cooling	(△)	Checking good conditions, replacing and adjusting drive belts of alternator, air conditioner compressor, power steering pump	(*)
Check of antifreeze mixture level and cooling system tightness	(△)	Check of cylinder compression	(*)
Trouble diagnosis and corrections	(△)	Fuel system	(*)
Engine	(△)	Check and adjustment of accelerator control	(*)
Fuel supply	(△)	Check of fuel system pressure and system tightness	(*)
ENGINE MAINTENANCE		Diagnostic procedure for checking tightness of fuel injection supply system (model variation for Australia)	(*)
 6V iniezione	00-32	Diagnostic procedure for checking tightness of fuel vapour emission control system (model variation for Australia)	(*)
Engine main mechanical unit	(*)		
Replacement of engine oil and oil filter - check of lubrication system tightness	(*)		
Check of bolts and nuts tightening	(*)		
Tightening of cylinder head nuts	(*)		
Check and adjustment of valve clearance	(*)		
Replacement of timing system drive belt	(*)		

- (△) As per **Alfa 90 2.4 turbodiesel**
 (▲) As per **Alfa 90**
 (○) As per **Alfa 90 1.8** Carburetors, **2.0** Carburetors
 (●) As per **Alfa 90 2.0** Carburetors with timing variator for **CIH** **SWF**
 (*) As per **Alfa 90 2.5 iniezione**

CONTENTS (cont.)

Cleaning of air filter and/or cartridge replacement	(*)
Check of air supply system tightness after air flow gauge	(*)
Fuel filter replacement	(*)
Check and adjustment of idle r.p.m. and exhaust emissions	(*)
Engine ignition	(*)
Check and adjustment of spark advance	(*)
Check, cleaning or replacement of sparks plugs; firing order	(*)
Engine cooling	(*)
Check of antifreeze mixture level and cooling system tightness check	(*)
Trouble diagnosis and corrections	(*)
Engine	(*)
Ignition	(*)
Fuel system	(*)
Test with MOTRONIC - BOSCH test adapter	(*)
Injection wiring diagram	00-33
ENGINE MAINTENANCE	
	00-34/1
<i>As per  except for the following:</i>	
Engine main mechanical unit	00-34/1

Tightening of cylinder head nuts	00-34/1
Fuel system	00-34/1
Check and adjustment of idle r.p.m. and exhaust emissions	00-34/1
Engine ignition	00-34/1
Check and adjustment of spark advance	00-34/1
Trouble diagnosis and corrections	00-34/2
Injection - ignition wiring diagram	00-34/3
MAINTENANCE OF MECHANICAL COMPONENTS AND BODY	
Clutch	(▲)
Check of clutch-brakes fluid level and check of the system	(▲)
Speed gear-differential	(▲)
Transmission	(▲)
Front axle and suspension	00-35
Check	(▲)
Adjustment of wheel bearings preload	00-35
Rear axle and suspension	(▲)
Check	(▲)
Check of vehicle height	00-35
Preliminary operations	(▲)
Front height	(▲)

- (△) As per **Alfa 90 2.4** **turbodiesel**
 (▲) As per **Alfa 90**
 (○) As per **Alfa 90 1.8** Carburetors, **2.0** Carburetors
 (●) As per **Alfa 90 2.0** Carburetors with timing variator for **CH** **SWE**
 (*) As per **Alfa 90 2.5** **iniezione**

CONTENTS (cont.)

Rear height	00-35
Height adjustment	(▲)
[Wheel alignment	00-35
Check of front wheels alignment ...	00-35
Check of rear wheels alignment	(▲)
Front and rear brakes	00-35
Brake system	(▲)
Front brakes	(▲)
Rear brakes	(▲)
Parking brake	(▲)
Adjustment	(▲)
Steering system	(▲)
Check of the unit	(▲)
Check of power steering tank oil level	(▲)
Tyres	(▲)

Tyre pressure check	(▲)
Body	00-35
Locks and hinges	(▲)
Seat belts	00-35
Trouble diagnosis and corrections	(▲)
Transmission	(▲)
Suspensions	(▲)
Steering wheel	(▲)
Brakes	(▲)

SERVICE DATA AND

SPECIFICATIONS	00-36
----------------------	-------

Engine maintenance	00-36
--------------------------	-------

[Maintenance of mechanical components and body	00-39
--	-------

SPECIAL SERVICE TOOLS	(▲)
-----------------------------	-----

(△) As per **Alfa 90 2.4** **turbodiesel**


(▲) As per **Alfa 90**

(○) As per **Alfa 90 1.8** Carburetors, **2.0** Carburetors

(●) As per **Alfa 90 2.0** Carburetors with timing variator for **CH** **SWE**


(*) As per **Alfa 90 2.5** **iniezione**


GENERAL VIEWS

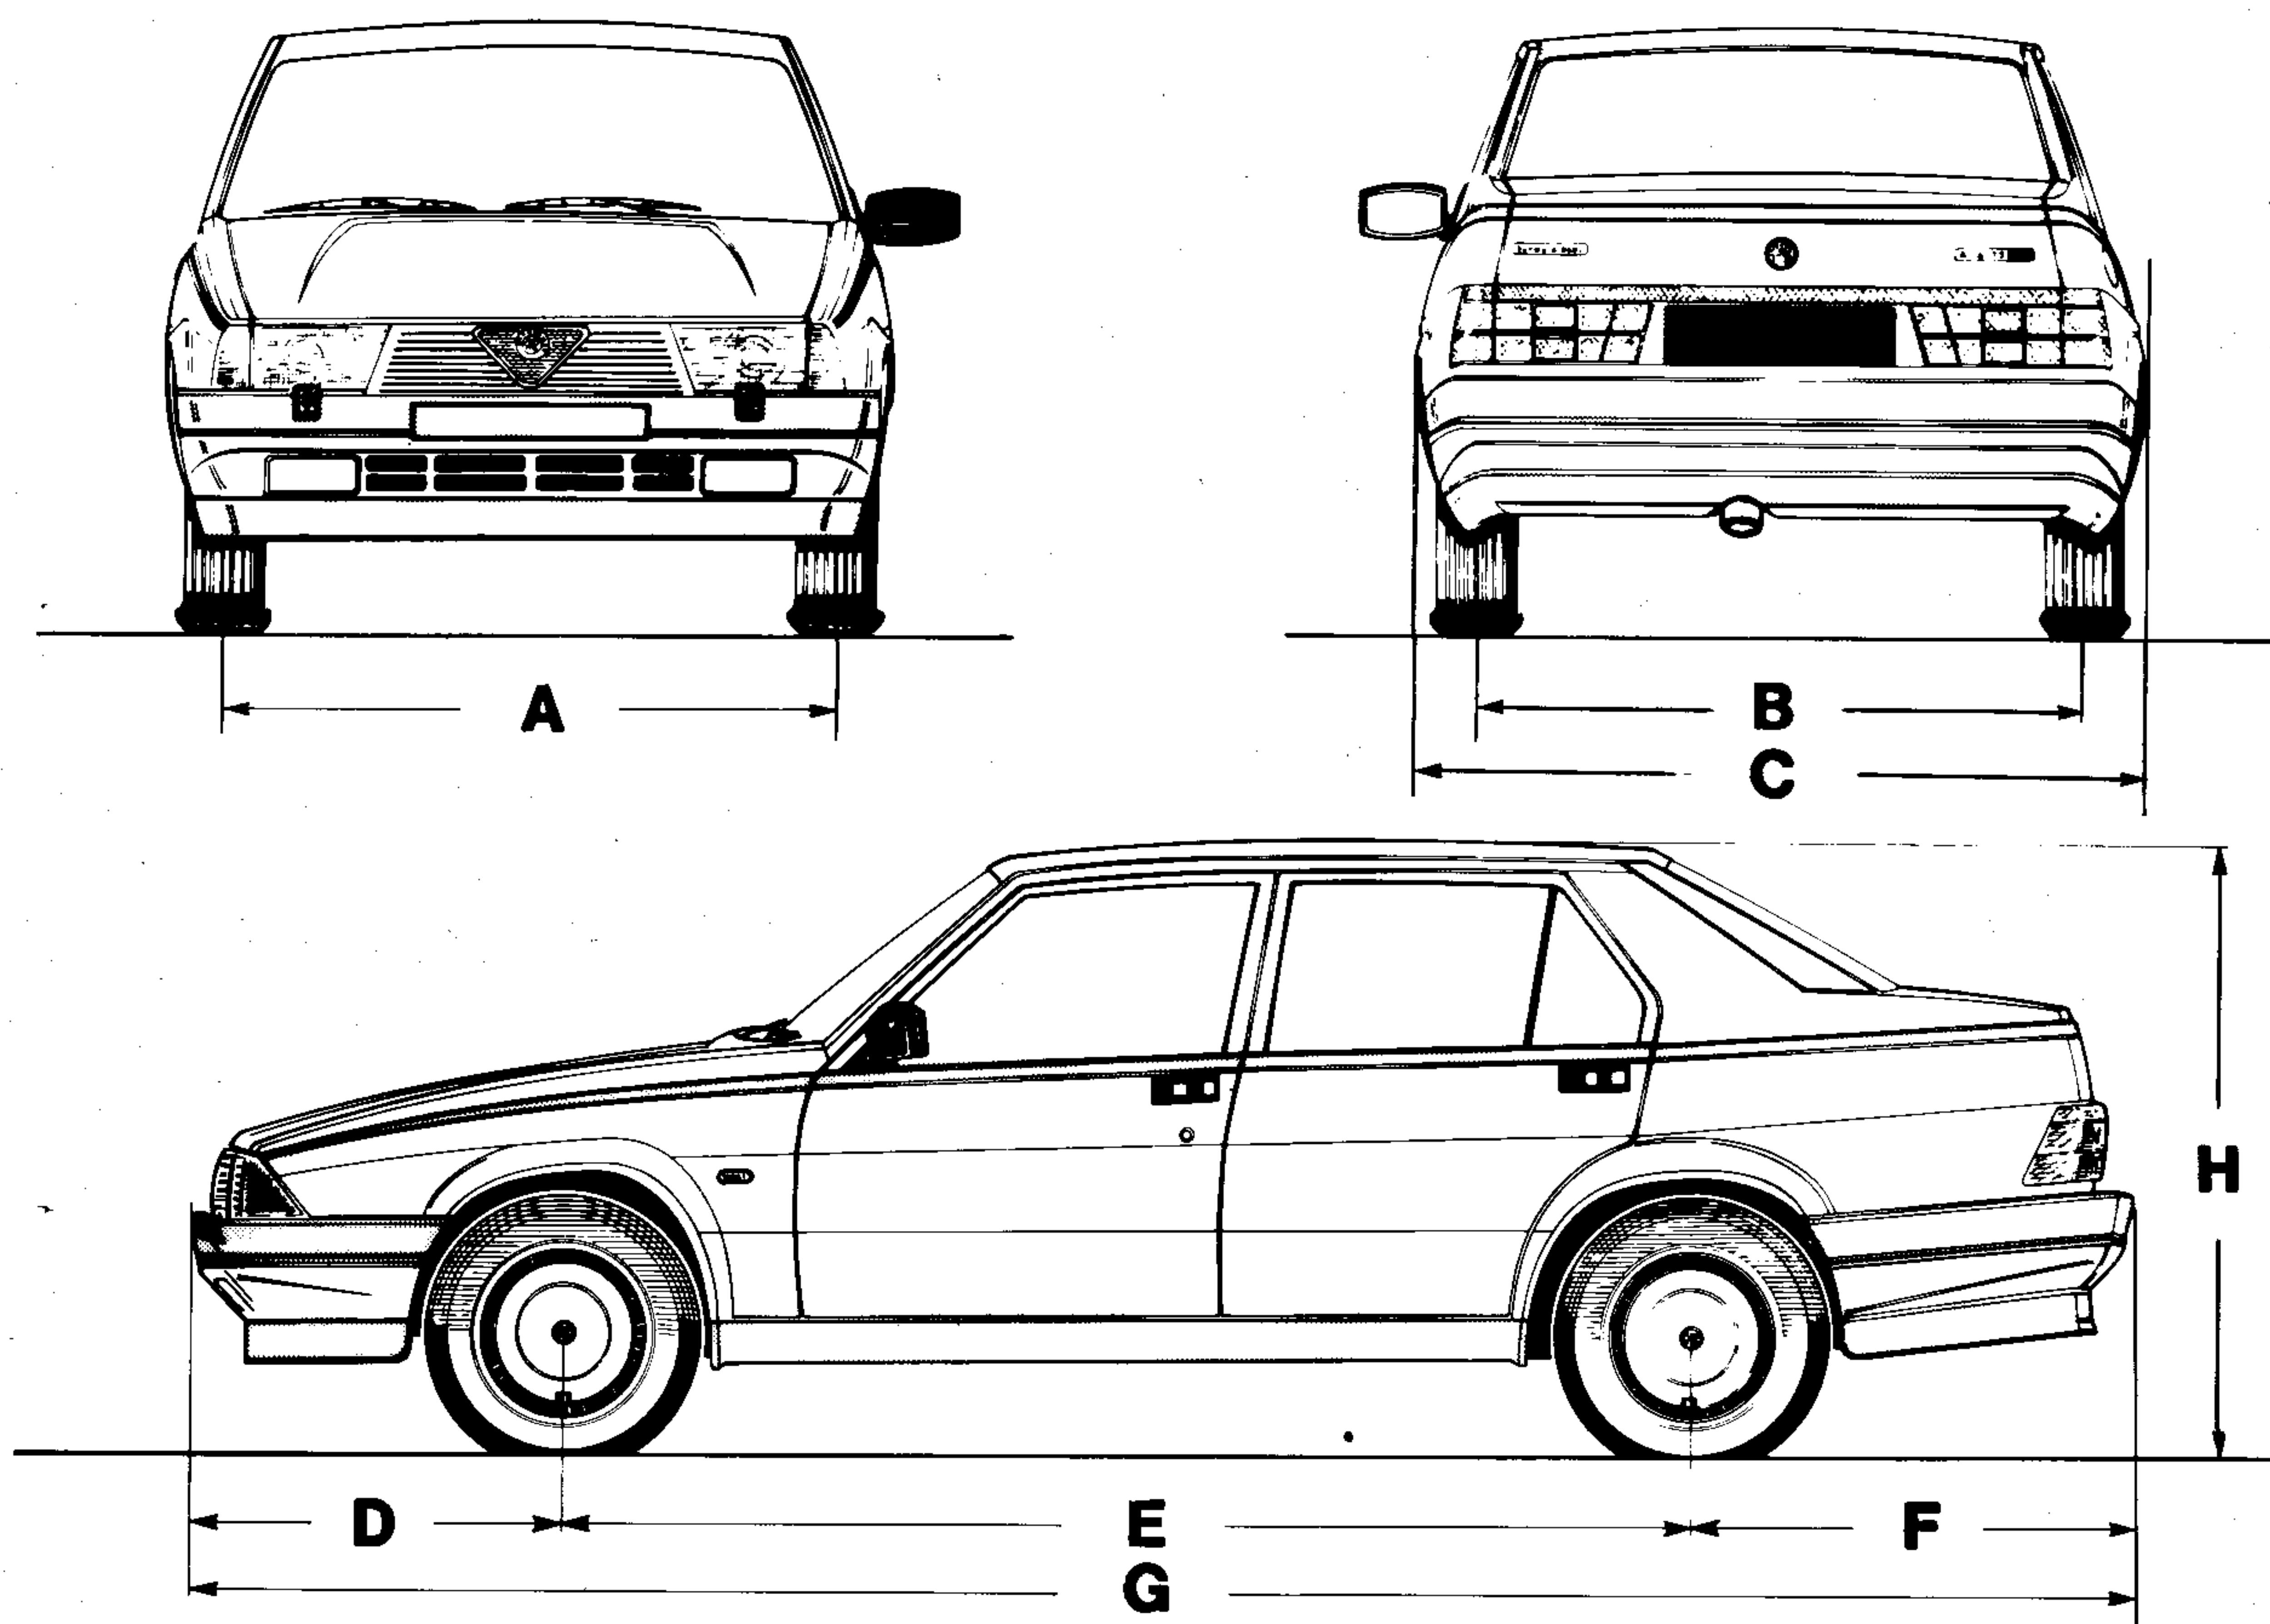

DIMENSIONS

Unit: mm (in)

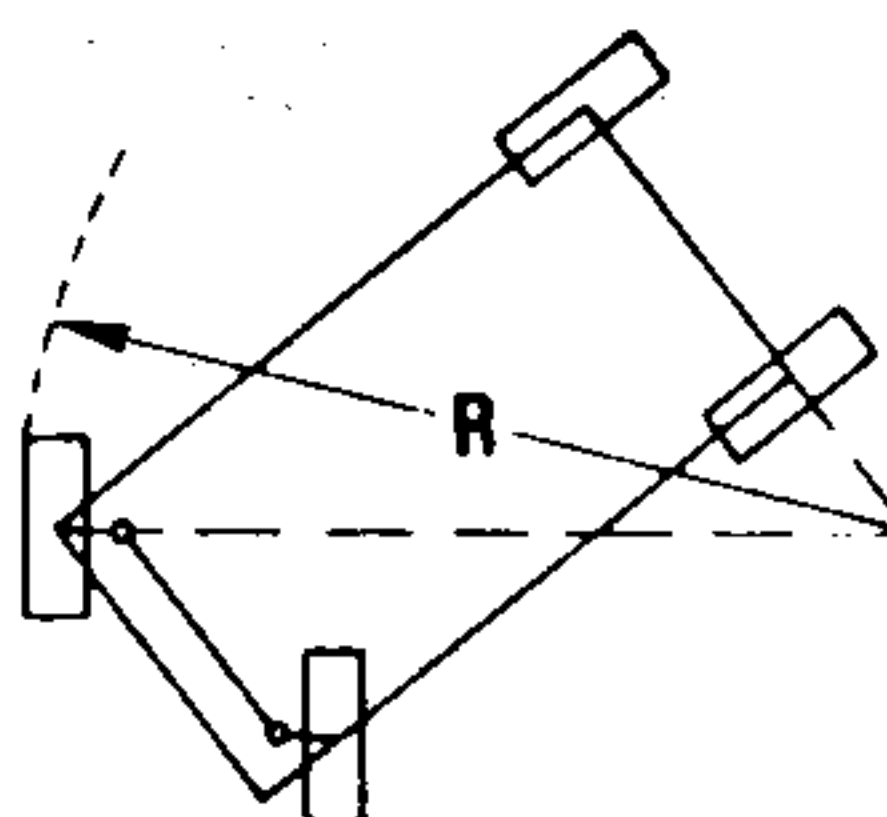Dimensions		A	B	C	D	E	F	G	H max	R	
Model	Variations										
Alfa 75	1.6	1368(1)	1358(1)	1630 (64.17)	825 (32.48)	2510 (98.82)	995 (39.17)	4330 (170.4)	1400 (55.1)	5050 (198.8)	
	1.8	(53.86)	(53.46)								
	2.0	1368(2)	1358(2)								
	(53.86)	(53.46)									
	2.0 turbodiesel	1368(1)	1358(1)								
	(53.86)	(53.46)									
	6V iniezione	1368(2)	1358(2)	1660 (65.36)	865 (34.06)	1045 (41.14)	4420 (174.02)				
		(53.86)	(53.46)								
		1378(3)	1368(3)								
		(54.25)	(53.86)								
	1.6	1368(1)	1358(1)								
	(53.86)	(53.46)									
	1.8	1368(2)	1358(2)	1660 (65.36)	865 (34.06)	1045 (41.14)	4420 (174.02)				
		(53.86)	(53.46)								
	2.0	1368(2)	1358(2)								
		(53.86)	(53.46)								
	TURBO D	1368(1)	1358(1)								
	(53.86)	(53.46)									
	6V 2.5	1376(2)	1362(2)	1660 (65.36)	865 (34.06)	1045 (41.14)	4420 (174.02)				
		(54.17)	(53.62)								
		1396(4)	1382(4)								
		(54.96)	(54.41)								
	6V 3.0	1396(4)	1382(4)								
	(54.96)	(54.41)									

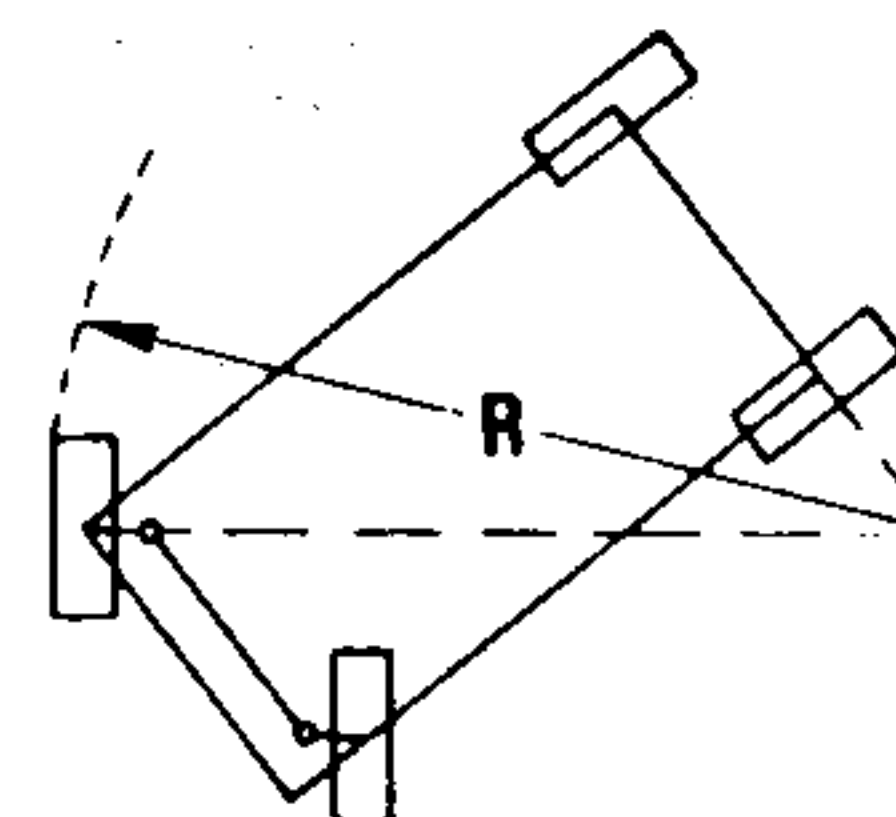

(1) with rims 5 1/2 J x 13"
(2) with rims 5 1/2 J x 14"

(3) with rims 6 J x 15"
(4) with rims 6 1/2 J x 14"

R = Radius of the circumference described in correspondence with ground from driving wheel outer edge in the max steering conditions

COMPLETE CAR

WEIGHTS AND LOADS

Unit: kg (lb)

Model Variations		Alfa 75				
		1.6	1.8	2.0	2.0 turbodiesel	6V iniezione
Weights and Loads						
Max weight allowed		1485 (3274)	1485 (3274)	1495 (3296)	1615 (3560)	1585 (3494)
Kerbweight		1068 (2355)	1060 (2337)	1070 (2359)	1190 (2624)	1160 (2557)
Useful load		425 (936)	425 (936)	425 (936)	425 (936)	425 (936)
Max gross weight per axle allowed	Front	820 (1808)	820 (1808)	820 (1808)	940 (2072)	850 (1873)
	Rear	990 (2182)	990 (2182)	990 (2182)	990 (2182)	990 (2182)
Max towing gross weight		1200 (2645)	1200 (2645)	1200 (2645)	1300 (2866)	1200 (2645)
Max vertical load on tow hook		77 (169)	77 (169)	77 (169)	90 (198)	84 (185)
Seating capacity	Front	2	2	2	2	2
	Rear	3	3	3	3	3

Unit: kg (lb)

Model Variations		75				
		1.6 1.8	2.0	TURBO D	6V 2.5	6V 3.0
Weights and Loads						
Max weight allowed		1485 (3274)	1495 (3296)	1615 (3560)	1585 (3494)	1675 (3693)
Kerbweight		1060 (2337)	1070 (2359)	1190 (2624)	1160 (2557)	1250 (2756)
Useful load		425 (936)	425 (936)	425 (936)	425 (936)	425 (936)
Max gross weight per axle allowed	Front	820 (1808)	820 (1808)	940 (2072)	850 (1873)	850 (1873)
	Rear	990 (2182)	990 (2182)	990 (2182)	990 (2182)	990 (2182)
Max towing gross weight		1100 (2425)	1100 (2425)	1300 (2866)	1200 (2645)	1300 (2866)
Max vertical load on tow hook		77 (169)	77 (169)	90 (198)	84 (185)	65 (143)
Seating capacity	Front	2	2	2	2	2
	Rear	3	3	3	3	3

COMPLETE CAR

WHEELS AND TYRES

Model Variations			Alfa 75				
			1.6	1.8	2.0	2.0 turbodiesel	6V iniezione
Rims and tyres							
Rims			5 1/2 J x 13" (1)		5 1/2 J x 14" (1)	5 1/2 J x 13" (1)	5 1/2 J x 14" (2) 6 J x 15" (2)
Tubeless Tyres			185/70 R13T	185/70 R13H	185/65 R14H	185/70 R13T	195/60 R14V 195/55 R15V
Inflating Pressure [kg/cm ²] (3) (p.s.i.; bar; kPa)	N	A	1.8 (25.6; 1.76; 176.5)			2.1 (29.9; 2.05; 205.9)	2.0 (28.4; 1.96; 196.1)
		P	2.0 (28.4; 1.96; 196.1)			2.1 (29.9; 2.05; 205.9)	2.0 (28.4; 1.96; 196.1)
	C	A	2.0 (28.4; 1.96; 196.1)			2.3 (32.7; 2.25; 225.5)	2.2 (31.2; 2.15; 215.7)
		P	2.2 (31.2; 2.15; 215.7)			2.3 (32.7; 2.25; 225.5)	2.5 (35.5; 2.45; 245.7)

Model Variations			75				
			1.6	1.8	2.0	TURBO D	6V 2.5 6V 3.0
Rims and tyres							
Rims			5 1/2 J x 13" (1)		5 1/2 J x 14" (1)	5 1/2 J x 13" (1)	6 1/2 J x 14" (2)
Tubeless Tyres			185/70R1384T	185/70R1384H	185/65R1485H	185/70 R13T	195/60 R14V
Inflating Pressure [kg/cm ²] (3) (p.s.i. ; bar ; kPa)	N	A	1.8 (25.6; 1.76; 176.5)			2.1 (29.9; 2.05; 205.9)	2.0 (28.4; 1.96; 196.1)
		P	2.0 (28.4; 1.96; 196.1)			2.1 (29.9; 2.05; 205.9)	2.0 (28.4; 1.96; 196.1)
	C	A	2.0 (28.4; 1.96; 196.1)			2.3 (32.7; 2.25; 225.5)	2.2 (31.2; 2.15; 215.7)
		P	2.2 (31.2; 2.15; 215.7)			2.3 (32.7; 2.25; 225.5)	2.5 (35.5; 2.45; 245.7)

A: Front

P: Rear

N: with reduced load and normal speed

C: at full load and high speed

T: up to 190 km/h (118 mph)

H: up to 210 km/h (130 mph)

V: over 210 km/h (130 mph)

(1) Rims with four bolts

(2) Rims with five bolts

(3) Pressures measured on cold tyres

CAUTION:

The wheels nut must be tightened to 98 N·m torque
(10 kg·m; 72.16 ft·lb)

MODEL VARIATIONS

(Except Switzerland, Sweden, Australia)

Model Variations		Alfa 75									
		16		1.8		20		20 turbodiesel		 6V iniezione	
Identification											
Body		4 - door saloon									
Drive		LH	RH	LH	RH	LH	RH	LH	RH	LH	RH
Identifi- cation No.	— on identification label	161.000	161.010	161.020	162.030	161.080	161.090	161.040	—	161.180	161.190
Type approval No.	— on identification label	162.B2 (1) 162.B2A (2)		162.B1 (1) 162.B1A (2)		162.BA (1) 162.BF (2)		162.BD		162.B3 (2) 162.B3A (1)	
	— on rear right side of luggage compart- ment floor	162.B20		162.B10		162.B00		162.B00		162.B30	
Chassis No.	— on rear right side of luggage compart- ment floor	From 00.001.011	From 03.001.011	From 00.001.011	From 03.001.011	From 00.200.011	From 03.010.011	From 00.001.011		From 00.001.011	From 03.001.011
Engine type and serial No.	— on left rear side of engine block	061.00 From 000.001		062.02 From 000.001		062.12 From 000.001		VM.80A From 00.001		016.46 From 000.001	

(1) Type/Model with gearbox - rear axle long ratios

(2) Variation for type/model with gearbox - rear axle short ratios

Model Variations													
		1.6		1.8		2.0		TURBO D		6V 2.5		6V 3.0	
Identification													
Body		4 - door saloon											
Drive		LH	RH	LH	RH	LH	RH	LH	RH	LH	RH	LH	RH
Identifi- cation No.	— on identification label	161.000	161.010	161.020	162.030	161.080	161.090	161.040	—	161.180	161.190	161.200	161.210
Type approval No.	— on identification label	162.B2 (1) 162.B2A (2)		162.B1 (1) 162.B1A (2)		162.BA (1) 162.BF (2)		162.BD		162.B3		162.B6	
	— on rear right side of luggage compart- ment floor	162.B20		162.B10		162.B00		162.B00		162.B30		162.B60	
Chassis No.	— on rear right side of luggage compart- ment floor	From 00.001.011	From 03.001.011	From 00.001.011	From 03.001.011	From 00.200.011	From 03.010.011	From 00.001.011		—	—	From 00.001.001	From 03.001.001
Engine type and serial No.	— on left rear side of engine block	061.00 From 000.001		062.02 From 000.001		062.12 • From 000.001		VM.80A From 00.001		016.46 From 000.001		061.20 From 000.001	

- (1) Type/Model with gearbox - rear axle long ratios
 (2) Variation for type/model with gearbox - rear axle short ratios

(Except Switzerland, Sweden, Australia)

COMPLETE CAR