

Repair Manual



K 1200RS

**BMW AG Motorcycle Division
After Sales**

Published by BMW AG Motorcycle Division
After Sales
UX-VS-2

All rights reserved. Not to be reprinted, translated or duplicated either wholly or in part without prior written permission.
Errors and omissions excepted; subject to technical amendment.


Produced in Germany

Introduction

This repair manual will help you to perform all the main maintenance and repair work correctly and efficiently. If it is consulted regularly by workshop personnel it will form a useful addition to the theoretical and practical knowledge acquired at the BMW Training Centre. It is a contribution towards achieving even higher Service quality.

All information in both text and illustrations refers to motorcycles in standard condition or with genuine BMW accessories installed, and not to motorcycles which have been modified in any way to depart from the manufacturer's specification.

- The repair manual is structured in the logical sequence of the work to be performed: Removal, Disassembly, Repair, Assembly, Installation.
- The entire contents are divided into individual chapters, corresponding to the Construction Groups.

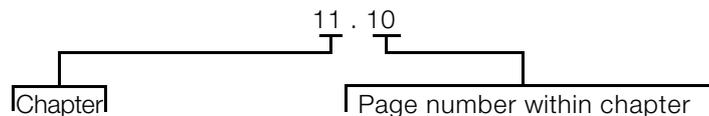

- Work to be performed during an Inspection is described in Group "00". The various inspection routines are numbered I, II, III and IV. This numbering is repeated in the work descriptions which follow, so that work can take place without interruption.
- Use of the BMW special tools needed for certain tasks is described in the work instructions.

If the need arises, repair instructions are also issued in the form of Service Information. This information is of course incorporated into the next issue of the repair manual. We also recommend, as an additional source of information, the Electronic Parts Catalogue (ETC), which contains clear and easy-to-follow illustrations.

If the work described here is restricted to a particular equipment specification, for instance if a specific optional extra (OE) is fitted, this is stated in square brackets at the start of the item concerned, e.g. **[LT]**.

Please refer to the following pages as well for a description of other symbols used and how to work with it.

BMW AG Motorcycle Division
After Sales

Published by: BMW AG Motorcycle Division
After Sales
UX-VS-2

D - 80788 München

All rights reserved. Not to be reprinted, translated or duplicated either wholly or in part without prior written permission.

Errors and omissions excepted; subject to technical amendment.

Produced in Germany

Usage

Each chapter starts with the list of contents.

The list of contents is followed by the Technical Data table.

Chapter 00 "Maintenance and general instructions" details the handover checklist and lists all tightening torques and operating fluids.

Key to symbols

In this Workshop Manual for the K 1200 model, the following symbols are used; their meanings are explained in the table.

Special instructions aimed at improving the work procedures



Note:

Specific information on operating, inspecting and adjusting work for the motorcycle as well as maintenance procedures.



Caution:

Instructions and precautions specifically intended to prevent damage to the motorcycle. Failure to comply with them could invalidate the warranty.



Caution:

This symbol stands for precautions and measures which are essential in order to protect the rider or other persons from possibly severe or fatal injury.

Contents

Headlines for the work described in the chapter..... with the relevant page number




Tightening torques:

Values are stated if they differ from DIN EN 24 014 or DIN 912 ISO industrial standards.

Contents

Group	Chapter	Page
00	Maintenance and General Information	00.1
11	Engine	11.1
12	Engine electrical system	12.1
13	Fuel preparation and control	13.1
16	Fuel tank and lines	16.1
17	Cooling	17.1
18	Exhaust system	18.1
21	Clutch	21.1
23	Gearbox.....	23.1
31	Front fork	31.1
32	Steering	32.1

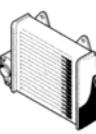

Contents

Group	Chapter	Page
33	Rear wheel drive	33.1
34	Brakes	34.1
36	Wheels and tyres	36.1
46	Frame	46.1
51	Equipment	51.1
61	General electrical system.....	61.1
62	Instruments.....	62.1
63	Lights.....	63.1



00 Maintenance and General Information

Contents

Page

Tightening torques	5
Table of operating fluids	14
Key to maintenance intervals	15
Changing engine oil, renewing oil filter element	16
(Inspections I, II, III IV)	
Gearbox oil change	17
(Inspection III)	
Rear wheel drive oil change (every 40,000 km/24,000 miles)	17
(Inspections I, III)	
Checking valve clearances, adjusting if necessary	18
(Inspection III)	
Checking valve clearances	18
Adjusting valve clearances	18
Renewing spark plugs	20
(Inspection III)	
Renewing fuel filter (every 40,000 km/24,000 miles)	21
(Inspection III)	
Removing the fuel pump unit	21
Removing and installing fuel filter	22
Removing/installing fuel pump	22
Installing fuel pump unit	22
Checking hose unions on fuel system	23
Check hose unions on fuel system for leaks and take up any slack at hose clips (Inspections I, III)	
Checking hose unions on the cooling system	23
Check the hose unions on the cooling system for leaks and if necessary take up slack at hose clips (Inspections I, III) Check cooling system for leaks	
Renewing coolant	24
(Inspection IV)	
Draining coolant	24
Adding coolant	24



Contents

Page



Battery	25
(Inspections III, IV) Check battery acid level and add distilled water if necessary; inspect battery terminal posts and clean and grease them if necessary	
Removing/installing battery	25
Topping up with distilled water	25
Renewing intake air cleaner	26
(Inspections II, III)	
Brake system	26
Checking operation of brake system and freedom from leaks, repairing/renewing if necessary (Inspection III)	
Brake pads/brake discs	27
Check brake pads and discs for wear and renew if necessary (Inspections II, III)	
Checking brake pads for wear	27
Front brake pads Rear brake pads	
Checking brake disc for wear	27
Renewing brake pads	28
Front brake Rear brake	
Checking brake fluid level/topping up	29
Check brake fluid level at front and rear, and top up if necessary [⇒ BMW SI 00 027 95 (716)] (Inspections I, II, III)	
Front brake	29
Rear brake	29
Renewing brake fluid and bleeding brake system	30
Renew the brake fluid at least once a year (Inspection IV)	
Front brake	30
Additional preliminary work	
Rear brake	32
Additional preliminary work	
Bleeding the brakes	34
Front brake	34
Rear brake	35
Checking operation of side (prop) stand switch	36
(Inspections I, II, III)	
Greasing the side (prop) stand	36
(Inspections II, III)	

Contents

Page

Checking main (centre) stand, greasing if necessary	36
(Inspections II, III, IV)	
Checking main (centre) stand	36
Lubricating main (centre) stand	37
Checking clutch fluid level, correcting if necessary	38
(Inspections I, II, III)	
Checking tightness of rear wheel studs	38
(Inspection I)	
Cleaning the inductive sensor at the rear wheel	38
(Inspections I, III)	
Reading out MoDiTeC fault memory	39
(Inspections II, III)	
Checking throttle cable play, adjusting if necessary	39
(Inspections I, III)	
Final inspection with road safety and functional check	39
(Inspections I, II, III, IV)	

