
4712 · 4718

5711 • 5718 • 5745 • 5748


6711 • 6718 • 6745 • 6748

2/76

OPERATOR'S MANUAL

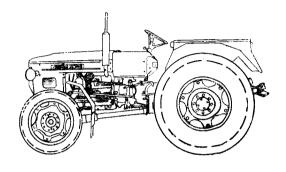

ZETOR 6745

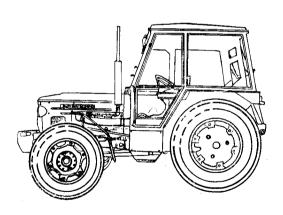

ZETOR 6748

CONTENTS

| Specifications of $\angle 4/12-4718$ | 8 |
|---|----|
| Specifications of Z 5711—5748 | 12 |
| Specifications of Z 6711—6748 | 17 |
| Something about the tractor | 23 |
| Pedals and levers | 25 |
| Hydraulic circuit control levers | 29 |
| Filling and draining orifices | 31 |
| Bleeding of the fuel system | 34 |
| Driver's seat | 36 |
| Electrical equipment and accessories | 36 |
| How to prepare the tractor for travelling | 38 |
| How to drive the tractor | 40 |
| Hydraulic system of the tractor | 43 |
| Brakes | 43 |
| Front axle | 44 |
| Rear wheels | |
| Tyre inflating | 47 |
| yre water filling | 48 |
| pecial accessories | 49 |
| ront driven axle | 50 |
| Agintenance and adjustment | 51 |
| Agintenance and adjustment | 63 |
| Naintenance instructions | 69 |
| roubles and their remedies | 75 |

SOMETHING ABOUT THE TRACTOR

Dash board (Fig. 1, 2)

1. Switch box with key

Key fully inserted

position 0 — starting circuit, charging circuit and its pilot lamp are switched on

position 1 — contour (side) and parking lights as well as tail lights and illumination of instruments are on

position 2 — high beam, high beam pilot lamp, tail lights, illumination of instruments and side lights are on

position 3 — dipped lights, tail lights, illumination of instruments and side lights are on

Is the key only half inserted, circuits of position 1, 2 or 3 can be switched on.

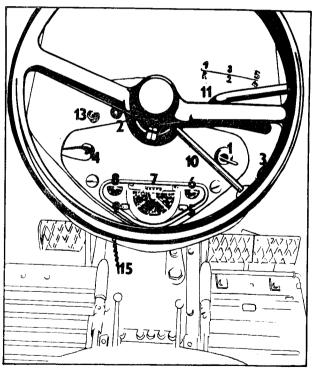


Fig. 1

6. PTO revolutions control lever (Fig. 4/6) (on Z 5711—Z 5748 and Z 6711—Z 6748 tractors only). control lever displaced forwards/in the sense of the tractor travel — neutral position; control lever displaced to the left — 540 RPM of the PTO control lever displaced to the right — 1000 RPM of the PTO.

IMPORTANT

When changing PTO exchangeable end pieces (Fig. 5/11) from 540 RPM (1000 RPM) to 1000 RPM (540 RPM) and vice versa it is necessary to put the PTO revolutions control lever in its neutral position and only then change the PTO end part. This operation being carried out, 1000 RPM (540 RPM) can be engaged again.

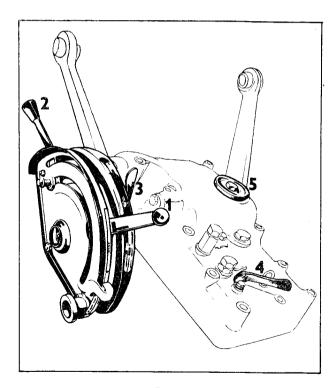


Fig. 6