 


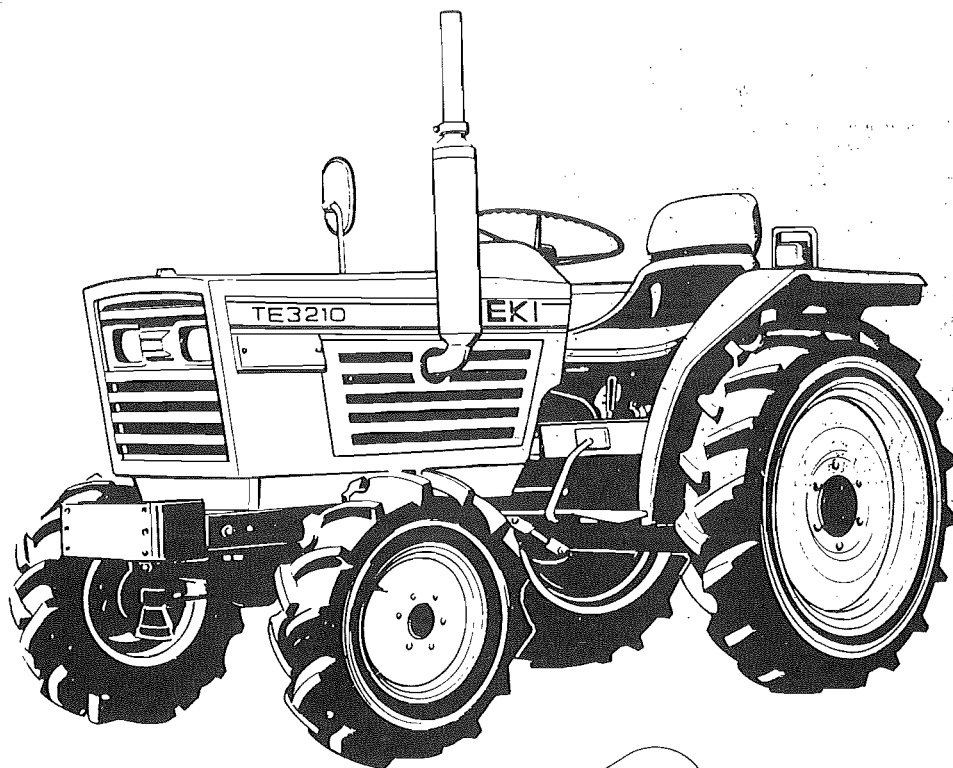

PARTS CATALOGUE


2&4-wheel drive type

ISEKI TRACTOR

TE3210



 TX2100

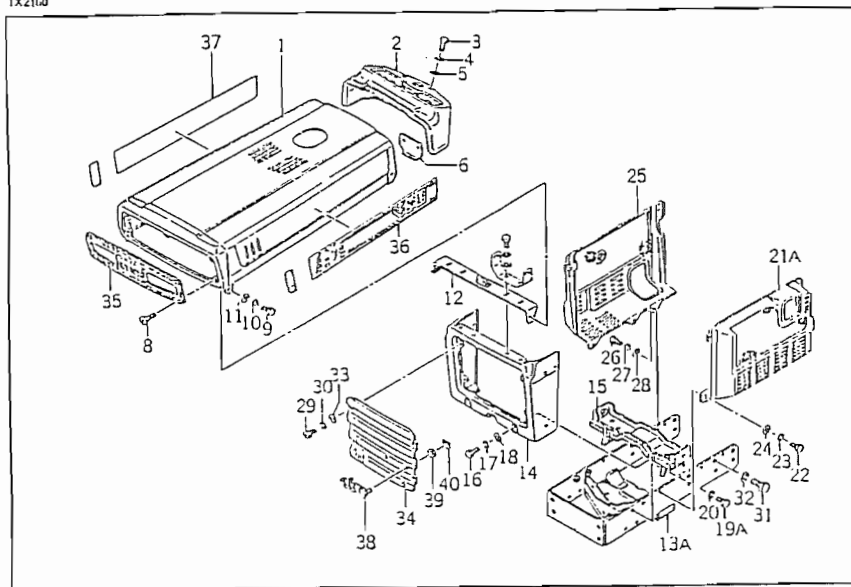

HOW TO USE THIS PARTS LIST (FOR O.E.M. ONLY)

Explanations of symbols (column guidances)

A. KEY

The key number is to use as reference for locating part number(s) of illustrated drawing shown in the list. The index number is given to individual illustrations. The suffix of key number represents that the part number of the parts changes or modified according to historical sequence.

Sequence of changes	Key #
1	1
2	1A
3	1B

B. SPC (Split Part Numbers)

There are part/parts originally with one part number but broken down into two or more parts and part numbers, due to technical reasons, which can be easily noticed at the KEY # with alphabet letters from A to Z. (these parts are combinations of 2 or more parts in lieu of the original one)

C. CHG (Parts newly added or Modified)

To observe easily the differences between old and new parts list. If the column CHG is/are with:

A : Parts newly added.

C : Parts modified or changed.


D. PART CODE (All blank) See remarks column

FIG. 20		P. 44	

FIG. II 20

BONNET AND FRAME SYSTEM

 TX2160

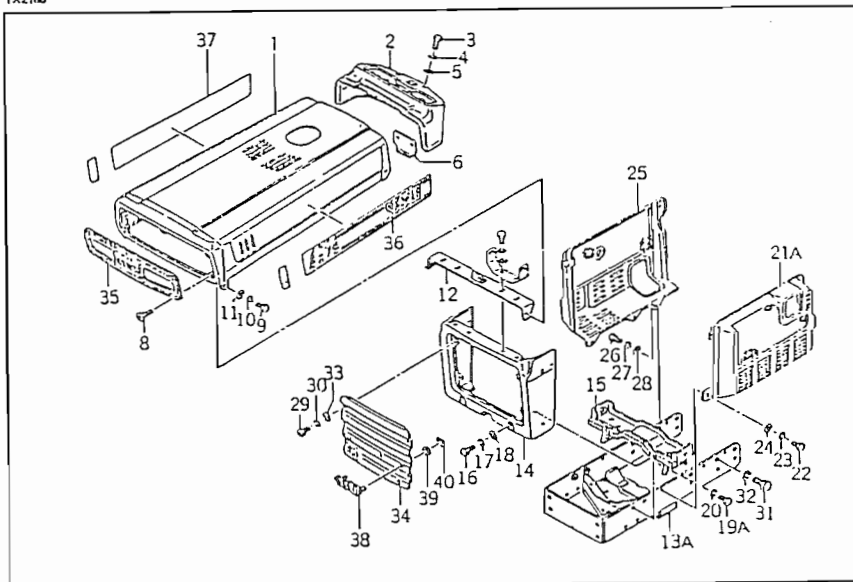

E. DESCRIPTION

Is the literal meaning of part number itself.

F. QTY (Quantity)

This is the actual number of piece, set and assembly of part required per unit of product or machine.

"AR" is the abbreviation of "AS REQUIRED"

"CC" shows that part required during replacement services is more than 100 pieces per unit.

G. ITC (Interchangeability)

0 : Old and new parts are interchangeable.

1 : New part can be used in place of the old part but old part can not be used to replace the new part.(see illustration below)

2 : Old part can be used in place of the new part but new part can not be used to replace the old part.(see illustration below.)

3 : Not interchangeable.(see illustration below.)

8 : Abolished.

9 : Newly added (overlooked during publication or with some unforeseen reasons).

	0	1	2	3
ITC				

FIG. II 20

TTT
EEG
333
123
123
123
123FFF
EEG
333
123
123
123
123

P. 44

EFF	EFF	PART CODE	DESCRIPTION	QTY	UNIT	REMARKS
1	1		BONNET COMP	1	000	000
2	2		SCREW W/ST	1	000	000
3	3		SCREW W/ST	1	000	000
4	4		SCREW W/ST	1	000	000
5	5		SCREW W/ST	1	000	000
6	6		SCREW W/ST	1	000	000
7	7		SCREW W/ST	1	000	000
8	8		SCREW W/ST	1	000	000
9	9		SCREW W/ST	1	000	000
10	10		SCREW W/ST	1	000	000
11	11		SCREW W/ST	1	000	000
12	12		SCREW W/ST	1	000	000
13A	13A		SCREW W/ST	1	000	000

A
B
C
D


E

F
G
H

J

K
L
M
N

 Tx2160

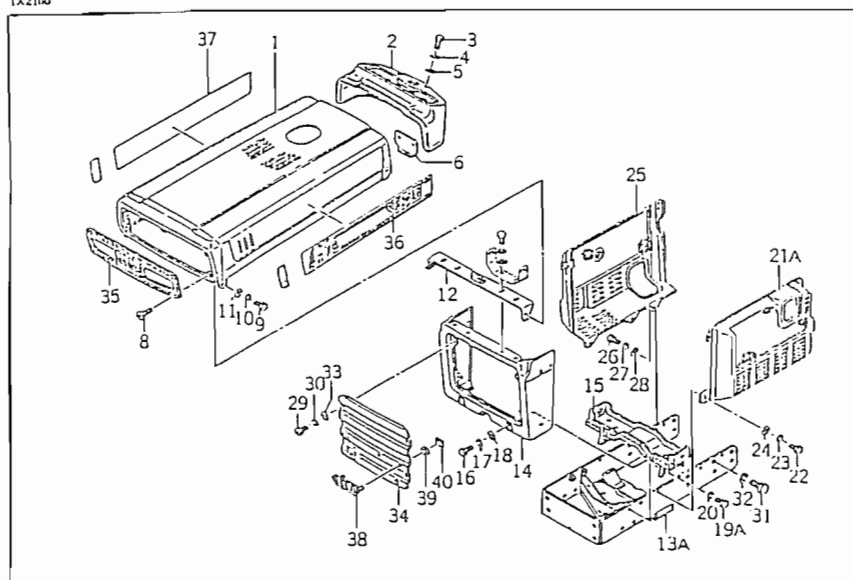

On this column you will find Iseki part numbers, coded according to its specifications, design and functions to describe the parts as references. There are parts with specific colour designed to specific country/countries as requirement, which can be distinguished after the part number with asterisk (*) mark and figures from (0) to (8) before each descriptions with designated colours. WHEN ORDERING REQUIRED COLOUR PARTS, BE SURE TO INDICATE COLOUR NUMBER, OTHERWISE, SHALL NOT TAKE ANY RESPONSIBILITY AT ANY CIRCUMSTANCES.

FIGURE		PART CODE		DESCRIPTION	QTY	UNIT	PRICE	AMOUNT	DATE	REMARKS
1				BONNET COMP	1		000	000		1434-401-250-00
2				0:17027 WHITE						
3				0:180 SILVER						
4				PANEL, METAL	1		000	000		1434-601-001-00
5				0:180 SILVER						
6				0:17027 WHITE						
7				BOLT/R 1/2x16	4		000	000		7201-260-401-00
8				WASHER, SP/R 8	4		000	000		7201-160-002-00
9				WASHER, PL/R 8	4		000	000		7411-160-002-00
10				COVER, REGULATOR	1		000	000		1434-601-200-00
11				0:1800 BLUE						
12				0:180 SILVER						
13				SCREW/M2x16	5		000	000		7412-160-001-00
14				BOLT, 1/2x16	2		000	000		1434-401-001-00
15				WASHER/1/2x16	2		000	000		1434-401-001-00
16				WASHER/1/2x16	2		000	000		1434-401-001-00
17				PLATE, BRIDGE	1		000	000		1434-401-001-00
18				0:1800 BLUE						
19				0:180 SILVER						
20				FRAME, FRONT	1		000	000		1435-402-210-00

CONTENTS

ENGINE

	PAGE
Fig. 1B CYLINDER HEAD	1
Fig. 2C CYLINDER BLOCK	3
Fig. 3B TIMING GEAR CASE	5
Fig. 4B OIL PAN	7
Fig. 5B OIL PUMP	9
Fig. 6A PISTON	11
Fig. 7 VALVE MECHANISM	13
Fig. 8B OIL FILTER and FUEL FILTER	17
Fig. 9B OIL PIPE	19
Fig. 10B WATER PUMP and FAN	21
Fig. 11B INLET and EXHAUST SYSTEM	23
Fig. 12 FUEL SYSTEM	25
Fig. 13B HANGER and BRACKET	27
Fig. 14J INJECTION PUMP and OTHER PARTS	29
Fig. 15 ELECTRICAL PARTS	31
Fig. 16 STARTER (12V-1.0KW)	33
Fig. 17B GENERATOR (12V-35A)	35
Fig. 18 INJECTION PUMP	37

CONTENTS

CHASSIS

	PAGE
Fig. 19 RADIATOR	43
Fig. 20 MUFFLER and AIR CLEANER	45
Fig. 21 FUEL TANK	47
Fig. 22 BATTERY	51
Fig. 23 THROTTLE LEVER	53
Fig. 24 CLUTCH	55
Fig. 25 CLUTCH PEDAL	57
Fig. 26 FRONT TRANSMISSION CASE	59
Fig. 27 MAIN SHAFT	61
Fig. 28 COUNTER SHAFT	63
Fig. 29 P.T.O. SHAFT	65
Fig. 30 CHANGE LEVER	67
Fig. 31 CHANGE SHIFTER	71
Fig. 32 REAR TRANSMISSION CASE	75
Fig. 33 DIFF-CASE	77
Fig. 34 REAR AXLE	79
Fig. 35 BRAKE	81
Fig. 36 BRAKE PEDALS	83
Fig. 37 PARKING BRAKE	85
Fig. 38 REAR WHEEL	87
Fig. 39 REAR HITCH	91
Fig. 40 AXLE BRACKET (2WD)	93
Fig. 41 FRONT AXLE (2WD)	95
Fig. 42 STEERING WHEEL	99
Fig. 43 FRONT WHEEL (2WD)	101
Fig. 44 AXLE BRACKET (4WD)	103
Fig. 45 FRONT AXLE (1) (4WD)	105

	PAGE
Fig. 46 FRONT AXLE (2) (4WD)	109
Fig. 47 FRONT AXLE (3) (4WD)	111
Fig. 48 FRONT WHEEL (4WD)	117
Fig. 49 CYLINDER CASE	119
Fig. 50 LIFT ARM	121
Fig. 51 POSITION CONTROL	123
Fig. 52 HYDRULIC PIPING	127
Fig. 53 THREE POINT LINKAGE	129
Fig. 54 BONNET	133
Fig. 55 METER PANEL and FAN COVER	141
Fig. 56 FENDER and STEP	143
Fig. 56A FENDER and STEP	147
Fig. 57 LEVER GUIDE	151
Fig. 58 SEAT	153
Fig. 58A SEAT	157
Fig. 59 ELECTRICAL SYSTEM (1)	161
Fig. 59A ELECTRICAL SYSTEM (2)	163
Fig. 60 ELECTRICAL SYSTEM (3)	167
Fig. 62 MARKS	171
Fig. 63 TOOLS	177
Fig. 64 DRAFT CONTROL SET (OPTION)	179
Fig. 65 FRONT PTO UNIT (1) (OPTION)	183
Fig. 66 FRONT PTO UNIT (2) (OPTION)	187
Fig. 67 WEIGHT (OPTION E21, 41, 51)	189
Fig. 68 STEERING ASSY	191
Fig. 69 CONTROL VALVE ASSY	193
Fig. 70 WIRING DIAGRAM	195

TE3210

