



2009 Dyna Models Service Manual

99481-09

©2008 H-D.

IMPORTANT NOTICE

Harley-Davidson motorcycles conform to all applicable U.S.A. Federal Motor Vehicle Safety Standards and U.S.A. Environmental Protection Agency regulations effective on the date of manufacture.

To maintain the safety, dependability, and emission and noise control performance, it is essential that the procedures, specifications and service instructions in this manual are followed.

Any substitution, alteration or adjustment of emission system and noise control components outside of factory specifications may be prohibited by law.

Harley-Davidson Motor Company



2009 Dyna Models Service Manual

©2008 H-D.
ALL RIGHTS RESERVED
99481-09

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

READER COMMENTS

The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

Please list the page, item, and part number(s) of any errors you find in this manual.

Please tell us how we can improve this manual.

Occupation:

Name:

Dealership:

Street:

Department:

City:

State:

Zip:

2009 Dyna Models Service Manual (99481-09)

Please clip out and mail to:

Service Communications Department

Harley-Davidson Motor Company

P.O. Box 653

Milwaukee, WI USA 53201

NOTES

ABOUT THIS MANUAL

GENERAL

This Service Manual has been prepared with two purposes in mind. First, it will acquaint the user with the construction of the Harley-Davidson product and assist in the performance of basic maintenance and repair. Secondly, it will introduce to the professional Harley-Davidson Technician the latest field-tested and factory-approved major repair methods. We sincerely believe that this Service Manual will make your association with Harley-Davidson products more pleasant and profitable.

HOW TO USE YOUR SERVICE MANUAL

Refer to the table below for the content layout of this manual.

NO.	CHAPTER
1	Maintenance
2	Chassis
3	Engine
4	Fuel System
5	Drive
6	Transmission
7	Electrical
A	Appendix A Connector Repair
B	Appendix B Wiring
C	Appendix C Conversions
D	Appendix D Glossary

Use the TABLE OF CONTENTS (which follows this FOREWORD) and the INDEX (at the back of this manual) to quickly locate subjects. Sections and topics in this manual are sequentially numbered for easy navigation.

For example, a cross-reference shown as **2.1 SPECIFICATIONS** refers to chapter 2 CHASSIS, heading 2.1 SPECIFICATIONS.

For quick and easy reference, all pages contain a section number followed by a page number. For example, **page 3-5** refers to page 5 in section 3.

A number of acronyms and abbreviations are used in this document. See the [D.1 GLOSSARY](#) for a list of acronyms, abbreviations and definitions.

PREPARATION FOR SERVICE

WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

Good preparation is very important for efficient service work. A clean work area at the start of each job will allow you to perform the repair as easily and quickly as possible, and will reduce the incidence of misplaced tools and parts. A motorcycle that is excessively dirty should be cleaned before work starts. Cleaning will occasionally uncover sources of trouble. Tools, instruments and any parts needed for the job should be gathered before work is started. Interrupting a job to locate tools or parts is a distraction and causes needless delay.

NOTES

- To avoid unnecessary disassembly, carefully read all relative service information before repair work is started.
- In figure legends, the number which follows the name of a part indicates the quantity necessary for one complete assembly.
- When servicing a vehicle equipped with the Harley-Davidson Smart Security System (H-DSSS), you must first disarm the security system. Either keep the fob in close proximity to the vehicle, or use Digital Technician II to disable the security system while the vehicle is being serviced and re-enable the system after service is completed.

SERVICE BULLETINS

In addition to the information presented in this Service Manual, Harley-Davidson Motor Company will periodically issue Service Bulletins to Harley-Davidson dealers. Service Bulletins cover interim engineering changes and supplementary information. Consult the Service Bulletins to keep your product knowledge current and complete.

USE GENUINE REPLACEMENT PARTS

WARNING

Do not use aftermarket parts and custom made front forks which can adversely affect performance and handling. Removing or altering factory installed parts can adversely affect performance and could result in death or serious injury. (00001a)

To ensure satisfactory and lasting repairs, carefully follow the Service Manual instructions and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON stand more than 100 years of design, research, manufacturing, testing and inspecting experience. This is your assurance that the parts you are using will fit right, operate properly and last longer.

WARNINGS AND CAUTIONS

Statements in this service manual preceded by the following words are of special significance.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140a)

NOTE

Refers to important information, and is placed in italic type. It is recommended that you take special notice of these items.

Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this service manual are effective methods for performing service operations.

WARNING

Always wear proper eye protection when using hammers, arbor or hydraulic presses, gear pullers, spring compressors, slide hammers and similar tools. Flying parts could result in death or serious injury. (00496b)

Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended. It is important to note that some warnings against the use of specific service methods, which could damage the motorcycle or render it unsafe, are stated in this service manual. However, please remember that these warnings are not all-inclusive. Inadequate safety precautions could result in death or serious injury.

Since Harley-Davidson could not possibly know, evaluate or advise the service trade of all possible ways in which service might be performed, or of the possible hazardous consequences of each method, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized as a result. Failure to do so could result in death or serious injury.

PRODUCT REFERENCES

WARNING

Read and follow warnings and directions on all products. Failure to follow warnings and directions can result in death or serious injury. (00470b)

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be substituted.

Kent-Moore Products

All tools mentioned in this manual with an "HD", "J" or "B" preface must be ordered through SPX Kent-Moore. For ordering

information or product returns, warranty or otherwise, visit www.spx.com.

Loctite Sealing and Threadlocking Products

Some procedures in this manual call for the use of Loctite products. If you have any questions regarding Loctite product usage or retailer/wholesaler locations, please contact Loctite Corp. at www.loctite.com.

PRODUCT REGISTERED MARKS

Allen, Amp Multilock, Bluetooth, Brembo, Delphi, Deutsch, Dunlop, Dynojet, Fluke, G.E. Versilube, Gunk, Hydroseal, Hylomar, Kevlar, Lexan, Loctite, Lubriplate, Keps, K&N, Magnaflux, Marson Thread-Setter Tool Kit, MAXI fuse, Molex, MPZ, Multilock, Novus, Packard, Pirelli, Permatex, Philips, PJ1, Pozidriv, Robinair, S100, Sems, Snap-on, Teflon, Threadlocker, Torca, Torco, TORX, Tufoil, Tyco, Ultratorch, Velcro, X-Acto, and XM Satellite Radio are among the trademarks of their respective owners.

H-D MICHIGAN, INC. TRADEMARK INFORMATION

Harley, Harley-Davidson, H-D, Bar & Shield, Cross Bones, Digital Tech, Digital Technician, Digital Technician II, Dyna, Electra Glide, Evolution, Fat Bob, Fat Boy, Glaze, Gloss, H-D, H-Dnet.com, HD, Harley, Harley-Davidson, Heritage Softail, Low Rider, Night Rod, Nightster, Night Train, Profile, Revolution, Road Glide, Road King, Road Tech, Rocker, Softail, Sportster, Street Glide, Street Rod, Sun Ray, Sunwash, Tech Link, Twin Cam 88, Twin Cam 88B, Twin Cam 96, Twin Cam 96B, Twin Cam 103, Twin Cam 103B, Twin Cam 110, Twin Cam 110B, Tour-Pak, Screamin' Eagle, Softail, Super Glide, SYN3, Ultra Classic, V-Rod, VRSC and Harley-Davidson Genuine Motor Parts and Genuine Motor Accessories are among the trademarks of H-D Michigan, Inc.

CONTENTS

All photographs, illustrations and procedures may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip Type Seals.....	1-4
O-Rings (Preformed Packings).....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Exhaust System Leakage.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 MAINTENANCE SCHEDULE

General.....1-7

1.4 FUEL AND OIL

Fuel.....	1-10
Gasoline Blends.....	1-10
Engine Lubrication.....	1-10
Winter Lubrication.....	1-11

1.5 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-12
Type of Oil.....	1-12
Checking with Cold Engine.....	1-12
Checking with Warm Engine.....	1-12
Changing Oil and Filter.....	1-13

1.6 BULB REQUIREMENTS

General.....	1-15
--------------	------

1.7 BRAKES

Fluid Inspection.....	1-16
Rear Pedal Height.....	1-16

1.8 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-19

1.9 TIRES AND WHEELS

Tires.....	1-20
Tire Replacement.....	1-20
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21

1.10 PRIMARY CHAIN

General.....	1-22
Changing Primary Chaincase Lubricant.....	1-22

1.11 TRANSMISSION LUBRICANT

Changing Transmission Lubricant.....	1-24
--------------------------------------	------

1.12 CLUTCH

Adjustment.....	1-25
-----------------	------

1.13 REAR BELT AND SPROCKETS

General.....	1-27
Cleaning.....	1-27
Inspection.....	1-27
Sprockets.....	1-27
Rear Belt.....	1-27

1.14 REAR BELT DEFLECTION

Inspection.....	1-29
Adjustment.....	1-30

1.15 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-31
Inspection and Lubrication.....	1-31
Adjustment.....	1-31

1.16 BLEEDING BRAKES

General.....	1-32
Procedure.....	1-32

1.17 BRAKE PADS AND DISCS

Inspection.....	1-33
Brake Pads.....	1-33
Brake Disc.....	1-33
Brake Pad Replacement.....	1-33
Rear Brake Caliper.....	1-33
Front Brake Caliper.....	1-34

1.18 BATTERY MAINTENANCE

General.....	1-36
Cleaning and Inspection.....	1-37
Voltmeter Test.....	1-37
Voltmeter Test.....	1-37
Charging Battery.....	1-37
Safety Precautions.....	1-37
Using a Battery Charger.....	1-37
Disconnection and Removal.....	1-38
Storage.....	1-39
Installation and Connection.....	1-39

TABLE OF CONTENTS

1.19 SUSPENSION ADJUSTMENTS

Rear Shock Preload Adjustment.....	1-41
------------------------------------	------

1.20 SPARK PLUGS

Inspection.....	1-42
Spark Plug Cable Inspection.....	1-42

1.21 STEERING HEAD BEARINGS

Adjustment.....	1-44
Bearing Adjustment (Fall Away).....	1-44
Lubrication.....	1-44

1.22 FRONT FORK OIL

Replacing Fork Oil.....	1-45
-------------------------	------

1.23 CABLE AND CHASSIS LUBRICATION

General.....	1-46
Cables and Hand Levers.....	1-46
Jiffy Stand.....	1-46

1.24 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-47
Adjustment.....	1-47
All Models.....	1-47

1.25 CRITICAL FASTENERS

Inspection.....	1-49
Checking Torques on Fasteners.....	1-49

1.26 ENGINE MOUNTS

Inspection.....	1-50
-----------------	------

1.27 STORAGE

General.....	1-51
Placing in Storage.....	1-51
Removal from Storage.....	1-51

1.28 TROUBLESHOOTING

General.....	1-53
Engine.....	1-53
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-53
Engine Turns Over But Does Not Start.....	1-53
Starts Hard.....	1-53
Starts But Runs Irregularly or Misses.....	1-53
Spark Plug Fouls Repeatedly.....	1-53
Pre-Ignition or Detonation (Knocks or Pings).....	1-53
Overheating.....	1-54
Valve Train Noise.....	1-54
Excessive Vibration.....	1-54
Check Engine Light Illuminates During Operation.....	1-54
Lubrication System.....	1-54
Oil Does Not Return To Oil Pan.....	1-54
Engine Uses Too Much Oil Or Smokes Excessively.....	1-54
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-54
Low Oil Pressure.....	1-54
High Oil Pressure.....	1-54
Electrical System.....	1-54
Alternator Does Not Charge.....	1-54

Alternator Charge Rate Is Below Normal.....	1-55
Speedometer Operates Erratically.....	1-55
Transmission.....	1-55
Shifts Hard.....	1-55
Jumps Out Of Gear.....	1-55
Clutch Slips.....	1-55
Clutch Drags Or Does Not Release.....	1-55
Clutch Chatters.....	1-55
Handling.....	1-55
Irregularities.....	1-55
Brakes.....	1-55
Brake Does Not Hold Normally.....	1-55

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

Specifications.....	2-4
Chassis Specifications.....	2-4
Tire Specifications.....	2-5

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

General.....	2-7
--------------	-----

2.4 FRONT WHEEL

Removal.....	2-9
Disassembly.....	2-9
Cast Wheel.....	2-9
Cast Wheel, Dual Brakes.....	2-9
Laced Wheel.....	2-9
Cleaning and Inspection.....	2-12
Assembly.....	2-12
Cast Wheel.....	2-13
Laced Wheel.....	2-13
Installation.....	2-13

2.5 REAR WHEEL

Removal.....	2-15
Disassembly.....	2-15
Cleaning and Inspection.....	2-16
Assembly.....	2-16
Installation.....	2-17

2.6 SEALED WHEEL BEARINGS

Inspection.....	2-18
Removal.....	2-18
Installation.....	2-19

2.7 WHEEL LACING: 17 INCH RIM

General.....	2-21
Procedure.....	2-21

2.8 WHEEL LACING: 19 INCH RIM

Procedure.....	2-24
----------------	------

2.9 WHEEL LACING: 21 INCH RIM

General.....	2-28
--------------	------

TABLE OF CONTENTS

Procedure.....	2-28	Inspection.....	2-64
2.10 TRUING LACED WHEELS		Disassembly.....	2-64
General.....	2-31	Steering Head Bearing Race Removal	2-64
Lateral Truing.....	2-31	Assembly.....	2-65
Radial Truing.....	2-32	Installation.....	2-65
2.11 CHECKING CAST WHEEL RUNOUT		2.20 BELT GUARD	
General.....	2-34	Removal.....	2-66
Lateral Runout.....	2-34	Installation.....	2-66
Radial Runout.....	2-34	2.21 DEBRIS DEFLECTOR	
2.12 VEHICLE ALIGNMENT		Removal.....	2-67
Inspection.....	2-35	Installation.....	2-67
2.13 FRONT BRAKE MASTER CYLINDER		2.22 THROTTLE CONTROL	
General.....	2-37	Removal/Disassembly.....	2-68
Removal and Disassembly.....	2-37	Cleaning and Inspection.....	2-68
Cleaning and Inspection.....	2-39	Assembly/Installation.....	2-68
Assembly and Installation.....	2-39	Throttle Cable Routing.....	2-68
2.14 FRONT BRAKE CALIPER		2.23 REAR SHOCK ABSORBERS	
Removal.....	2-41	General.....	2-70
Disassembly.....	2-41	Removal.....	2-70
Cleaning, Inspection and Repair.....	2-43	Inspection.....	2-70
Assembly.....	2-44	Installation.....	2-70
Installation.....	2-44	2.24 REAR FORK	
2.15 REAR BRAKE MASTER CYLINDER		Removal.....	2-71
General.....	2-46	Disassembly.....	2-72
Removal.....	2-46	Cleaning and Inspection.....	2-72
Disassembly.....	2-47	Assembly.....	2-72
Cleaning and Inspection.....	2-48	Installation.....	2-72
Assembly.....	2-48	2.25 CLUTCH CONTROL	
Installation.....	2-48	Removal.....	2-73
2.16 REAR BRAKE CALIPER		Installation.....	2-73
Removal.....	2-50	2.26 HANDLEBARS: ALL BUT FXDB/FXDF	
Disassembly.....	2-50	Removal.....	2-74
Cleaning, Inspection and Repair.....	2-52	All Models.....	2-74
Assembly.....	2-53	FXD/FXDC Models.....	2-74
Installation.....	2-53	FXDL Models.....	2-74
2.17 TIRES		Installation.....	2-75
General.....	2-55	FXD/FXDC Models.....	2-75
Removal.....	2-55	FXDL Models.....	2-75
Cleaning, Inspection and Repair.....	2-56	All Models.....	2-76
Installation.....	2-56	2.27 HANDLEBARS: FXDB/FXDF	
Tube Type Tires.....	2-56	Removal.....	2-77
Tubeless Tires.....	2-57	FXDB.....	2-77
2.18 FRONT FORK		FXDF.....	2-77
Removal.....	2-58	Installation.....	2-78
Disassembly.....	2-58	2.28 FRONT FENDER	
Cleaning and Inspection.....	2-61	Removal.....	2-80
Assembly.....	2-61	Installation.....	2-80
Installation.....	2-62	2.29 REAR FENDER	
2.19 STEERING HEAD		General.....	2-81
Removal.....	2-63	Removal.....	2-81

TABLE OF CONTENTS

Tail Lamp/Turn Signal Harness Routing.....	2-81
Installation.....	2-81
FXDF.....	2-82
Removal.....	2-82
Installation.....	2-82
FXD, FXDC, and FXDL Models.....	2-82
Removal.....	2-82
Installation.....	2-82
FXDB Models.....	2-82
Removal.....	2-82
Installation.....	2-83

2.30 SEAT

Removal.....	2-84
Installation.....	2-84

2.31 JIFFY STAND

Cleaning.....	2-85
Sensor (HDI Models).....	2-85
Removal.....	2-86
Installation.....	2-87

2.32 ENGINE MOUNTS

Removal.....	2-88
Front Isolator.....	2-88
Rear Isolator.....	2-88
Installation.....	2-88
Front Isolator.....	2-88
Rear Isolator.....	2-88

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	3-1
---	-----

3.2 SPECIFICATIONS

Specifications.....	3-3
---------------------	-----

3.3 SERVICE WEAR LIMITS

General.....	3-5
--------------	-----

3.4 ENGINE OIL FLOW

Oil Feed.....	3-7
Top End.....	3-7
Bottom End.....	3-9
Oil Return.....	3-11

3.5 OIL PUMP OPERATION

General.....	3-13
Operation.....	3-13

3.6 BREATHER OPERATION

General.....	3-15
--------------	------

3.7 OIL PRESSURE

Oil Pressure Indicator Lamp.....	3-16
Checking Oil Pressure.....	3-16

3.8 TROUBLESHOOTING

Diagnosing Valve Train Noise.....	3-17
-----------------------------------	------

Compression Test.....	3-17
Cylinder Leakdown Test.....	3-17
Diagnosing Smoking Engine or High Oil Consumption.....	3-18
Check Prior To Cylinder Head Removal.....	3-18
Check After Cylinder Head Removal.....	3-18

3.9 HOW TO USE THIS SECTION

Top End Repair.....	3-19
Bottom End Repair.....	3-19
Typical Symptoms.....	3-19

3.10 TOP END SERVICE

Engine in Chassis.....	3-20
Engine Removed from Chassis.....	3-21

3.11 BOTTOM END SERVICE

Engine in Chassis.....	3-22
Engine Removed From Chassis.....	3-23

3.12 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....	3-24
----------------	------

3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....	3-25
----------------	------

3.14 REMOVING ENGINE FROM CHASSIS

Procedure.....	3-26
----------------	------

3.15 INSTALLING ENGINE IN CHASSIS

Procedure.....	3-27
----------------	------

3.16 TOP END OVERHAUL: DISASSEMBLY

General.....	3-29
Rocker Covers.....	3-29
Rocker Arm Support Plate.....	3-29
Push Rods, Lifters and Covers.....	3-31
Cylinder Head.....	3-32
Cylinder.....	3-33
Piston.....	3-33

3.17 TOP END OVERHAUL: ASSEMBLY

General.....	3-35
Piston.....	3-35
Cylinder.....	3-36
Cylinder Head.....	3-38
Push Rods, Lifters and Covers.....	3-42
Rocker Arm Support Plate.....	3-43
Breather Assembly.....	3-44

3.18 BOTTOM END OVERHAUL: DISASSEMBLY

General.....	3-46
Cam Support Plate and Cover.....	3-46
Prepare Engine.....	3-46
Cam Chain and Sprockets.....	3-46
Cam Support Plate.....	3-47
Crankcase.....	3-48

3.19 BOTTOM END OVERHAUL: ASSEMBLY

General.....	3-50
Crankcase.....	3-50
Cam Support Plate and Cover.....	3-52

3.20 BREATHER ASSEMBLY

Removal Overview.....	3-57
Disassembly.....	3-57
Cleaning and Inspection.....	3-57
Assembly.....	3-57
Installation Overview.....	3-57

3.21 ROCKER ARM SUPPORT PLATE

Removal Overview.....	3-58
Disassembly.....	3-58
Cleaning and Inspection.....	3-58
Inspection.....	3-58
Rocker Shaft Fit.....	3-58
Rocker Arm Shaft to Bushing.....	3-59
Replace Rocker Arm Bushings.....	3-59
Assembly.....	3-60
Installation Overview.....	3-60

3.22 PUSH RODS, LIFTERS AND COVERS

Removal Overview.....	3-62
Disassembly.....	3-62
Cleaning and Inspection.....	3-62
Lifter Inspection.....	3-63
Assembly.....	3-63
Installation Overview.....	3-64

3.23 CYLINDER HEAD

Removal Overview.....	3-65
Disassembly.....	3-65
Cleaning.....	3-66
Inspection.....	3-67
Cylinder Head.....	3-67
Valve Guides.....	3-67
Valves.....	3-67
Valve Springs.....	3-67
Tapered Keepers.....	3-68
Valve Seats.....	3-68
Valve Guide Replacement.....	3-68
Removal.....	3-68
Installation.....	3-69
Valve and Seat Refacing.....	3-72
Assembly.....	3-74
Installation Overview.....	3-75

3.24 CYLINDER

Removal Overview.....	3-76
Cleaning.....	3-76
Inspection.....	3-77
Deglazing Cylinder.....	3-78
Boring and Honing Cylinder.....	3-79
Installation Overview.....	3-79

3.25 PISTON

Removal Overview.....	3-80
Disassembly.....	3-80
Piston Rings.....	3-80

Cleaning.....	3-80
Inspection.....	3-81
Assembly.....	3-82
Checking Piston Ring Gap.....	3-82
Installing Piston Rings.....	3-83
Installation Overview.....	3-84

3.26 CAM SUPPORT PLATE AND COVER

Removal Overview.....	3-85
Camshafts.....	3-85
Removal.....	3-85
Assembly.....	3-85
Oil Pressure Relief Valve.....	3-87
Removal.....	3-87
Installation.....	3-87
Inspection.....	3-87
Cam Needle Bearings.....	3-87
Removal.....	3-87
Installation.....	3-89
Cleaning and Inspection.....	3-90
Oil Pressure Valve.....	3-90
Cam Support Plate.....	3-90
Installation Overview.....	3-90

3.27 OIL PUMP

Removal Overview.....	3-91
Cleaning and Inspection.....	3-91
Installation Overview.....	3-91

3.28 CRANKCASE

Removal Overview.....	3-92
Right Crankcase Half.....	3-92
Main Bearing Removal.....	3-92
Main Bearing Installation.....	3-92
Piston Jets Removal.....	3-93
Piston Jets Installation.....	3-93
Left Crankcase Half.....	3-93
Main Bearing Removal.....	3-93
Main Bearing Installation.....	3-95
Sprocket Shaft Bearing Inner Race.....	3-96
Removal.....	3-96
Installation.....	3-97
Cylinder Studs.....	3-98
Removal.....	3-98
Installation.....	3-98
Pipe Plug and Oil Fittings.....	3-99
Removal.....	3-99
Installation.....	3-99
Cleaning and Inspection.....	3-99
Installation Overview.....	3-99

3.29 FLYWHEEL AND CONNECTING RODS

Removal Overview.....	3-100
Inspection.....	3-100
Installation Overview.....	3-100

3.30 OIL PAN

Removal.....	3-101
Installation.....	3-101

TABLE OF CONTENTS

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....4-1

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....4-3

4.3 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....4-4

4.4 IDLE SPEED

General.....4-5

4.5 AIR CLEANER ASSEMBLY

Removal.....4-6

Installation.....4-7

Backplate Assembly: HDI Models.....4-7

4.6 FUEL TANK

General.....4-9

Removal.....4-9

Cleaning and Inspection.....4-11

Installation.....4-11

Vapor Valve.....4-11

4.7 THROTTLE POSITION SENSOR (TPS)

General.....4-12

Removal.....4-12

Installation.....4-12

4.8 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....4-13

Removal.....4-13

Installation.....4-13

4.9 ENGINE TEMPERATURE SENSOR (ET)

General.....4-14

Removal.....4-14

Installation.....4-15

4.10 INDUCTION MODULE

Removal.....4-16

Installation.....4-17

4.11 IDLE AIR CONTROL (IAC)

General.....4-18

Removal.....4-18

Installation.....4-18

4.12 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....4-19

Removal.....4-19

Installation.....4-19

4.13 OXYGEN SENSOR

General.....4-20

Removal.....4-20

Installation.....4-20

4.14 FUEL INJECTORS

General.....4-21

Removal.....4-21

Installation.....4-21

4.15 FUEL PUMP

General.....4-23

Removal.....4-23

Disassembly/Assembly.....4-25

Fuel Filter.....4-25

Regulator.....4-25

Inlet Sock.....4-26

Fuel Pump.....4-27

Installation.....4-27

4.16 FUEL PRESSURE TEST

General.....4-31

Testing.....4-31

4.17 EXHAUST SYSTEM

Removal: All but FXDF.....4-33

Disassembly: All but FXDF.....4-35

Assembly: All but FXDF.....4-35

Installation: All but FXDF.....4-35

Removal: FXDF.....4-36

Installation: FXDF.....4-37

4.18 INTAKE LEAK TEST

General.....4-39

Leak Tester.....4-39

Parts List.....4-39

Tester Assembly.....4-39

Tester Adjustment.....4-39

Procedure.....4-39

4.19 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....4-41

Charcoal Canister.....4-41

Removal.....4-41

Installation.....4-42

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....5-1

5.2 SPECIFICATIONS: DRIVE

Specifications.....5-2

5.3 PRIMARY CHAINCASE COVER

General.....5-3

Removal.....5-3

Installation.....5-3

5.4 DRIVE COMPONENTS

Removal.....	5-4
Installation.....	5-5

5.5 PRIMARY CHAINCASE HOUSING

Removal.....	5-9
Inspection.....	5-9
Mainshaft Bearing and Lip Seal.....	5-9
Removal.....	5-9
Installation.....	5-9
Mainshaft Bearing Inner Race.....	5-10
Removal.....	5-10
Installation.....	5-11
Shifter Shaft Bushing.....	5-11
Installation.....	5-12

5.6 CLUTCH

Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-16
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17

5.7 TRANSMISSION SPROCKET

Removal.....	5-19
Cleaning and Inspection.....	5-19
Installation.....	5-20

5.8 DRIVE BELT

Removal.....	5-22
Installation.....	5-22

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-2
Service Wear Limits.....	6-2

6.3 TRANSMISSION

Power Flow.....	6-3
Neutral.....	6-3
1st Gear.....	6-3
2nd Gear.....	6-3
3rd Gear.....	6-3
4th Gear.....	6-3
5th Gear.....	6-3
6th Gear.....	6-3

6.4 SHIFTER LINKAGE

Adjustment.....	6-5
-----------------	-----

6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....	6-6
Cleaning and Inspection.....	6-7

Assembly and Installation.....	6-7
--------------------------------	-----

6.6 TRANSMISSION ASSEMBLY

Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-13
Replacing Side Door Bearings.....	6-14
Cleaning and Inspection.....	6-15
Assembly.....	6-15
Installing Side Door Bearings.....	6-15
Countershaft.....	6-16
Mainshaft.....	6-16
Shifter Cam/Shifter Forks.....	6-17
Installation.....	6-19

6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-20
Cleaning and Inspection.....	6-21
Needle Bearing Replacement.....	6-22
Installation.....	6-23
Installing Main Drive Gear Bearing.....	6-23
Installing Main Drive Gear.....	6-24
Installing Main Drive Gear Large Seal.....	6-24

6.8 TRANSMISSION CASE

Removal.....	6-27
Installation.....	6-28
Disassembly.....	6-29
Shifter Arm Assembly.....	6-29
Cleaning and Inspection.....	6-29
Assembly.....	6-30
Countershaft Needle Bearing Replacement.....	6-30
Shifter Pawl Lever Assembly.....	6-30

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-3
---------------------	-----

7.3 ELECTRICAL CADDY

Removal.....	7-4
Installation.....	7-4

7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....	7-6
Replacement.....	7-6

7.5 SPARK PLUG CABLES

Removal.....	7-7
Installation.....	7-7

7.6 VOLTAGE REGULATOR

Removal.....	7-8
Installation.....	7-8

TABLE OF CONTENTS

7.7 FUSES AND RELAYS

General.....	7-9
Removal and Installation.....	7-9
Relays.....	7-9
Fuses.....	7-9

7.8 IGNITION SWITCH/FORK LOCK

General.....	7-10
FXD, FXDL, FXDB Models.....	7-10
Removal.....	7-10
Installation.....	7-11
FXDC, FXDF Models (Ignition Switch Only).....	7-13

7.9 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	7-14
Removal.....	7-14
Installation.....	7-14
Battery Cables.....	7-15
Routing.....	7-15

7.10 STARTER

General.....	7-16
Wiring Diagrams.....	7-16
Paint Touch-Up.....	7-16
Removal.....	7-16
Field Coil Assembly.....	7-16
Disassembly.....	7-16
Inspection.....	7-16
Assembly.....	7-17
Drive Assembly.....	7-18
Disassembly.....	7-18
Inspection.....	7-18
Assembly.....	7-18
Installation.....	7-19

7.11 STARTER SOLENOID

Solenoid Assembly.....	7-20
Disassembly.....	7-20
Assembly.....	7-20
Solenoid Plunger.....	7-20
Disassembly.....	7-20
Assembly.....	7-20
Solenoid Contacts.....	7-20
Disassembly.....	7-20
Assembly.....	7-21

7.12 HEADLAMP

General.....	7-23
Bulb Removal.....	7-23
Single Bulb Headlamp.....	7-23
Dual Bulb Headlamp.....	7-24
Bulb Installation.....	7-25
Headlamp Assembly Removal.....	7-25
Headlamp Assembly Installation.....	7-25

7.13 TAIL LAMP

General.....	7-26
Tail Lamp Bulb Replacement: Standard Style.....	7-26
Base Replacement: All But FXDB.....	7-26
Base Replacement: FXDB.....	7-28

7.14 TURN SIGNALS AND RUNNING LIGHTS

Bulb Replacement: Bullet Style.....	7-30
Front Lamp Housing Replacement.....	7-30
Rear Lamp Housing Replacement.....	7-31

7.15 STOP-TAIL-TURN (STT) MODULE: FXDB (DOMESTIC ONLY)

General.....	7-34
STT Module Replacement.....	7-34

7.16 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

Removal.....	7-35
Installation.....	7-35

7.17 CRANK POSITION SENSOR (CKP)

General.....	7-37
Removal.....	7-37
Installation.....	7-37

7.18 ALTERNATOR AND STATOR

Removal.....	7-38
Installation.....	7-38

7.19 FUEL GAUGE

General.....	7-39
All But FXD Models.....	7-39
Removal.....	7-39
Installation.....	7-39
FXD Models.....	7-39
Console Removal.....	7-39
Gauge Removal.....	7-41
Gauge Installation.....	7-41
Console Installation.....	7-41

7.20 FUEL GAUGE SENDER

Removal.....	7-43
Installation.....	7-44

7.21 INSTRUMENTS: FXDC/FXDF

Removal.....	7-46
Speedometer.....	7-46
Installation.....	7-46
Speedometer.....	7-46

7.22 INSTRUMENTS: FXDB/FXDL

Removal.....	7-47
General.....	7-47
Speedometer.....	7-47
Tachometer: FXDL Only.....	7-47
Installation.....	7-47
General.....	7-47
Speedometer.....	7-47
Tachometer: FXDL Only.....	7-47

7.23 INSTRUMENTS: FXD

Removal.....	7-49
Installation.....	7-49

7.24 VEHICLE SPEED SENSOR (VSS)

General.....	7-50
Removal.....	7-50
Installation.....	7-50

7.25 INDICATOR LAMPS

General.....	7-51
Removal.....	7-51
FXDC/FXDF Models.....	7-51
FXDB Models.....	7-51
FXD Models.....	7-52
FXDL Models.....	7-52
Installation.....	7-53
FXDC/FXDF Models.....	7-53
FXDB Models.....	7-53
FXD Models.....	7-53
FXDL Models.....	7-53

7.26 NEUTRAL SWITCH

General.....	7-54
Removal.....	7-54
Installation.....	7-54

7.27 OIL PRESSURE SWITCH

General.....	7-55
Removal.....	7-55
Installation.....	7-55

7.28 REAR STOPLIGHT SWITCH

General.....	7-56
Removal.....	7-56
Installation.....	7-56

7.29 HORN

Inspection.....	7-57
Replacement.....	7-57

7.30 ACTIVE EXHAUST

General.....	7-58
Removal.....	7-58
Repair.....	7-58
Installation.....	7-58

7.31 MAIN WIRING HARNESS

General.....	7-60
Removal.....	7-60
Installation.....	7-62

7.32 HANDLEBAR SWITCH ASSEMBLIES

General.....	7-65
Repair Procedures.....	7-65

7.33 RIGHT HANDLEBAR SWITCH

Removal.....	7-66
Installation.....	7-66
Disassembly.....	7-68
Switch Repair/Replacement.....	7-69
Upper Housing Repair.....	7-69
Lower Housing Repair.....	7-70
Turn-Right Signal Switch.....	7-70

Front Stoplight Switch.....	7-70
Assembly.....	7-70

7.34 LEFT HANDLEBAR SWITCH

Removal.....	7-72
Installation.....	7-72
Disassembly.....	7-73
Switch Repair/Replacement.....	7-73
Upper Housing Repair.....	7-73
Lower Housing Repair.....	7-74
Turn-Left Signal Switch.....	7-74
Clutch Interlock Switch.....	7-74
Assembly.....	7-74

APPENDIX A CONNECTOR REPAIR

A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Terminals from Housing.....	A-1
Inserting Terminals into Housing.....	A-2
Preparing Wire Leads for Crimping.....	A-2
Crimping Terminals to Leads.....	A-3
Inspecting Crimped Terminals.....	A-4

A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....	A-5
General.....	A-5
Disassembly.....	A-5
Assembly.....	A-5

A.3 DELPHI CONNECTORS

Delphi Connector Repair.....	A-6
General.....	A-6
Separating Pin and Socket Housings.....	A-6
Mating Pin and Socket Housings.....	A-6
Removing Socket Terminals.....	A-6
Installing Socket Terminals.....	A-6

A.4 DELPHI MAXI FUSE HOUSING

Delphi Main Fuse Housing Repair.....	A-8
General.....	A-8
Removing Main Fuse.....	A-8
Installing Main Fuse.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....	A-10
General.....	A-10
Separating Pin and Socket Housings.....	A-10
Mating Pin and Socket Housings.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Removing Pin Terminals.....	A-12
Installing Pin Terminals.....	A-12
Crimping Terminals.....	A-13

TABLE OF CONTENTS

A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....	A-14
Preparing Wire Leads for Crimping.....	A-14
Crimping Terminal to Lead.....	A-14
Inspecting Crimps.....	A-14

A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....	A-15
Preparing Wire Leads For Crimping.....	A-15
Adjusting Crimper Tool.....	A-15
Crimping a Barrel Contact To Wire Lead.....	A-15
Inspecting Crimps.....	A-15

A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping a Mini Terminal to Wire Lead.....	A-17
Inspecting Crimps.....	A-17

A.9 MOLEX CONNECTORS

Molex Connector Repair.....	A-18
Separating Pin and Socket Housings.....	A-18
Mating Pin and Socket Housings.....	A-18
Removing Terminals.....	A-18
Installing Terminals.....	A-18
Crimp Terminal to Lead.....	A-19
Prepare Lead.....	A-19
Prepare Tool.....	A-19
Position Terminal in the Punch/Die.....	A-20
Insert Stripped Lead.....	A-20
Crimp Terminal to Lead.....	A-21
Inspect Crimp.....	A-21

A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....	A-22
General.....	A-22
Separating Pin and Socket Housings.....	A-22
Mating Pin and Socket Housings.....	A-22
Removing Socket Terminal.....	A-22
Inserting Socket Terminal.....	A-22

A.11 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24
Crimping Terminals.....	A-24

A.12 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminals.....	A-25
Installing Socket Terminals.....	A-25

A.13 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-26
General.....	A-26
Separating Pin and Socket Housings.....	A-26
Mating Pin and Socket Housings.....	A-26
Removing Socket Terminal.....	A-26
Installing Socket Terminal.....	A-26

A.14 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-27
Matching Terminal To Crimper.....	A-27
Preparing Wire Lead.....	A-27
Crimping Wire Core.....	A-27
Crimping Insulation/Seal.....	A-27
Inspecting Crimps.....	A-28

A.15 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-29
General.....	A-29
Separating Socket Housing From ECM.....	A-29
Mating Socket Housing To ECM.....	A-29
Removing Socket Terminal.....	A-29
Installing Socket Terminal.....	A-29
Crimping Terminals.....	A-29

A.16 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-31
General.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminal.....	A-31
Installing Terminal.....	A-32
Preparing Wire Leads for Crimping.....	A-32
Crimping Terminals.....	A-32
Inspecting Crimps.....	A-32

A.17 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-34
General.....	A-34
Preparing Wire Leads.....	A-34
Splicing Wire Leads.....	A-34
Inspecting Seals.....	A-34

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2009 Dyna Wiring Diagrams.....	B-4

APPENDIX C CONVERSIONS

C.1 LENGTH CONVERSION

Conversion Table.....C-1

C.2 FLUID CONVERSION

United States System.....C-2

Metric System.....C-2

British Imperial System.....C-2

C.3 TORQUE CONVERSION

United States System.....C-3

Metric System.....C-3

APPENDIX D GLOSSARY

D.1 GLOSSARY

Acronyms and Abbreviations.....D-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....VII

INDEX.....XV