



# DYNA<sup>®</sup> MODELS

2016 HARLEY-DAVIDSON<sup>®</sup> SERVICE MANUAL



# 2016 Harley-Davidson Dyna Models Service Manual

©2015 H-D.  
ALL RIGHTS RESERVED  
99481-16

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE  
<http://www.harley-davidson.com>

# READER COMMENTS

The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

---

---

---

---

---

Please list the page, item, and part number(s) of any errors you find in this manual.

---

---

---

---

---

Please tell us how we can improve this manual.

---

---

---

---

---

Occupation:

---

Name:

Dealership:

---

Street:

Department:

---

City:

State:

Zip:

---

2016 Harley-Davidson Dyna Models Service Manual (99481-16)

Please clip out and mail to:

Service Communications Department

Harley-Davidson Motor Company

P.O. Box 653

Milwaukee, WI USA 53201

# NOTES

---

# ABOUT THIS MANUAL

## GENERAL

### WARNING

The rider's safety depends upon proper motorcycle service and maintenance. If a procedure in this manual is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the procedure. Improper service or maintenance could result in death or serious injury. (00627b)

This service manual has been prepared with the following purposes in mind:

- To acquaint the user with the construction of the Harley-Davidson product and assist in the performance of basic maintenance and repair.
- To introduce the professional Harley-Davidson technician to the latest field-tested and factory-approved major repair methods.

We sincerely believe that this service manual will make your association with Harley-Davidson products more pleasant and profitable.

## HOW TO USE YOUR MANUAL

Refer to the table below for the content layout of this manual.

NO.	CHAPTER
1	Maintenance
2	Chassis
3	Engine
4	Fuel System
5	Drive
6	Transmission
7	Electrical
A	Appendix A Wiring
B	Appendix B Reference

Use the TABLE OF CONTENTS (which follows this FOREWORD) and the INDEX (at the back of this manual) to quickly locate subjects. Chapters and topics in this manual are sequentially numbered for easy navigation.

For example, a cross-reference shown as **2.2 SPECIFICATIONS** refers to chapter 2 CHASSIS, heading 2.2 SPECIFICATIONS.

For quick and easy reference, all pages contain a chapter number followed by a page number. For example, **page 3-5** refers to page 5 in Chapter 3.

A number of acronyms and abbreviations are used in this document. See the B.4 GLOSSARY for a list of acronyms, abbreviations and definitions.

## PREPARATION FOR SERVICE

PART NUMBER	TOOL NAME
HD-48650	DIGITAL TECHNICIAN II

### WARNING

**Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)**

Good preparation is very important for efficient service work. Start each job with a clean work area. This will allow the repair to proceed as smoothly as possible. It will also reduce the incidence of misplaced tools and parts.

Clean a motorcycle that is excessively dirty before work starts. Cleaning will occasionally uncover sources of trouble. Gather any tools, instruments and any parts needed for the job before work begins. Interrupting a job to locate tools or parts is a distraction and causes needless delay.

### NOTES

- *To avoid unnecessary disassembly, carefully read all related service information before repair work begins.*
- *In figure legends, the number which follows the name of a part indicates the quantity necessary for one complete assembly.*
- *When servicing a vehicle equipped with the Harley-Davidson Smart Security System (H-DSSS), first disarm the system. Keep the fob close to the vehicle or use DIGITAL TECHNICIAN II (Part No. HD-48650) to disable the system. Activate the system after service is completed.*

## SERVICE BULLETINS

In addition to the information presented in this manual, Harley-Davidson Motor Company will periodically issue service bulletins to Harley-Davidson dealers. Service bulletins cover interim engineering changes and supplementary information. Consult the service bulletins to keep your product knowledge current and complete.

## USE GENUINE REPLACEMENT PARTS

### WARNING

**Harley-Davidson parts and accessories are designed for Harley-Davidson motorcycles. Using non-Harley-Davidson parts or accessories can adversely affect performance, stability or handling, which could result in death or serious injury. (00001b)**

To achieve satisfactory and lasting repairs, carefully follow the service manual instructions and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON stand more than 100 years of design, research, manufacturing, testing and inspecting experience. This is your assurance that the parts you are using will fit right, operate properly and last longer.

## WARNINGS AND CAUTIONS

Statements in this manual preceded by the following words are of special significance.

### WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

### CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

### NOTICE

**NOTICE** indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140b)

### NOTE

*Refers to important information. It is recommended that you take special notice of these items.*

Proper service and repair are important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this manual are effective methods for performing service operations.

### WARNING

**Always wear proper eye protection when using hammers, arbor or hydraulic presses, gear pullers, spring compressors, slide hammers and similar tools. Flying parts could result in death or serious injury. (00496b)**

Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended. It is important to note that some warnings against the use of specific service methods, which could damage the motorcycle or render it unsafe, are stated in this manual. However, remember that these warnings are not all-inclusive. Inadequate safety precautions could result in death or serious injury.

Since Harley-Davidson could not possibly know, evaluate or advise the service trade of all possible ways in which service might be performed, or of the possible hazardous consequences of each method, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized as a result. Failure to do so could result in death or serious injury.

## PRODUCT REFERENCES

### WARNING

**Read and follow warnings and directions on all products. Failure to follow warnings and directions can result in death or serious injury. (00470b)**

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be substituted.

### Special Tools

All tools mentioned in this manual with a part number beginning with "HD", "J" or "B" must be ordered through your local Harley-Davidson dealer. Special tools may only be purchased, serviced or warranted through a Harley-Davidson dealer.

### LOCTITE Sealing and Threadlocking Products

Some procedures in this manual call for the use of LOCTITE products. If you have any questions regarding LOCTITE product usage or retailer/wholesaler locations, contact Loctite Corp. at [www.loctite.com](http://www.loctite.com).

### PRODUCT REGISTERED MARKS

Apple, Alcantara S.p.A., Allen, Amp Multilock, Bluetooth, Brembo, City Navigator, Delphi, Deutsch, Dunlop, Dynojet, Fluke, G.E. Versilube, Garmin, Gunk, Hydroseal, Hylomar, iPhone, iPod, Kevlar, Lexan, Loctite, Lubriplate, Keps, K&N, Magnaflux, Marson Thread-Setter Tool Kit, MAXI fuse, Molex, Michelin, MPZ, Multilock, nano, NGK, Novus, Packard, Pirelli, Permatex, Philips, PJ1, Pozidriv, Road Tech, Robinair, S100, Sems, SiriusXM, Snap-on, Teflon, Threadlocker, Torca, Torco, TORX, Tufoil, Tyco, Ultratorch, Velcro, X-Acto, XM Satellite Radio, and zūmo are among the trademarks of their respective owners.

### H-D U.S.A., LLC TRADEMARK INFORMATION

Bar & Shield, Boom!, Cross Bones, Cruise Drive, CVO, Digital Tech, Digital Technician, Digital Technician II, Dyna, Electra Glide, Evolution, Fat Bob, Fat Boy, Forty-Eight, Glide, Gloss, H-D, H-Dnet.com, Harley, Harley-Davidson, HD, Heritage Softail, Iron 883, Low Rider, Night Rod, Nightster, Night Train, Profile, Reflex, Revolution, Road Glide, Road King, Road Tech, Rocker, Screamin' Eagle, Seventy-Two, Softail, Sportster, Street Glide, Street Rod, Sun Ray, Sunwash, Super Glide, SuperLow, Supersmart, Switchback, SYN3, TechLink, TechLink II, Tour-Pak, Tri Glide, Twin Cam 88, Twin Cam 88B, Twin Cam 96, Twin Cam 96B, Twin Cam 103, Twin Cam 103B, Twin Cam 110, Twin Cam 110B, Twin-Cooled, Ultra Classic, V-Rod, VRSC and Harley-Davidson Genuine Motor Parts and Genuine Motor Accessories are among the trademarks of H-D U.S.A., LLC.

## **CONTENTS**

---

All photographs, illustrations and procedures may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

# NOTES

---



# MAINTENANCE

## 1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

## 1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Disposal and Recycling.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Cleaning.....	1-5
Protecting Rubber Parts.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-6
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

## 1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

## 1.4 MAINTENANCE SCHEDULE

General.....	1-9
--------------	-----

## 1.5 ENGINE OIL AND FILTER

Check Engine Oil Level.....	1-14
Oil Level Cold Check.....	1-14
Oil Level Hot Check.....	1-14
Changing Oil and Oil Filter.....	1-14

## 1.6 AIR CLEANER AND EXHAUST SYSTEM

Removal, All But HO103.....	1-16
Installation, All But HO103.....	1-17
Removal, HO103.....	1-17

Installation, HO103.....	1-18
Check Exhaust System Leakage.....	1-18
Exhaust System Leakage.....	1-18

## 1.7 TIRES AND WHEELS

Tires.....	1-19
Tire Replacement.....	1-19
Dunlop.....	1-20
Michelin.....	1-20
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-21
Adjust Wheel Spokes.....	1-21

## 1.8 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Change Primary Chaincase Lubricant.....	1-23

## 1.9 TRANSMISSION LUBRICANT

Check Transmission Lubricant.....	1-25
Change Transmission Lubricant.....	1-25

## 1.10 CLUTCH

Adjustment.....	1-27
-----------------	------

## 1.11 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection.....	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Check Drive Belt Deflection.....	1-30
Adjusting Belt Deflection.....	1-31

## 1.12 THROTTLE CABLES

Cable Inspection and Lubrication.....	1-33
Cable Adjustment.....	1-33
Operation.....	1-33
Adjustment.....	1-33

## 1.13 CABLE AND CHASSIS LUBRICATION

General.....	1-35
Cables and Hand Levers.....	1-35
Jiffy Stand.....	1-35

## 1.14 BRAKES

Fluid Inspection.....	1-36
Rear Pedal Height.....	1-36
Inspect Brake Lines.....	1-36

## 1.15 BRAKE PADS AND DISCS

Inspection.....	1-38
Brake Pads.....	1-38
Brake Disc.....	1-38
Brake Pad Replacement.....	1-39
Rear Brake Caliper.....	1-39
Front Brake Caliper.....	1-39

## 1.16 SPARK PLUGS

Inspection.....	1-41
-----------------	------

## 1.17 STEERING HEAD BEARINGS

Adjustment.....	1-42
Bearing Adjustment (Measurement).....	1-42
Bearing Adjustment (Fall-Away).....	1-42

# TABLE OF CONTENTS

Lubrication.....	1-43
<b>1.18 BATTERY MAINTENANCE</b>	
General.....	1-44
Cleaning and Inspection.....	1-45
Voltage Test.....	1-45
Charging Battery.....	1-45
Safety Precautions.....	1-45
Using a Battery Charger.....	1-45
Disconnection and Removal.....	1-46
Storage.....	1-47
Installation and Connection.....	1-47
<b>1.19 ENGINE MOUNTS</b>	
Inspection.....	1-48
<b>1.20 HEADLAMP ALIGNMENT</b>	
Headlamp Alignment.....	1-49
Headlamp Adjustment: All BUT FLD and FXDL.....	1-49
Headlamp Adjustment: FLD.....	1-50
Headlamp Adjustment: FXDL.....	1-50
<b>1.21 SUSPENSION ADJUSTMENTS</b>	
Shock Absorber Preload Adjustment.....	1-51
<b>1.22 STORAGE</b>	
General.....	1-52
Placing in Storage.....	1-52
Removal from Storage.....	1-52
<b>1.23 TROUBLESHOOTING</b>	
General.....	1-53
Engine.....	1-53
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-53
Engine Turns Over But Does Not Start.....	1-53
Starts Hard.....	1-53
Starts But Runs Irregularly or Misses.....	1-53
Spark Plug Fouls Repeatedly.....	1-53
Pre-Ignition or Detonation (Knocks or Pings).....	1-53
Overheating.....	1-54
Valve Train Noise.....	1-54
Excessive Vibration.....	1-54
Check Engine Light Illuminates During Operation.....	1-54
Lubrication System.....	1-54
Oil Does Not Return To Oil Pan.....	1-54
Engine Uses Too Much Oil Or Smokes Excessively.....	1-54
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-54
Low Oil Pressure.....	1-54
High Oil Pressure.....	1-54
Electrical System.....	1-54
Alternator Does Not Charge.....	1-54
Alternator Charge Rate Is Below Normal.....	1-54
Speedometer Operates Erratically.....	1-55
Transmission.....	1-55
Shifts Hard.....	1-55
Jumps Out Of Gear.....	1-55
Clutch Slips.....	1-55
Clutch Drags Or Does Not Release.....	1-55
Clutch Chatters.....	1-55

Handling.....	1-55
Irregularities.....	1-55
Brakes.....	1-55
Brake Does Not Hold Normally.....	1-55

## CHASSIS

### 2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

### 2.2 SPECIFICATIONS

Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7

### 2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

Vehicle Identification Number.....	2-9
------------------------------------	-----

### 2.4 FRONT WHEEL

Removal.....	2-11
Disassembly.....	2-11
Cast Wheel.....	2-11
Cast Wheel, Dual Brakes.....	2-11
Laced Wheel.....	2-11
Cleaning and Inspection.....	2-15
Assembly.....	2-16
Cast Wheel.....	2-16
Laced Wheel.....	2-16
Installation.....	2-16

### 2.5 REAR WHEEL

Removal.....	2-18
Disassembly.....	2-18
Cleaning and Inspection.....	2-19
Assembly.....	2-20
Installation.....	2-20

### 2.6 SEALED WHEEL BEARINGS

Inspect.....	2-22
Removal.....	2-22
Installation.....	2-24

### 2.7 WHEEL LACING

Wheel Lacing: Angle Flange Hub.....	2-26
Wheel Lacing: Straight Flange Hub, Single Hole Circle.....	2-27
Wheel Lacing: Straight Flange Hub, Dual Hole Circle.....	2-29

### 2.8 CHECKING AND TRUING WHEELS

General.....	2-31
Checking Wheel Runout.....	2-31
Checking Radial Runout.....	2-31
Checking Lateral Runout.....	2-31
Laced Wheel Rim Offset.....	2-32
True Laced Wheels.....	2-35
Adjust Radial Runout.....	2-35
Adjust Lateral Runout.....	2-35

### 2.9 VEHICLE ALIGNMENT

Inspection.....	2-37
-----------------	------

**2.10 FRONT BRAKE MASTER CYLINDER**

General.....2-39  
 Removal and Disassembly.....2-39  
 Cleaning and Inspection.....2-41  
 Assembly and Installation.....2-41

**2.11 FRONT BRAKE CALIPER**

Removal.....2-43  
 Disassembly.....2-43  
 Cleaning, Inspection and Repair.....2-45  
 Assembly.....2-46  
 Installation.....2-47

**2.12 REAR BRAKE MASTER CYLINDER**

Removal.....2-49  
 Disassembly.....2-51  
 Cleaning and Inspection.....2-52  
 Assembly.....2-52  
 Installation.....2-52

**2.13 REAR BRAKE CALIPER**

Removal.....2-54  
 Disassembly.....2-54  
 Cleaning, Inspection and Repair.....2-56  
 Assembly.....2-56  
 Installation.....2-57

**2.14 BRAKE LINES**

Front Master Cylinder to Front Caliper Line Assembly.....2-58  
     Removal.....2-58  
     Installation.....2-58  
 ABS Module to Front Manifold Brake Lines.....2-58  
     Removal.....2-58  
     Installation.....2-60  
 Rear Master Cylinder to ABS Module.....2-61  
     Removal.....2-61  
     Installation.....2-61  
 ABS Module to Rear Brake Caliper.....2-63  
     Removal.....2-63  
     Installation.....2-63

**2.15 ABS MODULE (EHCU)**

General.....2-65  
 Electro Hydraulic Control Unit (EHCU).....2-65  
     Removal.....2-65  
     Installation.....2-67

**2.16 BLEEDING BRAKES**

General.....2-68  
 Procedure.....2-68

**2.17 TIRES**

General.....2-70  
 Remove.....2-70  
 Clean, Inspect and Repair.....2-70  
 Installation.....2-71  
     Tube Type Tires.....2-71  
     Tubeless Tires.....2-71  
 Check Tire Runout.....2-72  
     Lateral Runout.....2-72  
     Radial Runout.....2-72

Balance Wheel.....2-72  
     Static vs Dynamic.....2-72  
     Weights.....2-73

**2.18 FRONT FORK**

Check For Oil Leak.....2-74  
     Fork Oil Seals.....2-74  
     Check Oil Leak.....2-74  
 Removal.....2-74  
 Disassembly: All But FLD Left Side.....2-74  
 Disassembly: Cartridge Fork (FLD, Left Side).....2-77  
 Cleaning and Inspection.....2-79  
 Assembly: All But FLD Left Side.....2-80  
 Assembly: Cartridge Fork (FLD, Left Side).....2-81  
 Installation.....2-83

**2.19 STEERING HEAD**

Removal: All But FLD.....2-85  
 Removal: FLD.....2-85  
 Inspection.....2-86  
 Disassembly.....2-86  
     Steering Head Bearing Race Removal.....2-86  
 Assembly.....2-86  
 Installation: All but FLD.....2-86  
 Installation: FLD.....2-87

**2.20 BELT GUARD AND DEBRIS DEFLECTOR**

Belt Guard Removal.....2-89  
 Belt Guard Installation.....2-89  
 Debris Deflector Removal.....2-89  
 Debris Deflector Installation.....2-89

**2.21 THROTTLE CONTROL**

Removal/Disassembly.....2-91  
 Cleaning and Inspection.....2-91  
 Assembly/Installation.....2-91  
 Throttle Cable Routing.....2-92

**2.22 REAR SHOCK ABSORBERS**

General.....2-93  
 Removal.....2-93  
 Inspection.....2-93  
 Installation.....2-93

**2.23 REAR FORK**

Removal.....2-94  
 Disassembly.....2-94  
 Cleaning and Inspection.....2-95  
 Assembly.....2-95  
 Installation.....2-95

**2.24 CLUTCH CONTROL**

Removal.....2-96  
 Installation.....2-96

**2.25 HANDLEBAR: FLD**

Removal.....2-97  
 Installation.....2-97  
 Left Hand Grip.....2-98  
     Removal.....2-98

# TABLE OF CONTENTS

Installation.....	2-98
<b>2.26 HANDLEBAR: FXDB, FXDBC, FXDBP, FXDF AND FXDWG</b>	
Removal.....	2-99
FXDB, FXDBC, FXDBP.....	2-99
FXDF and FXDWG.....	2-100
Installation.....	2-101
<b>2.27 HANDLEBAR: FXDL</b>	
Removal.....	2-104
Installation.....	2-104
Handlebar and Riser Adjustment.....	2-106
<b>2.28 FRONT FENDER</b>	
Removal.....	2-107
Installation.....	2-107
<b>2.29 REAR FENDER</b>	
General.....	2-108
Removal.....	2-108
Tail Lamp/Turn Signal Harness Routing.....	2-108
Installation.....	2-108
FXDL.....	2-111
Removal.....	2-111
Installation.....	2-111
FXDB, FXDBC, FXDBP.....	2-111
Removal.....	2-111
Installation.....	2-111
FXDWG.....	2-112
Removal.....	2-112
Sissy Bar.....	2-113
Installation.....	2-113
FLD.....	2-114
Removal.....	2-114
Disassembly.....	2-114
Assembly.....	2-114
Installation.....	2-114
FXDF.....	2-115
Removal.....	2-115
Installation.....	2-115
<b>2.30 SEAT</b>	
Removal.....	2-117
Seat and Seat Strap: All But FXDWG.....	2-117
Seat and Seat Strap: FXDWG.....	2-117
Installation.....	2-118
Seat and Seat Strap: All But FXDWG.....	2-118
Seat and Seat Strap: FXDWG.....	2-118
Lumbar Pad: FXDL.....	2-119
Removal.....	2-119
Installation.....	2-119
<b>2.31 FOOTBOARDS AND FOOTRESTS</b>	
Rider Footboards.....	2-120
Removal.....	2-120
Disassembly.....	2-120
Assembly.....	2-120
Installation.....	2-120
Rider Footrests: Mid Controls.....	2-121
Removal.....	2-121

Installation.....	2-121
Rider Footrests: Forward Controls.....	2-122
Removal.....	2-122
Installation.....	2-122
Passenger Footrests: All But FXDB.....	2-122
Removal.....	2-122
Installation.....	2-122

## 2.32 HEADLAMP NACELLE: FLD

Upper and Lower Nacelle.....	2-124
Removal.....	2-124
Installation.....	2-124

## 2.33 WINDSHIELD: FLD

Windshield.....	2-125
Removal.....	2-125
Installation.....	2-125
Windshield Window.....	2-125
Removal.....	2-125
Installation.....	2-127

## 2.34 SADDLEBAGS: FLD

Saddlebag.....	2-128
Removal.....	2-128
Installation.....	2-128
Disassembly.....	2-128
Assembly.....	2-129
Saddlebag Lid.....	2-130
Seal.....	2-130
Disassembly.....	2-131
Assembly.....	2-131

## 2.35 JIFFY STAND

Cleaning.....	2-133
Jiffy Stand Sensor: HDI Models.....	2-135
Removal.....	2-135
Installation.....	2-135

## 2.36 FORK LOCK

Removal.....	2-137
Installation.....	2-137

## 2.37 ENGINE MOUNTS

Removal.....	2-139
Front Isolator.....	2-139
Rear Isolator.....	2-139
Installation.....	2-139
Front Isolator.....	2-139
Rear Isolator.....	2-139

## 2.38 SAREE GUARD: INDIA MODELS

Replacement.....	2-141
Removal.....	2-141
Installation.....	2-141

## 2.39 MEDALLIONS, BADGES AND TANK EMBLEMS

Removal.....	2-142
Installation.....	2-142

**ENGINE**

**3.1 FASTENER TORQUE VALUES**

Fastener Torque Values in this Chapter.....3-1

**3.2 SPECIFICATIONS**

Specifications.....3-3

**3.3 SERVICE WEAR LIMITS**

General.....3-5

**3.4 ENGINE OIL FLOW**

Oil Feed.....3-7

Top End.....3-7

Bottom End.....3-9

Oil Return.....3-11

**3.5 OIL PUMP OPERATION**

General.....3-12

Operation.....3-12

**3.6 BREATHER OPERATION**

General.....3-14

**3.7 OIL PRESSURE**

Oil Pressure Indicator Lamp.....3-15

Checking Oil Pressure.....3-15

**3.8 TROUBLESHOOTING**

Diagnosing Valve Train Noise.....3-17

Compression Test.....3-17

Cylinder Leakdown Test.....3-18

Diagnosing Smoking Engine or High Oil Consumption.....3-18

    Check Before Cylinder Head Removal.....3-18

    Check After Cylinder Head Removal.....3-18

**3.9 HOW TO USE THIS SECTION**

Top End Repair.....3-19

Bottom End Repair.....3-19

Typical Symptoms.....3-19

**3.10 TOP END SERVICE**

Engine in Chassis.....3-20

Engine Removed from Chassis.....3-21

**3.11 CAM COMPARTMENT SERVICE**

Replace Camshaft.....3-22

Engine Removed From Chassis.....3-23

**3.12 STRIPPING MOTORCYCLE FOR SERVICE**

Procedure.....3-24

    Cam Compartment Service Only.....3-24

    Complete Top End Service.....3-24

**3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE**

Procedure.....3-25

After Complete Top End Service.....3-25

After Cam Compartment Service Only.....3-25

**3.14 REMOVING ENGINE FROM CHASSIS**

Procedure.....3-26

**3.15 INSTALLING ENGINE IN CHASSIS**

Procedure.....3-27

**3.16 TOP END OVERHAUL: DISASSEMBLY**

General.....3-29

Rocker Covers.....3-29

Rocker Arm Support Plate.....3-29

Pushrods, Lifters and Covers.....3-31

Cylinder Head.....3-31

Cylinder.....3-32

Piston.....3-33

**3.17 BREATHER ASSEMBLY**

Disassembly.....3-35

Cleaning and Inspection.....3-35

Assembly.....3-35

**3.18 ROCKER ARM SUPPORT PLATE**

Disassembly.....3-36

Cleaning, Inspection and Repair.....3-36

    Inspection.....3-36

    Rocker Shaft Fit.....3-36

    Rocker Arm Shaft to Bushing.....3-37

    Replace Rocker Arm Bushings.....3-37

Assembly.....3-38

**3.19 PUSHRODS, LIFTERS AND COVERS**

Disassembly.....3-39

Cleaning and General Inspection.....3-39

Inspect Lifters.....3-40

Assemble.....3-40

**3.20 CYLINDER HEAD**

Determining Service.....3-42

Disassembly.....3-42

Cleaning.....3-43

Inspection.....3-43

    Cylinder Head.....3-43

    Valve Guides.....3-44

    Valves.....3-44

    Valve Springs.....3-44

    Tapered Keepers.....3-44

    Valve Seats.....3-44

Valve Guide Replacement.....3-44

    Removal.....3-44

    Installation.....3-45

Valve and Seat Refacing.....3-48

Assembly.....3-50

**3.21 CYLINDER**

Cleaning.....3-52

Inspection.....3-52

Deglazing Cylinder.....3-54

Boring and Honing Cylinder.....3-54

# TABLE OF CONTENTS

## 3.22 PISTON

Disassembly.....	3-56
Piston Rings.....	3-56
Cleaning.....	3-56
Inspection.....	3-56
Assembly.....	3-58
Checking Piston Ring Gap.....	3-58
Installing Piston Rings.....	3-58

## 3.23 TOP END OVERHAUL: ASSEMBLY

General.....	3-60
Piston.....	3-60
Cylinder.....	3-61
Cylinder Head.....	3-63
Pushrods, Lifters and Covers.....	3-66
Rocker Arm Support Plate.....	3-67
Breather and Rocker Cover.....	3-68

## 3.24 CAM COMPARTMENT AND COMPONENTS

Cam Support Plate and Cover Removal.....	3-70
Prepare Engine.....	3-70
Cam Chain and Sprockets Removal.....	3-70
Cam Support Plate Removal.....	3-71
Cam Support Plate Cleaning and Inspection.....	3-72
Oil Pressure Relief Valve.....	3-72
Cam Support Plate.....	3-72
Camshafts.....	3-72
Removal.....	3-72
Installation.....	3-73
Oil Pressure Relief Valve.....	3-74
Removal.....	3-74
Inspection.....	3-75
Installation.....	3-75
Cam Needle Bearings.....	3-75
Removal.....	3-75
Installation.....	3-77
Cam Support Plate and Cover Installation.....	3-78

## 3.25 OIL PUMP

Removal.....	3-83
Cleaning and Inspection.....	3-83
Installation.....	3-84

## 3.26 CRANKCASE DISASSEMBLY AND REPAIR

Crankcase Disassembly.....	3-85
Cleaning and Inspection.....	3-85
Right Crankcase Half.....	3-86
Main Bearing Removal.....	3-86
Main Bearing Installation.....	3-86
Piston Jets Removal.....	3-87
Piston Jets Installation.....	3-87
Left Crankcase Half.....	3-87
Main Bearing Removal.....	3-87
Main Bearing Installation.....	3-88
Sprocket Shaft Bearing Inner Race.....	3-89
Removal.....	3-89
Installation.....	3-90
Cylinder Studs.....	3-92
Removal.....	3-92

Installation.....	3-92
Pipe Plug and Oil Fittings.....	3-92
Removal.....	3-92
Installation.....	3-92

## 3.27 FLYWHEEL AND CONNECTING RODS

Symptoms.....	3-93
Overview.....	3-93
No Oil Pressure.....	3-93
Vibration.....	3-93
Inspection.....	3-93
Measuring Crankshaft Runout.....	3-93
Crankshaft Installed.....	3-93
Crankshaft Removed.....	3-94

## 3.28 CRANKCASE ASSEMBLY

Crankcase Assembly.....	3-95
-------------------------	------

## 3.29 OIL PAN

Removal.....	3-97
Installation.....	3-97

## FUEL SYSTEM

### 4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	4-1
---	-----

### 4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-4
---------------------	-----

### 4.3 AIR CLEANER ASSEMBLY

Removal, All But HO103.....	4-5
Installation, All But HO103.....	4-6
Removal, HO103.....	4-6
Installation, HO103.....	4-7
Backplate Assembly: HDI Models.....	4-8

### 4.4 FUEL TANK

General.....	4-9
Removal.....	4-9
Cleaning and Inspection.....	4-10
Installation.....	4-11
Vapor Valve.....	4-11

### 4.5 THROTTLE POSITION SENSOR (TPS)

General.....	4-12
Removal.....	4-12
Installation.....	4-12

### 4.6 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....	4-13
Removal.....	4-13
Installation.....	4-13

### 4.7 ENGINE TEMPERATURE SENSOR (ET)

General.....	4-14
Removal.....	4-14
Installation.....	4-15

**4.8 INDUCTION MODULE**

Removal..... 4-16  
 Installation..... 4-17

**4.9 IDLE AIR CONTROL (IAC)**

General..... 4-18  
 Removal..... 4-18  
 Installation..... 4-18

**4.10 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)**

General..... 4-19  
 Removal..... 4-19  
 Installation..... 4-19

**4.11 OXYGEN SENSOR**

General..... 4-20  
 Removal..... 4-20  
 Installation..... 4-20

**4.12 FUEL INJECTORS**

General..... 4-21  
 Removal..... 4-21  
 Installation..... 4-21

**4.13 FUEL PUMP**

General..... 4-23  
 Removal..... 4-23  
 Disassembly and Assembly..... 4-25  
     Fuel Filter..... 4-25  
     Regulator..... 4-25  
     Inlet Sock..... 4-26  
     Fuel Pump..... 4-27  
 Installation..... 4-27

**4.14 FUEL PRESSURE TEST**

General..... 4-30  
 Testing..... 4-30

**4.15 EXHAUST SYSTEM**

Removal: FXDB, FXDBC and FXDBP..... 4-32  
 Disassembly: FXDB, FXDBC and FXDBP..... 4-33  
 Assembly: FXDB, FXDBC and FXDBP..... 4-34  
 Installation: FXDB, FXDBC and FXDBP..... 4-34  
 Removal: FXDF and FXDWG..... 4-35  
 Installation: FXDF and FXDWG..... 4-38  
 Removal: FLD..... 4-39  
 Installation: FLD..... 4-41  
 Removal: FXDL..... 4-41  
 Installation: FXDL..... 4-43

**4.16 INTAKE LEAK TEST**

General..... 4-44  
 Leak Tester..... 4-44  
     Parts List..... 4-44  
     Assemble Tester..... 4-44  
     Adjust Tester..... 4-44  
 Procedure..... 4-44

**4.17 EVAPORATIVE EMISSIONS CONTROL**

General..... 4-46  
 Charcoal Canister..... 4-48  
     Removal..... 4-48  
     Installation..... 4-48

**DRIVE**

**5.1 FASTENER TORQUE VALUES**

Fastener Torque Values in this Chapter..... 5-1

**5.2 SPECIFICATIONS: DRIVE**

Specifications..... 5-2

**5.3 PRIMARY CHAINCASE COVER**

General..... 5-3  
 Removal..... 5-3  
 Installation..... 5-3

**5.4 DRIVE COMPONENTS**

Removal..... 5-5  
 Installation..... 5-7

**5.5 PRIMARY CHAINCASE HOUSING**

Removal..... 5-10  
 Inspection..... 5-10  
 Mainshaft Bearing and Seal..... 5-10  
     Removal..... 5-10  
     Installation..... 5-10  
 Mainshaft Bearing Inner Race..... 5-11  
     Removal..... 5-11  
     Installation..... 5-11  
 Shifter Shaft Bushing..... 5-12  
 Installation..... 5-12

**5.6 CLUTCH**

Removal and Installation..... 5-14  
 Clutch Pack Only..... 5-14  
     Partial Disassembly..... 5-14  
     Cleaning And Inspection..... 5-14  
     Assembly..... 5-15  
 Clutch Pack and Bearing..... 5-16  
     Complete Disassembly..... 5-16  
     Assembly..... 5-17

**5.7 TRANSMISSION SPROCKET**

Removal..... 5-18  
 Cleaning and Inspection..... 5-19  
 Installation..... 5-19

**5.8 DRIVE BELT**

Removal..... 5-21  
 Installation..... 5-21

**TRANSMISSION**

**6.1 FASTENER TORQUE VALUES**

Fastener Torque Values in this Chapter..... 6-1

## TABLE OF CONTENTS

### 6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-2
Service Wear Limits.....	6-2

### 6.3 TRANSMISSION

Power Flow.....	6-4
Neutral.....	6-4
First Gear.....	6-4
Second Gear.....	6-4
Third Gear.....	6-4
Fourth Gear.....	6-4
Fifth Gear.....	6-4
Sixth Gear.....	6-4

### 6.4 SHIFTER LINKAGE

Shifter Rod Adjustment.....	6-6
Forward Control Shifter Adjustment.....	6-6
Mid-Control Shifter Adjustment.....	6-6

### 6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....	6-7
Cleaning and Inspection.....	6-7
Assembly and Installation.....	6-8

### 6.6 TRANSMISSION ASSEMBLY

Removal.....	6-9
Disassembly.....	6-10
Shifter Cam/Shifter Forks.....	6-10
Mainshaft.....	6-12
Countershaft.....	6-14
Removing Bearing Housing Bearings.....	6-15
Cleaning and Inspection.....	6-16
Assembly.....	6-16
Installing Bearing Housing Bearings.....	6-16
Countershaft.....	6-16
Mainshaft.....	6-17
Shifter Cam/Shifter Forks.....	6-17
Installation.....	6-19

### 6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-22
Cleaning and Inspection.....	6-23
Needle Bearing Replacement.....	6-24
Installation.....	6-25
Installing Main Drive Gear Bearing.....	6-25
Installing Main Drive Gear.....	6-26
Installing Main Drive Gear Large Seal.....	6-26

### 6.8 TRANSMISSION CASE

Removal.....	6-29
Installation.....	6-29
Disassembly.....	6-30
Shifter Arm Assembly.....	6-30
Cleaning and Inspection.....	6-30
Assembly.....	6-31
Countershaft Needle Bearing Replacement.....	6-31
Shifter Pawl Lever Assembly.....	6-31

## ELECTRICAL

### 7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

### 7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-4
---------------------	-----

### 7.3 ELECTRICAL CADDY

Removal.....	7-5
Installation.....	7-7

### 7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....	7-8
Replacement.....	7-8
Removal.....	7-8
Installation.....	7-8

### 7.5 BODY CONTROL MODULE (BCM)

General.....	7-9
Removal.....	7-9
Installation.....	7-10

### 7.6 SECURITY SIREN

Removal.....	7-11
Installation.....	7-11

### 7.7 SPARK PLUG CABLES

Inspect Spark Plug Cables.....	7-12
Removal.....	7-12
Installation.....	7-12

### 7.8 FUSES

General.....	7-13
Replacement.....	7-13

### 7.9 IGNITION SWITCH

Removal.....	7-14
All but FXDL.....	7-14
FXDL.....	7-15
Installation.....	7-16
All but FXDL.....	7-16
FXDL.....	7-16

### 7.10 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	7-17
Removal.....	7-17
Installation.....	7-17
Battery Cables.....	7-18
Routing.....	7-18

### 7.11 STARTER

General.....	7-20
Removal.....	7-20
Drive Assembly.....	7-20
Disassembly.....	7-20
Inspection.....	7-21
Assembly.....	7-21



Solenoid.....7-21  
 Remove Cover and Plunger.....7-21  
 Short Post Contact: Starter.....7-22  
 Long Post Contact: Battery Positive.....7-22  
 Install Plunger and Cover.....7-23  
 Installation.....7-23

**7.12 HEADLAMP**

General.....7-24  
 Bulb Removal: All But FLD.....7-24  
 Single Bulb Headlamp.....7-24  
 Dual Bulb Headlamp.....7-25  
 Bulb Installation: All But FLD.....7-26  
 Headlamp Assembly: All But FLD and FXDL.....7-26  
 Removal.....7-26  
 Installation.....7-26  
 Headlamp Assembly: FXDL.....7-26  
 Removal.....7-26  
 Installation.....7-26  
 Headlamp Visor: FXDL.....7-27  
 Removal.....7-27  
 Installation.....7-27  
 Headlamp: FLD.....7-28  
 Removal.....7-28  
 Bulb Replacement.....7-29  
 Installation.....7-30

**7.13 TAIL LAMP**

General.....7-31  
 Tail Lamp Bulb Replacement: FLD and FXDL.....7-31  
 Base Replacement: FLD and FXDL.....7-31  
 Base Replacement: FXDWG/HDI and Canada.....7-33  
 Tail Lamp Replacement: FXDF.....7-34  
 Tail Lamp Removal.....7-34  
 Tail Lamp Installation.....7-34  
 License Plate Lamp Replacement.....7-34

**7.14 TURN SIGNALS**

Turn Signal Bulb Replacement: Bullet Style.....7-36  
 Front Lamp Housing Replacement: All But FLD.....7-36  
 Rear Lamp Housing Replacement: All But FLD.....7-38  
 Front Turn Signal Lamps: FLD.....7-40  
 Removal.....7-40  
 Installation.....7-40  
 Rear Turn Signal Lamps and Bracket: FLD.....7-41  
 Removal.....7-41  
 Installation.....7-41  
 Rear Turn Signal Reflector/Isolator Repair: FLD.....7-41  
 Removal.....7-41  
 Installation.....7-41

**7.15 CRANK POSITION SENSOR (CKP)**

General.....7-43  
 Removal.....7-43  
 Installation.....7-43

**7.16 AUTOMATIC COMPRESSION RELEASE (ACR)**

General.....7-44  
 Removal.....7-44  
 Installation.....7-44

**7.17 VOLTAGE REGULATOR**

Removal.....7-46  
 Installation.....7-46

**7.18 ALTERNATOR**

Removal.....7-47  
 Cleaning and Inspection.....7-47  
 Installation.....7-47

**7.19 FUEL GAUGE**

General.....7-49  
 Removal.....7-49

**7.20 FUEL GAUGE SENDER**

Removal.....7-50  
 Installation.....7-51

**7.21 INSTRUMENTS: FXDF AND FLD**

Speedometer.....7-53  
 Removal.....7-53  
 Installation.....7-53

**7.22 INSTRUMENTS: FXDB, FXDBC, FXDBP AND FXDWG**

Removal.....7-54  
 Installation.....7-54

**7.23 INSTRUMENTS: FXDL**

Removal.....7-56  
 Installation.....7-56

**7.24 VEHICLE SPEED SENSOR (VSS)**

General.....7-57  
 Removal.....7-57  
 Installation.....7-57

**7.25 WHEEL SPEED SENSORS**

Front Wheel Speed Sensor (WSS).....7-58  
 Removal.....7-58  
 Installation.....7-58  
 Rear Wheel Speed Sensor (WSS).....7-59  
 Removal.....7-59  
 Installation.....7-60

**7.26 INDICATOR LAMPS**

Removal.....7-62  
 FLD.....7-62  
 FXDB, FXDBC, FXDBP, FXDWG and FXDF.....7-62  
 Installation.....7-63  
 FLD.....7-63  
 FXDB, FXDBC, FXDBP, FXDWG and FXDF.....7-63

**7.27 NEUTRAL SWITCH**

General.....7-64  
 Removal.....7-64  
 Installation.....7-64

**7.28 OIL PRESSURE SWITCH**

General.....7-65

## TABLE OF CONTENTS

Removal.....	7-65
Installation.....	7-65

### 7.29 REAR STOPLAMP SWITCH

General.....	7-66
Removal.....	7-66
Installation.....	7-66

### 7.30 HORN

Inspection.....	7-67
Replacement: All But FXDL.....	7-67
Replacement: FXDL.....	7-68

### 7.31 ACTIVE EXHAUST: HDI

General.....	7-69
Removal.....	7-69
Repair.....	7-69
Installation.....	7-69

### 7.32 MAIN WIRING HARNESS

General.....	7-71
Removal.....	7-71
Installation.....	7-73

### 7.33 HANDLEBAR CONTROL MODULES

General.....	7-77
Repair Procedures.....	7-77

### 7.34 LEFT HANDLEBAR CONTROL MODULE

Removal.....	7-78
Clutch Switch Replacement.....	7-78
Installation.....	7-78

### 7.35 RIGHT HANDLEBAR CONTROL MODULE

Removal.....	7-80
Front Brake Switch Replacement.....	7-81
Installation.....	7-81

### 7.36 H-DSSS MAINTENANCE

Fob Battery.....	7-83
Battery Replacement Schedule.....	7-83
Battery Replacement.....	7-83
Smart Siren (If Installed).....	7-83
Battery Replacement Schedule.....	7-83
Battery Replacement.....	7-83

### 7.37 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....	7-84
--------------	------

Changing The PIN.....	7-84
Modifying an Existing PIN.....	7-84

### 7.38 H-DSSS ACTUATION

Sidecar Configuration.....	7-86
Activation.....	7-86
Fob Assignment.....	7-86

## APPENDIX A WIRING

### A.1 CONNECTORS

Connector Locations.....	A-1
Function/Location.....	A-1
Place and Color.....	A-1
Connector Number.....	A-1
Repair Instructions.....	A-1

### A.2 WIRING DIAGRAMS

Wiring Diagram Information.....	A-4
Wire Color Codes.....	A-4
Wiring Diagram Symbols.....	A-4
2016 Dyna Wiring Diagrams.....	A-6

## APPENDIX B REFERENCE

### B.1 LENGTH CONVERSION

Conversion Table.....	B-1
-----------------------	-----

### B.2 FLUID CONVERSION

United States System.....	B-2
Metric System.....	B-2
British Imperial System.....	B-2

### B.3 TORQUE CONVERSION

United States System.....	B-3
Metric System.....	B-3

### B.4 GLOSSARY

Acronyms and Abbreviations.....	B-4
---------------------------------	-----

## REFERENCE MATERIAL

TOOLS.....	I
------------	---

TORQUE VALUES.....	VII
--------------------	-----

INDEX.....	XXI
------------	-----