

REPAIR MANUAL 2014



FE 250 EU
FE 250 AU
FE 250 US

Art. no. 3403002en

INTRODUCTION

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

REG.NO. 12 100 6061

Husqvarna Motorcycles GmbH

5230 Mattighofen, Austria



TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	7.2	Adjusting the handlebar position	37
1.1	Symbols used	6	7.3	Adjusting the basic position of the clutch lever	37
1.2	Formats used	6	7.4	Checking the routing of the throttle cable	38
2	SAFETY ADVICE	7	7.5	Checking the play in the throttle cable	38
2.1	Repair Manual.....	7	7.6	Adjusting the play in the throttle cable	39
2.2	Safety advice	7	8	FRAME	40
2.3	Degrees of risk and symbols	7	8.1	Removing the engine guard.....	40
2.4	Work rules.....	7	8.2	Installing the engine guard.....	40
3	IMPORTANT NOTES	8	8.3	Checking the frame.....	40
3.1	Manufacturer and implied warranty	8	9	SHOCK ABSORBER, SWINGARM.....	41
3.2	Operating and auxiliary substances	8	9.1	Adjusting the high-speed compression damping of the shock absorber.....	41
3.3	Spare parts, accessories	8	9.2	Adjusting the low-speed compression damping of the shock absorber.....	41
3.4	Figures	8	9.3	Adjusting the rebound damping of the shock absorber.....	42
4	SERIAL NUMBERS.....	9	9.4	Measuring rear wheel sag unloaded.....	42
4.1	Chassis number	9	9.5	Checking the static sag of the shock absorber.....	42
4.2	Type label (FE 250 EU/AU)	9	9.6	Checking the riding sag of the shock absorber.....	43
4.3	Key number (FE 250 EU/AU).....	9	9.7	Adjusting the spring preload of the shock absorber.....	43
4.4	Engine number.....	9	9.8	Adjusting the riding sag	44
4.5	Fork part number	9	9.9	Removing the shock absorber.....	44
4.6	Shock absorber article number	10	9.10	Installing the shock absorber.....	45
5	MOTORCYCLE.....	11	9.11	Checking the shock absorber linkage	45
5.1	Raising the motorcycle with a lift stand.....	11	9.12	Servicing the shock absorber	47
5.2	Removing the motorcycle from the lift stand.....	11	9.13	Removing the spring.....	47
5.3	Starting	11	9.14	Disassembling the damper	48
5.4	Starting the motorcycle for a check.....	12	9.15	Disassembling the piston rod	49
6	FORK, TRIPLE CLAMP	13	9.16	Disassembling the seal ring retainer	50
6.1	Adjusting the compression damping of the fork.....	13	9.17	Changing the pilot bushing.....	51
6.2	Adjusting the rebound damping of the fork.....	13	9.18	Checking the damper	52
6.3	Bleeding the fork legs	13	9.19	Removing the heim joint	52
6.4	Cleaning the dust boots of the fork legs.....	14	9.20	Installing the heim joint	53
6.5	Loosening the fork protector	14	9.21	Assembling the seal ring retainer.....	54
6.6	Positioning the fork protector	15	9.22	Assembling the piston rod.....	55
6.7	Removing the fork legs	15	9.23	Assembling the damper	56
6.8	Installing the fork legs.....	15	9.24	Bleeding and filling the damper	58
6.9	Removing the fork protector.....	16	9.25	Filling the damper with nitrogen	60
6.10	Installing the fork protector.....	16	9.26	Installing the spring.....	61
6.11	Performing a fork service.....	17	9.27	Checking the swingarm	62
6.12	Disassembling the fork legs.....	17	9.28	Removing the swingarm	62
6.13	Removing the spring.....	19	9.29	Installing the swingarm	63
6.14	Disassembling the cartridge	20	9.30	Changing the swingarm bearing.....	64
6.15	Disassembling the piston rod	21	10	EXHAUST	67
6.16	Disassembling the hydrostop unit	22	10.1	Removing the manifold.....	67
6.17	Disassembling the seal ring retainer.....	22	10.2	Installing the manifold.....	68
6.18	Checking the fork legs.....	23	10.3	Removing the main silencer.....	69
6.19	Assembling the seal ring retainer.....	24	10.4	Installing the main silencer.....	70
6.20	Assembling the hydrostop unit.....	24	10.5	Changing the glass fiber yarn filling of the main silencer.....	70
6.21	Assembling the piston rod	25	11	AIR FILTER	72
6.22	Assembling the cartridge	26	11.1	Removing the air filter box cover	72
6.23	Assembling the fork legs	27	11.2	Installing the air filter box cover	72
6.24	Lubricating the steering head bearing	31	11.3	Removing the air filter.....	72
6.25	Removing the lower triple clamp	31	11.4	Installing the air filter	72
6.26	Installing the lower triple clamp	32	11.5	Cleaning the air filter and air filter box	73
6.27	Checking the steering head bearing play	34			
6.28	Changing the steering head bearing.....	34			
6.29	Adjusting the play of the steering head bearing.....	35			
7	HANDLEBAR, CONTROLS.....	37			
7.1	Handlebar position.....	37			

TABLE OF CONTENTS

3

11.6	Sealing the air filter box	73	16.5	Adjusting free travel of hand brake lever (FE 250 EU/AU)	106
12	FUEL TANK, SEAT, TRIM	74	16.6	Checking the front brake fluid level	107
12.1	Opening filler cap	74	16.7	Adding front brake fluid	107
12.2	Closing filler cap	74	16.8	Changing the front brake fluid	108
12.3	Removing the right side cover	74	16.9	Checking the rear brake linings	109
12.4	Installing the right side cover	75	16.10	Changing the rear brake linings	110
12.5	Removing the seat	75	16.11	Checking the free travel of foot brake lever.....	111
12.6	Mounting the seat	75	16.12	Adjusting the basic position of the foot brake lever	112
12.7	Removing the fuel tank	76	16.13	Checking the rear brake fluid level	112
12.8	Installing the fuel tank	77	16.14	Adding rear brake fluid	113
12.9	Changing the fuel screen	78	16.15	Changing the rear brake fluid	114
12.10	Changing the fuel filter	79	17	LIGHTING SYSTEM, INSTRUMENTS	116
12.11	Changing the fuel pump	81	17.1	Setting the speedometer	116
12.12	Checking the fuel pressure	82	17.2	Setting the kilometers or miles	117
13	MASK, FENDER	84	17.3	Setting the clock	117
13.1	Removing the front fender	84	17.4	Setting the wheel circumference	117
13.2	Installing the front fender	84	17.5	Setting the service display	118
13.3	Removing the headlight mask with the headlight	85	17.6	Checking the headlight setting	118
13.4	Installing the headlight mask with the headlight	85	17.7	Adjusting the headlight range	119
14	WHEELS	86	18	ENGINE	120
14.1	Checking the tire air pressure	86	18.1	Removing the engine	120
14.2	Checking the tire condition	86	18.2	Installing the engine	124
14.3	Checking the brake discs	87	18.3	Engine disassembly	128
14.4	Checking spoke tension	87	18.3.1	Preparations	128
14.5	Front wheel	88	18.3.2	Removing the clutch push rod	129
14.5.1	Removing the front wheel	88	18.3.3	Removing the spacer	129
14.5.2	Installing the front wheel	88	18.3.4	Draining the engine oil	129
14.5.3	Removing the front brake disc	89	18.3.5	Removing the oil filter	130
14.5.4	Installing the front brake disc	89	18.3.6	Removing the spark plug	130
14.5.5	Changing the front wheel bearing	89	18.3.7	Removing the valve cover	130
14.6	Rear wheel	90	18.3.8	Removing the alternator cover	131
14.6.1	Removing the rear wheel	90	18.3.9	Removing the torque limiter	131
14.6.2	Installing the rear wheel	91	18.3.10	Positioning the engine at ignition top dead center	131
14.6.3	Removing the rear brake disc	92	18.3.11	Removing the timing chain tensioner	132
14.6.4	Installing the rear brake disc	92	18.3.12	Removing the camshaft	132
14.6.5	Checking the chain tension	93	18.3.13	Removing the cylinder head	133
14.6.6	Adjusting the chain tension	93	18.3.14	Removing the piston	133
14.6.7	Checking the chain, rear sprocket, engine sprocket and chain guide	94	18.3.15	Removing the starter drive	134
14.6.8	Checking for chain dirt accumulation	95	18.3.16	Removing the suction pump	135
14.6.9	Cleaning the chain	95	18.3.17	Removing the water pump wheel	136
14.6.10	Changing the drivetrain kit	96	18.3.18	Removing the clutch cover	136
14.6.11	Changing the rear wheel bearing	98	18.3.19	Removing the clutch discs	136
15	WIRING HARNESS, BATTERY	100	18.3.20	Removing the clutch basket	137
15.1	Changing the main fuse	100	18.3.21	Removing the shift shaft	138
15.2	Changing the fuses of individual power consumers	100	18.3.22	Removing the shift drum locating unit	138
15.3	Checking the starter relay	101	18.3.23	Removing the locking lever	138
15.4	Removing the battery	102	18.3.24	Removing the force pump	138
15.5	Installing the battery	102	18.3.25	Removing the primary gear	139
15.6	Checking the charging voltage	103	18.3.26	Removing the timing chain	139
15.7	Checking the quiescent current	103	18.3.27	Removing the spacer	140
16	BRAKE SYSTEM	104	18.3.28	Removing the left section of the engine case	140
16.1	Checking the front brake linings	104	18.3.29	Removing the shift rails	140
16.2	Changing the front brake linings	104	18.3.30	Removing the shift drum	141
16.3	Checking free travel of hand brake lever	106	18.3.31	Removing the shift forks	141
16.4	Adjusting the basic position of the hand brake lever (FE 250 US)	106	18.3.32	Removing the transmission shafts	141
			18.3.33	Removing the crankshaft	141

TABLE OF CONTENTS

4

18.4	Work on individual parts	142	18.5.8	Installing the timing chain.....	171
18.4.1	Work on the right section of the engine case.....	142	18.5.9	Installing the primary gear	171
18.4.2	Work on the left section of the engine case.....	143	18.5.10	Installing the force pump.....	172
18.4.3	Work on the clutch cover	144	18.5.11	Installing the suction pump	172
18.4.4	Checking the oil pressure regulator valve	145	18.5.12	Installing the locking lever	173
18.4.5	Checking the lubrication system	146	18.5.13	Installing the shift drum locating unit	173
18.4.6	Removing the crankshaft bearing inner race	146	18.5.14	Installing the shift shaft	174
18.4.7	Installing the crankshaft bearing inner race	147	18.5.15	Installing the clutch basket.....	174
18.4.8	Changing the connecting rod, conrod bearing, and crank pin	147	18.5.16	Installing the clutch discs	175
18.4.9	Checking the crankshaft run-out at the bearing pin	149	18.5.17	Installing the clutch cover	176
18.4.10	Measuring the crankshaft end play.....	149	18.5.18	Installing the water pump cover	177
18.4.11	Removing the drive wheel of the balancer shaft.....	149	18.5.19	Installing the starter drive	177
18.4.12	Installing the drive wheel of the balancer shaft.....	150	18.5.20	Installing the piston	178
18.4.13	Cylinder - Nikasil® coating.....	150	18.5.21	Installing the cylinder head.....	180
18.4.14	Checking/measuring the cylinder.....	150	18.5.22	Installing the camshafts.....	181
18.4.15	Checking/measuring the piston	151	18.5.23	Installing the timing chain tensioner.....	181
18.4.16	Measuring the piston/cylinder mounting clearance.....	151	18.5.24	Checking the valve clearance	182
18.4.17	Checking the piston ring end gap	152	18.5.25	Adjusting the valve clearance.....	183
18.4.18	Checking the camshafts.....	152	18.5.26	Installing the torque limiter.....	183
18.4.19	Work on the intake camshaft	152	18.5.27	Installing the alternator cover	183
18.4.20	Checking the pivot points of the camshafts.....	153	18.5.28	Installing the valve cover	184
18.4.21	Removing the valves	154	18.5.29	Installing the spark plug	184
18.4.22	Checking the valves	155	18.5.30	Installing the oil filter.....	185
18.4.23	Checking the valve springs	155	18.5.31	Installing the oil screen.....	185
18.4.24	Checking the valve spring seat	155	18.5.32	Installing the spacer	186
18.4.25	Checking the cam levers.....	156	18.5.33	Installing the clutch push rod	186
18.4.26	Checking the cylinder head.....	156	18.5.34	Removing the engine from the engine assembly stand	186
18.4.27	Installing the valves	156	19	CLUTCH	187
18.4.28	Checking the freewheel.....	157	19.1	Checking/rectifying the fluid level of the hydraulic clutch.....	187
18.4.29	Removing the freewheel.....	158	19.2	Changing the hydraulic clutch fluid	187
18.4.30	Installing the freewheel.....	158	20	WATER PUMP, COOLING SYSTEM	188
18.4.31	Checking the electric starter drive	159	20.1	Cooling system	188
18.4.32	Checking the timing assembly	160	20.2	Checking the antifreeze and coolant level.....	188
18.4.33	Preparing the timing chain tensioner for installation	161	20.3	Checking the coolant level.....	189
18.4.34	Checking the clutch	161	20.4	Draining the coolant.....	189
18.4.35	Checking the shift mechanism.....	163	20.5	Refilling coolant	190
18.4.36	Preassembling the shift shaft.....	164	21	LUBRICATION SYSTEM	191
18.4.37	Disassembling the main shaft	164	21.1	Oil circuit	191
18.4.38	Disassembling the countershaft.....	165	21.2	Checking the engine oil level	191
18.4.39	Checking the transmission.....	165	21.3	Changing the engine oil and oil filter, cleaning the oil screen	192
18.4.40	Assembling the main shaft.....	166	21.4	Adding engine oil	194
18.4.41	Assembling the countershaft.....	167	21.5	Checking the engine oil pressure	194
18.5	Engine assembly.....	168	22	IGNITION SYSTEM.....	196
18.5.1	Installing the crankshaft	168	22.1	Ignition coil - checking the secondary winding.....	196
18.5.2	Installing the transmission shafts	169	22.2	Checking the spark plug connector.....	196
18.5.3	Installing the shift forks	169	22.3	Alternator - checking the stator winding.....	196
18.5.4	Installing the shift drum	169	22.4	Removing the stator and ignition pulse generator.....	197
18.5.5	Installing the shift rails.....	170	22.5	Installing the stator and ignition pulse generator.....	197
18.5.6	Installing the left engine case.....	170	23	ELECTRIC STARTER.....	198
18.5.7	Installing the spacer	171	23.1	Checking the starter motor	198
			24	THROTTLE VALVE BODY	199
			24.1	Adjusting the idle speed	199
			24.2	Executing the initialization run	199

TABLE OF CONTENTS

25	TECHNICAL DATA	200
25.1	Engine	200
25.2	Engine tolerance, wear limits	200
25.3	Engine tightening torques	201
25.4	Capacities	202
25.4.1	Engine oil	202
25.4.2	Coolant	202
25.4.3	Fuel	202
25.5	Chassis	203
25.6	Electrical system	203
25.7	Tires	204
25.8	Fork	204
25.9	Shock absorber	204
25.10	Chassis tightening torques	205
26	CLEANING, CARE	206
26.1	Cleaning the motorcycle	206
26.2	Checks and maintenance steps for winter operation	207
27	STORAGE	208
27.1	Storage	208
27.2	Preparing for use after storage	208
28	SERVICE SCHEDULE	209
28.1	Service schedule	209
28.2	Service work (as additional order)	210
29	WIRING DIAGRAM	212
29.1	Page 1 of 8 (FE 250 EU)	212
29.2	Page 2 of 8 (FE 250 EU)	214
29.3	Page 3 of 8 (FE 250 EU)	216
29.4	Page 4 of 8 (FE 250 EU)	218
29.5	Page 5 of 8 (FE 250 EU)	220
29.6	Page 6 of 8 (FE 250 EU)	222
29.7	Page 7 of 8 (FE 250 EU)	224
29.8	Page 8 of 8 (FE 250 EU)	226
29.9	Page 1 of 8 (FE 250 AU)	228
29.10	Page 2 of 8 (FE 250 AU)	230
29.11	Page 3 of 8 (FE 250 AU)	232
29.12	Page 4 of 8 (FE 250 AU)	234
29.13	Page 5 of 8 (FE 250 AU)	236
29.14	Page 6 of 8 (FE 250 AU)	238
29.15	Page 7 of 8 (FE 250 AU)	240
29.16	Page 8 of 8 (FE 250 AU)	242
29.17	Page 1 of 6 (FE 250 US)	244
29.18	Page 2 of 6 (FE 250 US)	246
29.19	Page 3 of 6 (FE 250 US)	248
29.20	Page 4 of 6 (FE 250 US)	250
29.21	Page 5 of 6 (FE 250 US)	252
29.22	Page 6 of 6 (FE 250 US)	254
30	SUBSTANCES	256
31	AUXILIARY SUBSTANCES	257
32	SPECIAL TOOLS	259
33	STANDARDS	270
	INDEX	271

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed both in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty.

Additional information on the manufacturer or implied warranty and the procedures involved can be found in the service booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.

The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.


International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

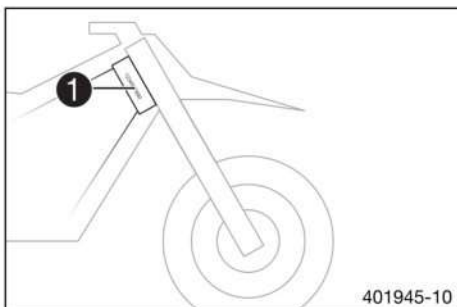


The chassis number ❶ is stamped on the steering head on the right.

4.2 Type label (FE 250 EU/AU)

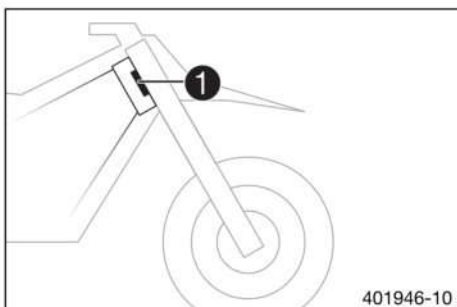


The type label ❶ is fixed to the front of the steering head.

4.3 Key number (FE 250 EU/AU)

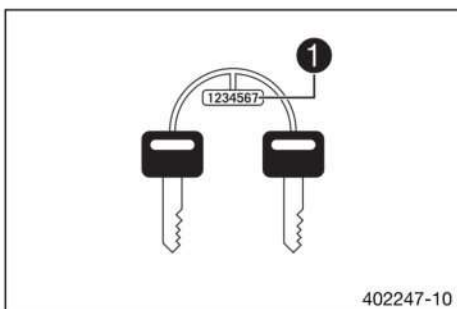


The key number ❶ for the steering lock is stamped onto the key connector.

4.4 Engine number

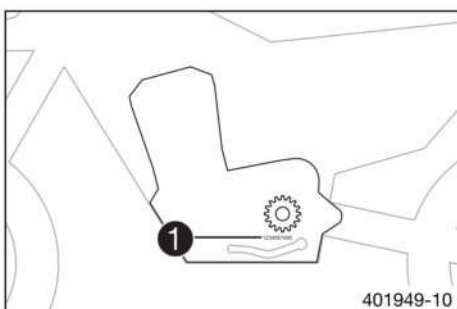


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

4.5 Fork part number

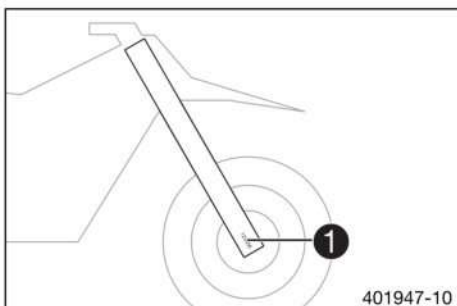

The fork part number ❶ is stamped on the inner side of the fork stub.

4.6 Shock absorber article number

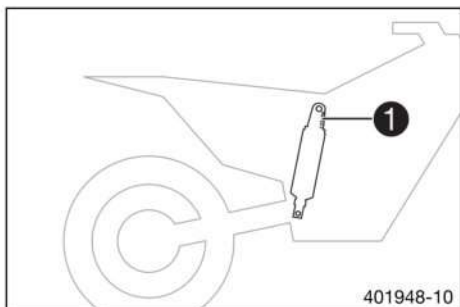

The shock absorber article number **1** is stamped on the top of the shock absorber above the adjusting ring towards the engine side.