

REPAIR MANUAL 2014



FE 350 EU
FE 350 AU
FE 350 US

Art. no. 3403001en

INTRODUCTION

1

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

REG.NO. 12 100 6061

Husqvarna Motorcycles GmbH

5230 Mattighofen, Austria



3403001en

08/2015

TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	6.31	Adjusting the play of the steering head bearing	36
1.1	Symbols used	6	7	HANDLEBAR, CONTROLS.....	38
1.2	Formats used	6	7.1	Handlebar position.....	38
2	SAFETY ADVICE	7	7.2	Adjusting the handlebar position	38
2.1	Repair Manual.....	7	7.3	Adjusting the basic position of the clutch lever	38
2.2	Safety advice	7	7.4	Checking the routing of the throttle cable	39
2.3	Degrees of risk and symbols	7	7.5	Checking the play in the throttle cable	39
2.4	Work rules	7	7.6	Adjusting the play in the throttle cable	40
3	IMPORTANT NOTES	8	8	FRAME	41
3.1	Manufacturer and implied warranty	8	8.1	Removing the engine guard.....	41
3.2	Operating and auxiliary substances	8	8.2	Installing the engine guard.....	41
3.3	Spare parts, accessories	8	8.3	Checking the frame.....	41
3.4	Figures	8	9	SHOCK ABSORBER, SWINGARM.....	42
4	SERIAL NUMBERS.....	9	9.1	Adjusting the high-speed compression damping of the shock absorber.....	42
4.1	Chassis number	9	9.2	Adjusting the low-speed compression damping of the shock absorber.....	42
4.2	Type label (FE 350 EU/AU)	9	9.3	Adjusting the rebound damping of the shock absorber.....	43
4.3	Key number (FE 350 EU/AU).....	9	9.4	Measuring rear wheel sag unloaded.....	43
4.4	Engine number.....	9	9.5	Checking the static sag of the shock absorber.....	43
4.5	Fork part number	9	9.6	Checking the riding sag of the shock absorber.....	44
4.6	Shock absorber article number	10	9.7	Adjusting the spring preload of the shock absorber.....	44
5	MOTORCYCLE.....	11	9.8	Adjusting the riding sag	45
5.1	Raising the motorcycle with a lift stand.....	11	9.9	Removing the shock absorber.....	45
5.2	Removing the motorcycle from the lift stand.....	11	9.10	Installing the shock absorber.....	46
5.3	Starting	11	9.11	Checking the shock absorber linkage	46
5.4	Starting the motorcycle for a check.....	12	9.12	Servicing the shock absorber	48
6	FORK, TRIPLE CLAMP	13	9.13	Removing the spring.....	48
6.1	Adjusting the compression damping of the fork.....	13	9.14	Disassembling the damper	49
6.2	Adjusting the rebound damping of the fork.....	13	9.15	Disassembling the piston rod	50
6.3	Bleeding the fork legs	13	9.16	Disassembling the seal ring retainer	51
6.4	Cleaning the dust boots of the fork legs.....	14	9.17	Changing the pilot bushing.....	52
6.5	Loosening the fork protector	14	9.18	Checking the damper	53
6.6	Positioning the fork protector	15	9.19	Removing the heim joint	53
6.7	Removing the fork legs	15	9.20	Installing the heim joint	54
6.8	Installing the fork legs.....	15	9.21	Assembling the seal ring retainer.....	55
6.9	Removing the fork protector.....	16	9.22	Assembling the piston rod.....	56
6.10	Installing the fork protector.....	16	9.23	Assembling the damper	57
6.11	Performing a fork service.....	17	9.24	Bleeding and filling the damper	59
6.12	Disassembling the fork legs.....	17	9.25	Filling the damper with nitrogen	61
6.13	Removing the spring.....	19	9.26	Installing the spring.....	62
6.14	Disassembling the cartridge	20	9.27	Checking the swingarm	63
6.15	Disassembling the piston rod	21	9.28	Removing the swingarm	63
6.16	Disassembling the hydrostop unit	22	9.29	Installing the swingarm	64
6.17	Disassembling the seal ring retainer.....	22	9.30	Changing the swingarm bearing.....	65
6.18	Checking the fork legs	23	10	EXHAUST	68
6.19	Assembling the seal ring retainer.....	24	10.1	Removing the manifold.....	68
6.20	Assembling the hydrostop unit.....	24	10.2	Installing the manifold.....	69
6.21	Assembling the piston rod	25	10.3	Removing the main silencer.....	71
6.22	Assembling the cartridge	26	10.4	Installing the main silencer.....	71
6.23	Assembling the fork legs	27	10.5	Changing the glass fiber yarn filling of the main silencer.....	71
6.24	Lubricating the steering head bearing	31	11	AIR FILTER	73
6.25	Removing the lower triple clamp	31	11.1	Removing the air filter box cover	73
6.26	Installing the lower triple clamp	32	11.2	Installing the air filter box cover.....	73
6.27	Checking the steering head bearing play	34			
6.28	Adjusting the play of the steering head bearing	34			
6.29	Checking the steering head bearing play	35			
6.30	Changing the steering head bearing.....	35			

TABLE OF CONTENTS

3

11.3	Removing the air filter	73	16.3	Checking free travel of hand brake lever	106
11.4	Installing the air filter	73	16.4	Adjusting the basic position of the hand brake lever (FE 350 US)	106
11.5	Cleaning the air filter and air filter box	74	16.5	Adjusting free travel of hand brake lever (FE 350 EU/AU)	106
11.6	Sealing the air filter box	74	16.6	Checking the front brake fluid level	107
12	FUEL TANK, SEAT, TRIM	75	16.7	Adding front brake fluid	107
12.1	Opening filler cap	75	16.8	Changing the front brake fluid	108
12.2	Closing filler cap	75	16.9	Checking the rear brake linings	109
12.3	Removing the right side cover	75	16.10	Changing the rear brake linings	110
12.4	Installing the right side cover	76	16.11	Checking the free travel of foot brake lever	111
12.5	Removing the seat	76	16.12	Adjusting the basic position of the foot brake lever	112
12.6	Mounting the seat	76	16.13	Checking the rear brake fluid level	112
12.7	Removing the fuel tank	76	16.14	Adding rear brake fluid	113
12.8	Installing the fuel tank	78	16.15	Changing the rear brake fluid	114
12.9	Changing the fuel screen	79	17	LIGHTING SYSTEM, INSTRUMENTS	116
12.10	Changing the fuel filter	79	17.1	Setting the speedometer	116
12.11	Changing the fuel pump	81	17.2	Setting the kilometers or miles	117
12.12	Checking the fuel pressure	82	17.3	Setting the clock	117
13	MASK, FENDER	84	17.4	Setting the wheel circumference	117
13.1	Removing the front fender	84	17.5	Setting the service display	118
13.2	Installing the front fender	84	17.6	Checking the headlight setting	118
13.3	Removing the headlight mask with the headlight	85	17.7	Adjusting the headlight range	119
13.4	Installing the headlight mask with the headlight	85	18	ENGINE	120
14	WHEELS	86	18.1	Removing the engine	120
14.1	Checking the tire air pressure	86	18.2	Installing the engine	124
14.2	Checking the tire condition	86	18.3	Engine disassembly	128
14.3	Checking the brake discs	87	18.3.1	Preparations	128
14.4	Checking spoke tension	87	18.3.2	Removing the clutch push rod	129
14.5	Front wheel	88	18.3.3	Removing the spacer	129
14.5.1	Removing the front wheel	88	18.3.4	Draining the engine oil	129
14.5.2	Installing the front wheel	88	18.3.5	Removing the oil filter	129
14.5.3	Removing the front brake disc	89	18.3.6	Removing the spark plug	130
14.5.4	Installing the front brake disc	89	18.3.7	Removing the valve cover	130
14.5.5	Changing the front wheel bearing	89	18.3.8	Removing the alternator cover	130
14.6	Rear wheel	90	18.3.9	Removing the torque limiter	131
14.6.1	Removing the rear wheel	90	18.3.10	Positioning the engine at ignition top dead center	131
14.6.2	Installing the rear wheel	91	18.3.11	Removing the timing chain tensioner	131
14.6.3	Removing the rear brake disc	92	18.3.12	Removing the camshaft	132
14.6.4	Installing the rear brake disc	92	18.3.13	Removing the cylinder head	132
14.6.5	Checking the chain tension	93	18.3.14	Removing the piston	133
14.6.6	Adjusting the chain tension	93	18.3.15	Removing the starter drive	133
14.6.7	Checking the chain, rear sprocket, motor sprocket, and chain guide	94	18.3.16	Removing the suction pump	134
14.6.8	Checking for chain dirt accumulation	95	18.3.17	Removing the water pump wheel	135
14.6.9	Cleaning the chain	95	18.3.18	Removing the clutch cover	136
14.6.10	Changing the drivetrain kit	96	18.3.19	Removing the clutch discs	136
14.6.11	Changing the rear wheel bearing	98	18.3.20	Removing the clutch basket	137
15	WIRING HARNESS, BATTERY	100	18.3.21	Removing the shift shaft	137
15.1	Changing the main fuse	100	18.3.22	Removing the shift drum locating unit	138
15.2	Changing the fuses of individual power consumers	100	18.3.23	Removing the locking lever	138
15.3	Checking the starter relay	101	18.3.24	Removing the force pump	138
15.4	Removing the battery	102	18.3.25	Removing the primary gear	139
15.5	Installing the battery	102	18.3.26	Removing the timing chain	139
15.6	Checking the charging voltage	103	18.3.27	Removing the spacer	139
15.7	Checking the quiescent current	103	18.3.28	Removing the left section of the engine case	140
16	BRAKE SYSTEM	104	18.3.29	Removing the shift rails	140
16.1	Checking the front brake linings	104	18.3.30	Removing the shift drum	141
16.2	Changing the front brake linings	104			

TABLE OF CONTENTS

4

18.3.31	Removing the shift forks	141	18.5.5	Installing the shift rails.....	169
18.3.32	Removing the transmission shafts	141	18.5.6	Installing the left engine case.....	170
18.3.33	Removing the crankshaft	141	18.5.7	Installing the spacer	170
18.4	Work on individual parts	142	18.5.8	Installing the timing chain.....	170
18.4.1	Work on the right section of the engine case.....	142	18.5.9	Installing the primary gear	171
18.4.2	Work on the left section of the engine case.....	143	18.5.10	Installing the force pump.....	171
18.4.3	Work on the clutch cover	144	18.5.11	Installing the suction pump	172
18.4.4	Checking the oil pressure regulator valve....	146	18.5.12	Installing the locking lever	173
18.4.5	Checking the lubrication system.....	146	18.5.13	Installing the shift drum locating unit	173
18.4.6	Removing the crankshaft bearing inner race	147	18.5.14	Installing the shift shaft	173
18.4.7	Installing the crankshaft bearing inner race	147	18.5.15	Installing the clutch basket.....	173
18.4.8	Changing the connecting rod, conrod bearing and crank pin	147	18.5.16	Installing the clutch discs	174
18.4.9	Checking the crankshaft run-out at the bearing pin	149	18.5.17	Installing the clutch cover	175
18.4.10	Measuring the crankshaft end play	149	18.5.18	Installing the water pump cover	176
18.4.11	Removing the drive wheel of the balancer shaft.....	149	18.5.19	Installing the starter drive	176
18.4.12	Installing the drive wheel of the balancer shaft.....	150	18.5.20	Installing the piston	178
18.4.13	Cylinder - Nikasil® coating.....	150	18.5.21	Installing the cylinder head.....	179
18.4.14	Checking/measuring the cylinder.....	150	18.5.22	Installing the camshafts.....	180
18.4.15	Checking/measuring the piston	151	18.5.23	Checking the valve timing	180
18.4.16	Measuring the piston/cylinder mounting clearance.....	151	18.5.24	Adjusting the valve timing	181
18.4.17	Checking the piston ring end gap	152	18.5.25	Installing the timing chain tensioner.....	182
18.4.18	Changing the camshaft bearing	152	18.5.26	Checking the valve clearance	183
18.4.19	Checking the camshafts.....	153	18.5.27	Adjusting the valve clearance.....	183
18.4.20	Checking the pivot points of the camshafts.....	153	18.5.28	Installing the torque limiter	184
18.4.21	Removing the valves	154	18.5.29	Installing the alternator cover	184
18.4.22	Checking the valves	155	18.5.30	Installing the valve cover	184
18.4.23	Checking the valve springs	155	18.5.31	Installing the spark plug	185
18.4.24	Checking the valve spring seat	155	18.5.32	Installing the oil filter.....	185
18.4.25	Checking the cam levers.....	155	18.5.33	Installing the oil screen.....	185
18.4.26	Checking the cylinder head.....	156	18.5.34	Installing the spacer	186
18.4.27	Installing the valves	156	18.5.35	Installing the clutch push rod	186
18.4.28	Checking the freewheel.....	157	18.5.36	Removing the engine from the engine assembly stand	186
18.4.29	Removing the freewheel.....	157	19	CLUTCH	187
18.4.30	Installing the freewheel.....	158	19.1	Checking/rectifying the fluid level of the hydraulic clutch.....	187
18.4.31	Checking the electric starter drive	159	19.2	Changing the hydraulic clutch fluid	187
18.4.32	Checking the timing assembly	160	20	WATER PUMP, COOLING SYSTEM	188
18.4.33	Preparing the timing chain tensioner for installation	160	20.1	Cooling system	188
18.4.34	Checking the clutch	161	20.2	Checking the antifreeze and coolant level.....	188
18.4.35	Checking the shift mechanism.....	162	20.3	Checking the coolant level.....	189
18.4.36	Preamsembling the shift shaft.....	163	20.4	Draining the coolant.....	189
18.4.37	Disassembling the main shaft	164	20.5	Refilling coolant	190
18.4.38	Disassembling the countershaft.....	164	21	LUBRICATION SYSTEM	191
18.4.39	Checking the transmission.....	165	21.1	Oil circuit	191
18.4.40	Assembling the main shaft.....	166	21.2	Checking the engine oil level	191
18.4.41	Assembling the countershaft.....	167	21.3	Changing the engine oil and oil filter, cleaning the oil screen	192
18.5	Engine assembly.....	168	21.4	Adding engine oil	194
18.5.1	Installing the crankshaft	168	21.5	Checking the engine oil pressure	194
18.5.2	Installing the transmission shafts	168	22	IGNITION SYSTEM.....	196
18.5.3	Installing the shift forks	169	22.1	Ignition coil - checking the secondary winding.....	196
18.5.4	Installing the shift drum	169	22.2	Checking the spark plug connector.....	196
			22.3	Alternator - checking the stator winding.....	196
			22.4	Removing the stator and ignition pulse generator.....	197
			22.5	Installing the stator and ignition pulse generator.....	198

TABLE OF CONTENTS

23	ELECTRIC STARTER.....	199
23.1	Checking the starter motor.....	199
24	THROTTLE VALVE BODY	200
24.1	Adjusting the idle speed	200
24.2	Executing the initialization run	200
25	TECHNICAL DATA	201
25.1	Engine	201
25.2	Engine tolerance, wear limits.....	201
25.3	Engine tightening torques.....	202
25.4	Capacities	203
25.4.1	Engine oil.....	203
25.4.2	Coolant.....	203
25.4.3	Fuel.....	203
25.5	Chassis	204
25.6	Electrical system.....	204
25.7	Tires	205
25.8	Fork.....	205
25.9	Shock absorber	205
25.10	Chassis tightening torques	206
26	CLEANING, CARE	207
26.1	Cleaning the motorcycle.....	207
26.2	Checks and maintenance steps for winter operation.....	208
27	STORAGE.....	209
27.1	Storage	209
27.2	Preparing for use after storage	209
28	SERVICE SCHEDULE.....	210
28.1	Service schedule.....	210
28.2	Service work (as additional order)	211
29	WIRING DIAGRAM	212
29.1	Page 1 of 8 (FE 350 EU).....	212
29.2	Page 2 of 8 (FE 350 EU).....	214
29.3	Page 3 of 8 (FE 350 EU).....	216
29.4	Page 4 of 8 (FE 350 EU).....	218
29.5	Page 5 of 8 (FE 350 EU).....	220
29.6	Page 6 of 8 (FE 350 EU).....	222
29.7	Page 7 of 8 (FE 350 EU).....	224
29.8	Page 8 of 8 (FE 350 EU).....	226
29.9	Page 1 of 8 (FE 350 AU).....	228
29.10	Page 2 of 8 (FE 350 AU).....	230
29.11	Page 3 of 8 (FE 350 AU).....	232
29.12	Page 4 of 8 (FE 350 AU).....	234
29.13	Page 5 of 8 (FE 350 AU).....	236
29.14	Page 6 of 8 (FE 350 AU).....	238
29.15	Page 7 of 8 (FE 350 AU).....	240
29.16	Page 8 of 8 (FE 350 AU).....	242
29.17	Page 1 of 6 (FE 350 US).....	244
29.18	Page 2 of 6 (FE 350 US).....	246
29.19	Page 3 of 6 (FE 350 US).....	248
29.20	Page 4 of 6 (FE 350 US).....	250
29.21	Page 5 of 6 (FE 350 US).....	252
29.22	Page 6 of 6 (FE 350 US).....	254
30	SUBSTANCES.....	256
31	AUXILIARY SUBSTANCES.....	257
32	SPECIAL TOOLS	259
33	STANDARDS	271
	INDEX	272

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed both in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty.

Additional information on the manufacturer or implied warranty and the procedures involved can be found in the service booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.

The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.


International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

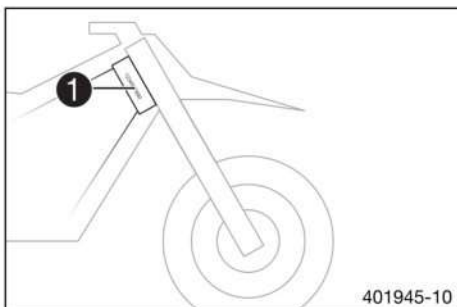


The chassis number ❶ is stamped on the steering head on the right.

4.2 Type label (FE 350 EU/AU)

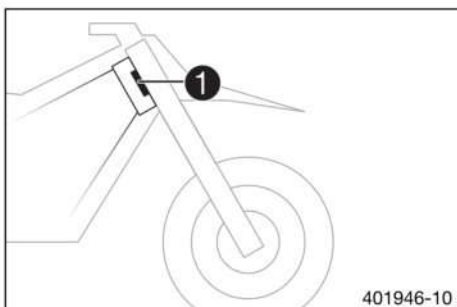


The type label ❶ is fixed to the front of the steering head.

4.3 Key number (FE 350 EU/AU)

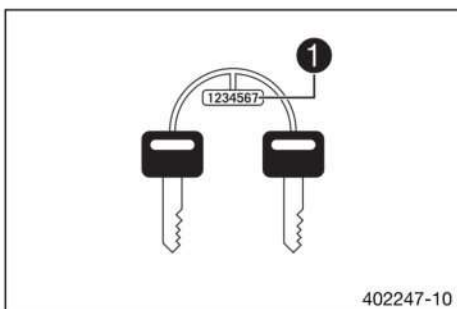


The key number ❶ for the steering lock is stamped onto the key connector.

4.4 Engine number

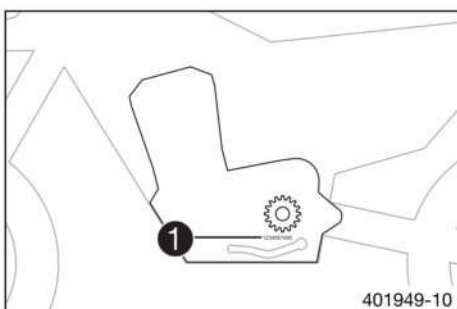


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

4.5 Fork part number

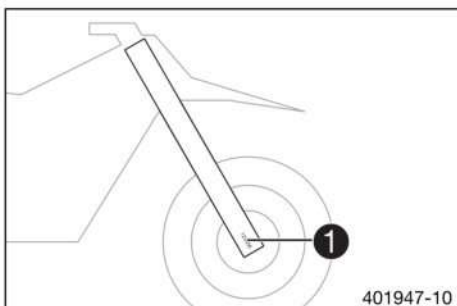

The fork part number ❶ is stamped on the inner side of the fork stub.

4.6 Shock absorber article number

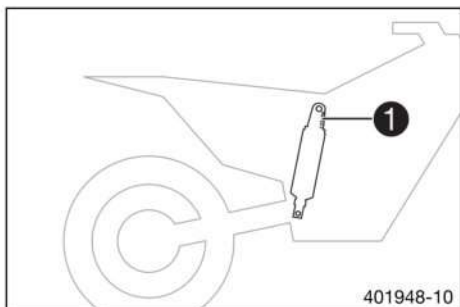

The shock absorber article number **1** is stamped on the top of the shock absorber above the adjusting ring towards the engine side.