

REPAIR MANUAL 2014



TE 125 EU

Art. no.3403004en

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015Husqvarna Motorcycles GmbH,MattighofenAustria

All rights reserved

Reprinting, including excerpts, and duplication of any kind only with the written consent of the publisher.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by:TÜV Management Service

REG.NO. 12 100 6061

Husqvarna Motorcycles GmbH
5230Mattighofen,Austria



TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	7.2	Adjusting the handlebar position	35
1.1	Symbols used	6	7.3	Adjusting the basic position of the clutch lever	35
1.2	Formats used	6	7.4	Checking the throttle cable routing	36
2	SAFETY ADVICE	7	7.5	Checking the play in the throttle cable	36
2.1	Repair manual	7	7.6	Adjusting the play in the throttle cable	37
2.2	Safety advice	7	8	FRAME	38
2.3	Degrees of risk and symbols	7	8.1	Removing the engine guard.....	38
2.4	Work rules	7	8.2	Installing the engine guard.....	38
3	IMPORTANT NOTES	8	8.3	Checking the frame.....	38
3.1	Warranty.....	8	9	SHOCK ABSORBER, SWINGARM.....	39
3.2	Operating and auxiliary substances	8	9.1	Adjusting the high-speed compression damping of the shock absorber	39
3.3	Spare parts, accessories	8	9.2	Adjusting the low-speed compression damping of the shock absorber	39
3.4	Figures	8	9.3	Adjusting the rebound damping of the shock absorber.....	40
4	SERIAL NUMBERS.....	9	9.4	Measuring the sag of the unloaded rear wheel.....	40
4.1	Chassis number	9	9.5	Checking the static sag of the shock absorber.....	40
4.2	Type label.....	9	9.6	Checking the riding sag of the shock absorber.....	41
4.3	Engine number.....	9	9.7	Adjusting the spring preload of the shock absorber.....	41
4.4	Fork article number.....	9	9.8	Adjusting the riding sag	42
4.5	Shock absorber article number	9	9.9	Removing the shock absorber.....	42
5	MOTORCYCLE.....	10	9.10	Installing the shock absorber.....	43
5.1	Raising the motorcycle with the lift stand.....	10	9.11	Checking the shock absorber linkage	43
5.2	Removing the motorcycle from the lift stand.....	10	9.12	Servicing the shock absorber	45
5.3	Starting	10	9.13	Removing the spring.....	46
5.4	Starting the motorcycle for checking.....	11	9.14	Disassembling the damper	46
6	FORK, TRIPLE CLAMP	12	9.15	Disassembling the piston rod	47
6.1	Adjusting the compression damping of the fork.....	12	9.16	Disassembling the seal ring retainer	48
6.2	Adjusting the rebound damping of the fork	12	9.17	Changing the pilot bushing.....	49
6.3	Bleeding the fork legs	12	9.18	Checking the damper	50
6.4	Cleaning the dust boots of the fork legs.....	13	9.19	Removing the heim joint	50
6.5	Loosening the fork protection.....	13	9.20	Installing the heim joint	51
6.6	Positioning the fork protection.....	14	9.21	Assembling the seal ring retainer.....	52
6.7	Removing the fork legs	14	9.22	Assembling the piston rod.....	53
6.8	Installing the fork legs	14	9.23	Assembling the damper	54
6.9	Removing the fork protector.....	15	9.24	Bleeding and filling the damper	56
6.10	Installing the fork protector.....	15	9.25	Filling the damper with nitrogen	58
6.11	Performing a fork service.....	16	9.26	Installing the spring.....	59
6.12	Disassembling the fork legs.....	16	9.27	Checking the swingarm	60
6.13	Removing the spring.....	18	9.28	Removing the swingarm	60
6.14	Disassembling the cartridge	19	9.29	Installing the swingarm	61
6.15	Disassembling the piston rod	20	9.30	Changing the swingarm bearing.....	62
6.16	Disassembling the hydrostop unit	21	10	EXHAUST	65
6.17	Disassembling the seal ring retainer.....	21	10.1	Removing the main silencer.....	65
6.18	Checking the fork legs	22	10.2	Installing the main silencer.....	65
6.19	Assembling the seal ring retainer.....	23	10.3	Changing the glass fiber yarn filling in the main silencer	65
6.20	Assembling the hydrostop unit	23	11	AIR FILTER	67
6.21	Assembling the piston rod	24	11.1	Removing the air filter box cover	67
6.22	Assembling the cartridge	25	11.2	Installing the air filter box cover	67
6.23	Assembling the fork legs	26	11.3	Removing the air filter	67
6.24	Greasing the steering head bearing.....	30	11.4	Installing the air filter	67
6.25	Removing the lower triple clamp	30	11.5	Cleaning the air filter and air filter box	68
6.26	Installing the lower triple clamp	31	11.6	Sealing the air filter box	68
6.27	Checking the play of the steering head bearing.....	32			
6.28	Changing the steering head bearing.....	33			
6.29	Adjusting the play of the steering head bearing.....	34			
7	HANDLEBAR, CONTROLS.....	35			
7.1	Handlebar position.....	35			

TABLE OF CONTENTS

3

12	FUEL TANK, SEAT, TRIM.....	69	16.12	Checking the rear brake fluid level	98
12.1	Opening the filler cap.....	69	16.13	Adding rear brake fluid	98
12.2	Closing the filler cap	69	16.14	Changing the rear brake fluid	99
12.3	Removing the right side cover.....	69	17	LIGHTING SYSTEM, INSTRUMENTS	101
12.4	Installing the right side cover	70	17.1	Setting the speedometer	101
12.5	Removing the seat	70	17.2	Setting the kilometers or miles	102
12.6	Mounting the seat.....	70	17.3	Setting the clock	102
12.7	Removing the fuel tank	70	17.4	Setting the wheel circumference	102
12.8	Installing the fuel tank	71	17.5	Setting the service display.....	103
12.9	Fuel tap	72	17.6	Checking the headlight setting	103
13	MASK, FENDER	73	17.7	Adjusting the headlight range	104
13.1	Removing the front fender	73	18	ENGINE	105
13.2	Installing the front fender	73	18.1	Removing the engine	105
13.3	Removing the headlight mask with the headlight	74	18.2	Installing the engine	108
13.4	Installing the headlight mask with the headlight	74	18.3	Engine disassembly	112
14	WHEELS	75	18.3.1	Clamping the engine into the engine work stand	112
14.1	Checking the tire air pressure.....	75	18.3.2	Draining the gear oil	112
14.2	Checking the tire condition.....	75	18.3.3	Removing the shift lever.....	112
14.3	Checking the brake discs	76	18.3.4	Removing the engine sprocket	113
14.4	Checking the spoke tension	76	18.3.5	Removing the clutch push rod	113
14.5	Front wheel	77	18.3.6	Removing the spacer	113
14.5.1	Removing the front wheel	77	18.3.7	Removing the alternator cover	113
14.5.2	Installing the front wheel	77	18.3.8	Removing the kick starter	114
14.5.3	Removing the brake disc of the front brake	78	18.3.9	Removing the cylinder head.....	114
14.5.4	Installing the brake disc of the front brake.....	78	18.3.10	Removing the cylinder.....	115
14.5.5	Changing the front wheel bearing	78	18.3.11	Removing the piston	115
14.6	Rear wheel	79	18.3.12	Removing the water pump cover	116
14.6.1	Removing the rear wheel.....	79	18.3.13	Removing the clutch cover.....	116
14.6.2	Installing the rear wheel.....	80	18.3.14	Removing the clutch discs	117
14.6.3	Removing the brake disc of the rear brake	81	18.3.15	Removing the outer clutch hub.....	117
14.6.4	Installing the brake disc of the rear brake	81	18.3.16	Removing the primary gear	118
14.6.5	Checking the chain for dirt	81	18.3.17	Removing the kick starter shaft.....	119
14.6.6	Cleaning the chain.....	82	18.3.18	Removing the shift shaft.....	119
14.6.7	Checking the chain tension.....	82	18.3.19	Removing the shift drum locating unit	119
14.6.8	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	83	18.3.20	Removing the rotor.....	120
14.6.9	Adjusting the chain tension	84	18.3.21	Removing the stator	120
14.6.10	Changing the drivetrain kit	85	18.3.22	Removing the reed valve housing	120
14.6.11	Changing the rear wheel bearing	87	18.3.23	Removing the left engine case section	121
15	WIRING HARNESS, BATTERY	89	18.3.24	Removing the shift rails.....	121
15.1	Plug-in connection, ignition timing map	89	18.3.25	Removing the shift drum	121
15.2	Checking the capacitor.....	89	18.3.26	Removing the shift forks	122
16	BRAKE SYSTEM	90	18.3.27	Removing the transmission shafts	122
16.1	Checking the front brake linings	90	18.3.28	Removing the crankshaft	122
16.2	Changing the front brake linings.....	90	18.4	Working on individual parts	123
16.3	Checking the free travel of the hand brake lever	92	18.4.1	Work on the right section of the engine case	123
16.4	Adjusting free travel of hand brake lever	92	18.4.2	Working on the left section of the engine case	124
16.5	Checking the front brake fluid level	92	18.4.3	Removing the crankshaft bearing inner race	125
16.6	Adding front brake fluid	93	18.4.4	Installing the crankshaft bearing inner race	125
16.7	Changing the front brake fluid	94	18.4.5	Changing the connecting rod, conrod bearing, and crank pin	125
16.8	Checking the rear brake linings	95	18.4.6	Checking the crankshaft run-out at the bearing pin	126
16.9	Changing the rear brake linings.....	95	18.4.7	Checking/measuring the cylinder.....	127
16.10	Checking the free travel of the foot brake lever	97	18.4.8	Removing the exhaust control	127
16.11	Adjusting the basic position of the foot brake lever	97			

18.4.9	Checking the exhaust control in the cylinder.....	129	18.5.29	Installing the engine sprocket	163
18.4.10	Installing the exhaust control	130	18.5.30	Installing the shift lever.....	164
18.4.11	Cylinder - Nikasil® coating.....	132	18.5.31	Installing the gear oil drain plug	164
18.4.12	Checking/measuring the piston	132	18.5.32	Removing the engine from the engine work stand.....	164
18.4.13	Checking the piston ring end gap	133	19	CARBURETOR	165
18.4.14	Piston/cylinder - measuring the mounting clearance	133	19.1	Choke.....	165
18.4.15	Disassembling the reed valve housing.....	133	19.2	Carburetor - adjusting the idle speed	165
18.4.16	Checking the reed valve housing, reed valve and intake flange.....	134	19.3	Emptying the carburetor float chamber	166
18.4.17	Assembling the reed valve housing.....	135	19.4	Removing the carburetor	166
18.4.18	Changing the water pump bearing.....	136	19.5	Installing the carburetor	167
18.4.19	Removing the exhaust control in the clutch cover.....	138	19.6	Checking/adjusting the carburetor components.....	168
18.4.20	Checking the exhaust control in the clutch cover.....	140	19.7	Disassembling the carburetor.....	169
18.4.21	Installing the exhaust control in the clutch cover.....	140	19.8	Checking the choke slide.....	170
18.4.22	Checking the clutch	142	19.9	Checking the jet needle	170
18.4.23	Changing the absorbing element of the clutch.....	143	19.10	Checking the throttle slide.....	170
18.4.24	Preassembling the shift shaft	143	19.11	Checking the float needle valve.....	171
18.4.25	Checking the shift mechanism	144	19.12	Assembling the carburetor.....	171
18.4.26	Disassembling the main shaft	145	19.13	Checking/adjusting the float level.....	172
18.4.27	Disassembling the countershaft.....	145	20	CLUTCH	173
18.4.28	Checking the transmission	146	20.1	Checking/rectifying the fluid level of the hydraulic clutch.....	173
18.4.29	Assembling the main shaft	147	20.2	Changing the hydraulic clutch fluid	173
18.4.30	Assembling the countershaft.....	148	21	WATER PUMP, COOLING SYSTEM	174
18.4.31	Checking the kick starter	150	21.1	Cooling system	174
18.4.32	Preassembling the kick starter shaft.....	150	21.2	Checking the antifreeze and coolant level.....	174
18.5	Engine assembly.....	151	21.3	Checking the coolant level.....	174
18.5.1	Installing the crankshaft	151	21.4	Draining the coolant.....	175
18.5.2	Installing the transmission shafts	152	21.5	Refilling with coolant.....	175
18.5.3	Installing the shift forks	152	22	LUBRICATION SYSTEM	177
18.5.4	Installing the shift drum	152	22.1	Changing the gear oil.....	177
18.5.5	Installing the shift rails.....	153	22.2	Draining the gear oil.....	177
18.5.6	Installing the left engine case section	153	22.3	Filling in gear oil	178
18.5.7	Installing the reed valve housing	153	22.4	Checking the gear oil level.....	178
18.5.8	Installing the stator	154	22.5	Adding gear oil.....	178
18.5.9	Adjusting the ignition.....	154	23	IGNITION SYSTEM.....	180
18.5.10	Installing the rotor.....	154	23.1	Checking the ignition system.....	180
18.5.11	Installing the shift drum locating unit	155	23.2	Ignition coil - checking the primary winding	180
18.5.12	Installing the shift shaft	156	23.3	Ignition coil - checking the secondary winding.....	181
18.5.13	Installing the kick starter shaft	156	23.4	Checking the spark plug connector.....	181
18.5.14	Installing the primary gear.....	156	23.5	Alternator - checking the charging coil of the ignition	182
18.5.15	Installing the clutch basket.....	157	23.6	Alternator - checking the light winding	182
18.5.16	Installing the clutch discs.....	158	23.7	Checking the crankshaft position sensor	183
18.5.17	Installing the clutch cover	158	24	TECHNICAL DATA	184
18.5.18	Installing the water pump cover.....	158	24.1	Engine.....	184
18.5.19	Installing the piston	159	24.2	Engine - tolerance, wear limits.....	184
18.5.20	Installing the cylinder.....	159	24.3	Engine tightening torques.....	185
18.5.21	Checking the X-distance	160	24.4	Capacities	186
18.5.22	Adjusting the X-distance	160	24.4.1	Gear oil	186
18.5.23	Adjusting the Z-distance	161	24.4.2	Coolant.....	186
18.5.24	Installing the cylinder head.....	162	24.4.3	Fuel.....	186
18.5.25	Installing the kick starter	162	24.5	Chassis	186
18.5.26	Installing the alternator cover	163	24.6	Electrical system.....	187
18.5.27	Installing the spacer	163	24.7	Tires	187
18.5.28	Installing the clutch push rod	163	24.8	Fork.....	187
			24.9	Shock absorber	187
			24.10	Chassis tightening torques	188

24.11	Carburetor.....	189
24.12	Carburetor tuning.....	190
24.12.1	Carburetor tuning	190
24.12.2	General carburetor tuning	191
25	CLEANING, CARE.....	192
25.1	Cleaning the motorcycle.....	192
25.2	Checks and maintenance steps for winter operation.....	193
26	STORAGE.....	194
26.1	Storage	194
26.2	Preparing for use after storage	194
27	SERVICE SCHEDULE.....	195
27.1	Service schedule.....	195
27.2	Service work (as additional order)	196
28	WIRING DIAGRAM	198
28.1	Page 1 of 5.....	198
28.2	Page 2 of 5.....	200
28.3	Page 3 of 5.....	202
28.4	Page 4 of 5.....	204
28.5	Page 5 of 5.....	206
29	SUBSTANCES.....	208
30	AUXILIARY SUBSTANCES.....	210
31	SPECIAL TOOLS	212
32	STANDARDS	221
	INDEX	222

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair manual

- It is imperative that you read this owner's manual carefully and completely before the start of work. It contains useful information and many tips on how to repair and maintain your vehicle.
- This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are needed for certain tasks. They are not included with the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

When the vehicle is assembled, non-reusable parts (e.g., self-locking screws and nuts, gaskets, seal rings, O-rings, splints, lock washers) must be replaced with new parts.

Where thread lockers are used on screw connections (e.g., **Loctite**®), follow the instructions for use from the manufacturer.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After you complete the repair or maintenance work, check the roadworthiness of the vehicle.

3.1 Warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage or secondary damage resulting from modifications and/or alterations to the vehicle.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.

The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.
International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.