

REPAIR MANUAL 2014



1	MEANS OF REPRESENTATION	6	6.2.6	Positioning the fork protector	36
1.1	Symbols used	6	6.2.7	Removing the fork legs	36
1.2	Formats used.....	6	6.2.8	Installing the fork legs.....	36
2	SAFETY ADVICE.....	7	6.2.9	Removing the fork protector	37
2.1	Repair Manual	7	6.2.10	Installing the fork protector.....	37
2.2	Safety advice.....	7	6.2.11	Performing a fork service	37
2.3	Degrees of risk and symbols	7	6.2.12	Disassembling the fork legs	38
2.4	Work rules.....	7	6.2.13	Removing the spring	40
3	IMPORTANT NOTES.....	8	6.2.14	Disassembling the cartridge	41
3.1	Guarantee, warranty	8	6.2.15	Disassembling the piston rod	42
3.2	Operating and auxiliary substances	8	6.2.16	Disassembling the hydrostop unit	43
3.3	Spare parts, accessories	8	6.2.17	Disassembling the seal ring retainer.....	43
3.4	Figures	8	6.2.18	Checking the fork legs.....	44
4	SERIAL NUMBERS	9	6.2.19	Assembling the seal ring retainer.....	45
4.1	Chassis number	9	6.2.20	Assembling the hydrostop unit	45
4.2	Type label	9	6.2.21	Assembling the piston rod	46
4.3	Key number (All EXC-F models).....	9	6.2.22	Assembling the cartridge	47
4.4	Engine number	10	6.2.23	Assembling the fork legs.....	48
4.5	Fork part number	10	6.2.24	Greasing the steering head bearing.....	52
4.6	Shock absorber part number	10	6.2.25	Removing the lower triple clamp	52
5	MOTORCYCLE	11	6.2.26	Installing the lower triple clamp	53
5.1	Raising the motorcycle with the lift stand.....	11	6.2.27	Checking the steering head bearing play	54
5.2	Removing the motorcycle from the lift stand.....	11	6.2.28	Adjusting the play of the steering head bearing	55
5.3	Starting.....	11	7	HANDLEBAR, CONTROLS.....	56
5.4	Starting the motorcycle for a check.....	12	7.1	Handlebar position.....	56
6	FORK, TRIPLE CLAMP	13	7.2	Adjusting handlebar position	56
6.1	EXC-F EU/AUS/USA, XCF-W.....	13	7.3	Adjusting the basic position of the clutch lever	56
6.1.1	Adjusting the compression damping of the fork	13	7.4	Checking the throttle cable routing	57
6.1.2	Adjusting the rebound damping of the fork....	13	7.5	Checking the play in the throttle cable	57
6.1.3	Adjusting the spring preload of the fork.....	13	7.6	Adjusting the play in the throttle cable.....	58
6.1.4	Bleeding fork legs	14	8	FRAME	59
6.1.5	Cleaning the dust boots of the fork legs.....	14	8.1	Removing the engine guard (EXC-F AUS, All Six Days models)	59
6.1.6	Loosening the fork protector.....	15	8.2	Installing the engine guard (EXC-F AUS, All Six Days models)	59
6.1.7	Positioning the fork protector	15	9	SHOCK ABSORBER, SWINGARM	60
6.1.8	Removing the fork legs	15	9.1	Adjusting the high-speed compression damping of the shock absorber	60
6.1.9	Installing the fork legs.....	16	9.2	Adjusting the low-speed compression damping of the shock absorber	60
6.1.10	Removing the fork protector.....	16	9.3	Adjusting the rebound damping of the shock absorber.....	61
6.1.11	Installing the fork protector.....	17	9.4	Measuring rear wheel sag unloaded.....	61
6.1.12	Performing a fork service	17	9.5	Checking the static sag of the shock absorber....	61
6.1.13	Disassembling the fork legs	17	9.6	Checking the riding sag of the shock absorber....	62
6.1.14	Cartridge disassembly	20	9.7	Adjusting the spring preload of the shock absorber.....	62
6.1.15	Disassembling the compression damping fitting	22	9.8	Adjusting the riding sag	63
6.1.16	Checking the fork legs.....	22	9.9	Removing the shock absorber.....	63
6.1.17	Assembling the compression damping fitting	24	9.10	Installing the shock absorber.....	63
6.1.18	Assembling the cartridge	24	9.11	Servicing the shock absorber.....	64
6.1.19	Assembling the fork legs.....	26	9.12	Removing the spring.....	64
6.1.20	Greasing the steering head bearing	30	9.13	Disassembling the damper	65
6.1.21	Removing the lower triple clamp	30	9.14	Disassembling the piston rod	66
6.1.22	Installing the lower triple clamp	31	9.15	Disassembling the seal ring retainer.....	67
6.1.23	Checking the steering head bearing play	33	9.16	Replacing the pilot bushing	68
6.1.24	Adjusting the play of the steering head bearing	33	9.17	Checking the damper	69
6.2	All Six Days models.....	34	9.18	Disassembling the rebound adjuster.....	69
6.2.1	Adjusting the compression damping of the fork	34	9.19	Removing the heim joint.....	70
6.2.2	Adjusting the rebound damping of the fork....	34	9.20	Installing the heim joint.....	71
6.2.3	Bleeding fork legs	34			
6.2.4	Cleaning the dust boots of the fork legs.....	35			
6.2.5	Loosening the fork protector.....	35			

9.21	Assembling the rebound adjuster.....	72	15	WIRING HARNESS, BATTERY.....	111
9.22	Assembling the seal ring retainer.....	72	15.1	Removing the main fuse.....	111
9.23	Assembling the piston rod.....	73	15.2	Installing the main fuse.....	111
9.24	Assembling the damper.....	74	15.3	Changing the fuses of individual power consumers.....	111
9.25	Bleeding and filling the damper.....	77	15.4	Removing the battery.....	112
9.26	Filling the damper with nitrogen.....	79	15.5	Installing the battery.....	113
9.27	Installing the spring.....	80	15.6	Checking the charging voltage.....	113
9.28	Changing the heim joint.....	81	15.7	Checking the quiescent current.....	113
10	EXHAUST.....	83	16	BRAKE SYSTEM.....	115
10.1	Removing the manifold.....	83	16.1	Checking the front brake linings.....	115
10.2	Installing the manifold.....	83	16.2	Changing the front brake linings.....	115
10.3	Removing main silencer.....	84	16.3	Checking free travel of hand brake lever.....	117
10.4	Installing the main silencer.....	84	16.4	Adjusting the basic position of the hand brake lever (All XCF-W models).....	117
10.5	Changing the glass fiber yarn filling of the main silencer.....	84	16.5	Adjusting free travel of hand brake lever (All EXC-F models).....	117
10.6	Cleaning spark arrestor (EXC-F US, All XCF-W models).....	85	16.6	Checking the brake fluid level of the front brake.....	118
11	AIR FILTER.....	87	16.7	Adding front brake fluid.....	118
11.1	Removing the air filter box lid.....	87	16.8	Changing the front brake fluid.....	119
11.2	Installing the air filter box lid.....	87	16.9	Checking the rear brake linings.....	120
11.3	Sealing the air filter box.....	87	16.10	Changing the rear brake linings.....	120
11.4	Removing the air filter.....	87	16.11	Checking the free travel of foot brake lever.....	122
11.5	Installing the air filter.....	88	16.12	Adjusting the basic position of the foot brake lever.....	122
11.6	Cleaning the air filter and air filter box.....	88	16.13	Checking the rear brake fluid level.....	123
12	FUEL TANK, SEAT, TRIM.....	90	16.14	Adding rear brake fluid.....	123
12.1	Opening filler cap.....	90	16.15	Changing the rear brake fluid.....	124
12.2	Closing filler cap.....	90	17	LIGHTING SYSTEM, INSTRUMENTS.....	126
12.3	Removing the seat.....	90	17.1	Checking the headlight setting.....	126
12.4	Mounting the seat.....	91	17.2	Adjusting the headlight range.....	126
12.5	Removing the fuel tank.....	91	17.3	EXC-F EU/AUS/USA, XCF-W.....	126
12.6	Installing the fuel tank.....	92	17.3.1	Speedometer overview.....	126
12.7	Changing the fuel screen.....	93	17.3.2	Activation and test.....	127
12.8	Changing the fuel filter.....	94	17.3.3	Setting kilometers or miles.....	127
12.9	Changing the fuel pump.....	96	17.3.4	Adjusting the speedometer functions.....	127
12.10	Checking the fuel pressure.....	97	17.3.5	Setting the clock.....	128
13	MASK, FENDER.....	99	17.3.6	Setting the wheel circumference.....	128
13.1	Removing the front fender.....	99	17.3.7	Querying lap time.....	129
13.2	Installing the front fender.....	99	17.4	All Six Days models.....	129
13.3	Removing headlight mask with headlight.....	99	17.4.1	Speedometer overview.....	129
13.4	Refitting the headlight mask with the headlight.....	100	17.4.2	Activation and test.....	130
14	WHEELS.....	101	17.4.3	Setting kilometers or miles.....	130
14.1	Checking the tire air pressure.....	101	17.4.4	Setting the speedometer functions.....	130
14.2	Checking the tire condition.....	101	17.4.5	Setting the clock.....	131
14.3	Checking the brake discs.....	102	17.4.6	Activating the additional functions.....	131
14.4	Checking spoke tension.....	102	17.4.7	Setting the wheel circumference.....	132
14.5	Front wheel.....	103	17.4.8	Viewing the lap time.....	132
14.5.1	Removing the front wheel.....	103	18	ENGINE.....	134
14.5.2	Installing the front wheel.....	103	18.1	Removing the engine.....	134
14.5.3	Removing the front brake disc.....	104	18.2	Installing the engine.....	138
14.5.4	Installing the front brake disc.....	104	18.3	Engine disassembly.....	142
14.6	Rear wheel.....	104	18.3.1	Preparations.....	142
14.6.1	Removing the rear wheel.....	104	18.3.2	Removing the clutch push rod.....	143
14.6.2	Installing the rear wheel.....	105	18.3.3	Removing the spacer.....	143
14.6.3	Removing the rear brake disc.....	106	18.3.4	Draining the engine oil.....	143
14.6.4	Installing the rear brake disc.....	106	18.3.5	Removing the oil filter.....	143
14.6.5	Checking the chain tension.....	107	18.3.6	Removing the spark plug.....	144
14.6.6	Adjusting the chain tension.....	107	18.3.7	Removing the valve cover.....	144
14.6.7	Checking the chain, rear sprocket, engine sprocket and chain guide.....	108	18.3.8	Removing the kick starter.....	144
14.6.8	Checking for chain dirt accumulation.....	110	18.3.9	Removing the alternator cover.....	145
14.6.9	Cleaning the chain.....	110			

18.3.10	Removing the torque limiter	145	18.4.22	Checking the valves	169
18.3.11	Positioning the engine at ignition top dead center	145	18.4.23	Checking the valve springs	170
18.3.12	Removing the timing chain tensioner	146	18.4.24	Checking the valve spring seat	170
18.3.13	Removing the camshaft	146	18.4.25	Checking the cam levers	170
18.3.14	Removing the cylinder head	147	18.4.26	Checking the cylinder head	170
18.3.15	Removing the piston	147	18.4.27	Installing the valves	171
18.3.16	Removing the starter drive	148	18.4.28	Checking the freewheel	172
18.3.17	Removing the suction pump	149	18.4.29	Removing the freewheel	172
18.3.18	Removing the water pump wheel	150	18.4.30	Installing the freewheel	172
18.3.19	Removing the clutch cover	150	18.4.31	Preassembling the kick starter shaft	173
18.3.20	Removing the clutch discs	150	18.4.32	Checking the electric starter drive	174
18.3.21	Removing the clutch basket	151	18.4.33	Checking the timing assembly	175
18.3.22	Removing the intermediate kick starter gear	152	18.4.34	Preparing the timing chain tensioner for installation	176
18.3.23	Removing the intermediate kick starter gear	152	18.4.35	Checking the clutch	176
18.3.24	Removing the shift shaft	152	18.4.36	Checking the shift mechanism	178
18.3.25	Removing the shift drum locating unit	152	18.4.37	Preassembling the shift shaft	179
18.3.26	Removing the locking lever	152	18.4.38	Disassembling the main shaft	179
18.3.27	Removing the force pump	153	18.4.39	Disassembling the countershaft	180
18.3.28	Removing the primary gear	153	18.4.40	Checking the transmission	180
18.3.29	Removing the timing chain	154	18.4.41	Assembling the main shaft	181
18.3.30	Removing the spacer	154	18.4.42	Assembling the countershaft	182
18.3.31	Removing the left section of the engine case	154	18.5	Engine assembly	183
18.3.32	Removing the shift rails	155	18.5.1	Installing the crankshaft	183
18.3.33	Removing the shift drum	155	18.5.2	Installing the transmission shafts	184
18.3.34	Removing the shift forks	155	18.5.3	Installing the shift forks	184
18.3.35	Removing the transmission shafts	155	18.5.4	Installing the shift drum	184
18.3.36	Removing the crankshaft	156	18.5.5	Installing the shift rails	185
18.4	work on individual parts	156	18.5.6	Installing the left engine case	185
18.4.1	Work on the right section of the engine case	156	18.5.7	Installing the spacer	186
18.4.2	Work on the left section of the engine case	158	18.5.8	Installing the timing chain	186
18.4.3	Work on the clutch cover	159	18.5.9	Installing the primary gear	186
18.4.4	Checking the oil pressure regulator valve	160	18.5.10	Installing the force pump	187
18.4.5	Checking the lubrication system	161	18.5.11	Installing the suction pump	187
18.4.6	Removing the crankshaft bearing inner race	161	18.5.12	Installing the locking lever	188
18.4.7	Installing the crankshaft bearing inner race	162	18.5.13	Installing the shift drum locating unit	188
18.4.8	Changing the connecting rod, conrod bearing and crank pin	162	18.5.14	Installing the shift shaft	189
18.4.9	Checking the crankshaft run-out at the bearing pin	163	18.5.15	Installing the intermediate kick starter gear	189
18.4.10	Measuring the crankshaft end play	164	18.5.16	Installing the kick starter shaft	189
18.4.11	Removing the drive wheel of the balancer shaft	164	18.5.17	Installing the outer clutch hub	189
18.4.12	Installing the drive wheel of the balancer shaft	164	18.5.18	Installing the clutch discs	190
18.4.13	Cylinder - Nikasil® coating	165	18.5.19	Installing the clutch cover	191
18.4.14	Checking/measuring the cylinder	165	18.5.20	Installing the water pump cover	192
18.4.15	Checking/measuring the piston	165	18.5.21	Installing the starter drive	192
18.4.16	Measuring the piston/cylinder mounting clearance	166	18.5.22	Installing the piston	193
18.4.17	Checking the piston ring end gap	166	18.5.23	Installing the cylinder head	195
18.4.18	Changing the camshaft bearing	167	18.5.24	Installing the camshafts	196
18.4.19	Checking the camshafts	167	18.5.25	Checking the valve timing	196
18.4.20	Checking the pivot points of the camshafts	167	18.5.26	Adjusting the valve timing	197
18.4.21	Removing the valves	168	18.5.27	Installing the timing chain tensioner	198
			18.5.28	Checking the valve clearance	199
			18.5.29	Adjusting the valve clearance	199
			18.5.30	Installing the torque limiter	200
			18.5.31	Installing the alternator cover	200
			18.5.32	Installing the kick starter	200
			18.5.33	Installing the valve cover	201
			18.5.34	Installing the spark plug	201
			18.5.35	Installing the oil filter	201
			18.5.36	Installing the oil screen	202
			18.5.37	Installing the spacer	202
			18.5.38	Installing the clutch push rod	203

18.5.39	Removing the engine from the engine assembly stand.....	203	29	WIRING DIAGRAM	232
19	CLUTCH	204	29.1	Page 1 of 8 (EXC-F EU)	232
19.1	Checking/correcting the fluid level of the hydraulic clutch	204	29.2	Page 2 of 8 (EXC-F EU)	234
19.2	Changing the hydraulic clutch fluid	204	29.3	Page 3 of 8 (EXC-F EU)	236
20	WATER PUMP, COOLING SYSTEM	205	29.4	Page 4 of 8 (EXC-F EU)	238
20.1	Cooling system	205	29.5	Page 5 of 8 (EXC-F EU)	240
20.2	Checking the antifreeze and coolant level	205	29.6	Page 6 of 8 (EXC-F EU)	242
20.3	Checking the coolant level	206	29.7	Page 7 of 8 (EXC-F EU)	244
20.4	Draining the coolant	206	29.8	Page 8 of 8 (EXC-F EU)	246
20.5	Refilling coolant	207	29.9	Page 1 of 8 (EXC-F AUS)	248
21	LUBRICATION SYSTEM	208	29.10	Page 2 of 8 (EXC-F AUS)	250
21.1	Oil circuit	208	29.11	Page 3 of 8 (EXC-F AUS)	252
21.2	Checking the engine oil level	208	29.12	Page 4 of 8 (EXC-F AUS)	254
21.3	Changing the engine oil and oil filter, cleaning the oil screen	209	29.13	Page 5 of 8 (EXC-F AUS)	256
21.4	Adding engine oil	211	29.14	Page 6 of 8 (EXC-F AUS)	258
21.5	Checking the engine oil pressure	211	29.15	Page 7 of 8 (EXC-F AUS)	260
22	IGNITION SYSTEM	213	29.16	Page 8 of 8 (EXC-F AUS)	262
22.1	Ignition coil - checking the secondary winding	213	29.17	Page 1 of 8 (EXC-F US)	264
22.2	Checking the spark plug connector	213	29.18	Page 2 of 8 (EXC-F US)	266
22.3	Alternator - checking the stator winding	213	29.19	Page 3 of 8 (EXC-F US)	268
22.4	Removing the stator and ignition pulse generator	214	29.20	Page 4 of 8 (EXC-F US)	270
22.5	Installing the stator and ignition pulse generator	215	29.21	Page 5 of 8 (EXC-F US)	272
23	ELECTRIC STARTER	216	29.22	Page 6 of 8 (EXC-F US)	274
23.1	Checking the starter motor	216	29.23	Page 7 of 8 (EXC-F US)	276
24	THROTTLE VALVE BODY	217	29.24	Page 8 of 8 (EXC-F US)	278
24.1	Adjusting the idle speed	217	29.25	Page 1 of 8 (EXC-F Six Days)	280
24.2	Throttle position sensor circuit A - checking the basic settings	217	29.26	Page 2 of 8 (EXC-F Six Days)	282
24.3	Throttle position sensor - adjusting the basic settings	217	29.27	Page 3 of 8 (EXC-F Six Days)	284
24.4	Executing the initialization run	218	29.28	Page 4 of 8 (EXC-F Six Days)	286
25	TECHNICAL DATA	219	29.29	Page 5 of 8 (EXC-F Six Days)	288
25.1	Engine	219	29.30	Page 6 of 8 (EXC-F Six Days)	290
25.2	Engine tolerance, wear limits	219	29.31	Page 7 of 8 (EXC-F Six Days)	292
25.3	engine tightening torques	220	29.32	Page 8 of 8 (EXC-F Six Days)	294
25.4	capacities	221	29.33	Page 1 of 6 (XCF-W)	296
25.4.1	Engine oil	221	29.34	Page 2 of 6 (XCF-W)	298
25.4.2	Coolant	221	29.35	Page 3 of 6 (XCF-W)	300
25.4.3	Fuel	221	29.36	Page 4 of 6 (XCF-W)	302
25.5	Chassis	222	29.37	Page 5 of 6 (XCF-W)	304
25.6	electrical system	222	29.38	Page 6 of 6 (XCF-W)	306
25.7	Tires	223	29.39	Page 1 of 6 (XCF-W Six Days)	308
25.8	Fork	223	29.40	Page 2 of 6 (XCF-W Six Days)	310
25.8.1	EXC-F EU/AUS/USA, XCF-W	223	29.41	Page 3 of 6 (XCF-W Six Days)	312
25.8.2	All Six Days models	223	29.42	Page 4 of 6 (XCF-W Six Days)	314
25.9	shock absorber	224	29.43	Page 5 of 6 (XCF-W Six Days)	316
25.10	chassis tightening torques	225	29.44	Page 6 of 6 (XCF-W Six Days)	318
26	CLEANING, CARE	227	30	SUBSTANCES	320
26.1	Cleaning the motorcycle	227	31	AUXILIARY SUBSTANCES	322
26.2	Checks and maintenance steps for winter operation	228	32	SPECIAL TOOLS	324
27	STORAGE	229	33	STANDARDS	337
27.1	Storage	229	34	LIST OF ABBREVIATIONS	338
27.2	Preparing for use after storage	229	INDEX		339
28	SERVICE SCHEDULE	230			
28.1	Service schedule	230			
28.2	Service work (as additional order)	231			

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name®	Identifies a protected name.
Brand™	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special KTM tools and KTM workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite®**) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Guarantee, warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's Service & Warranty Booklet and in the **KTM Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage resulting from manipulations and/or alterations to the vehicle.

Additional information on the guarantee or warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by KTM. KTM accepts no liability for other products and any resulting damage or loss.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.


International KTM Website: <http://www.ktm.com>

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

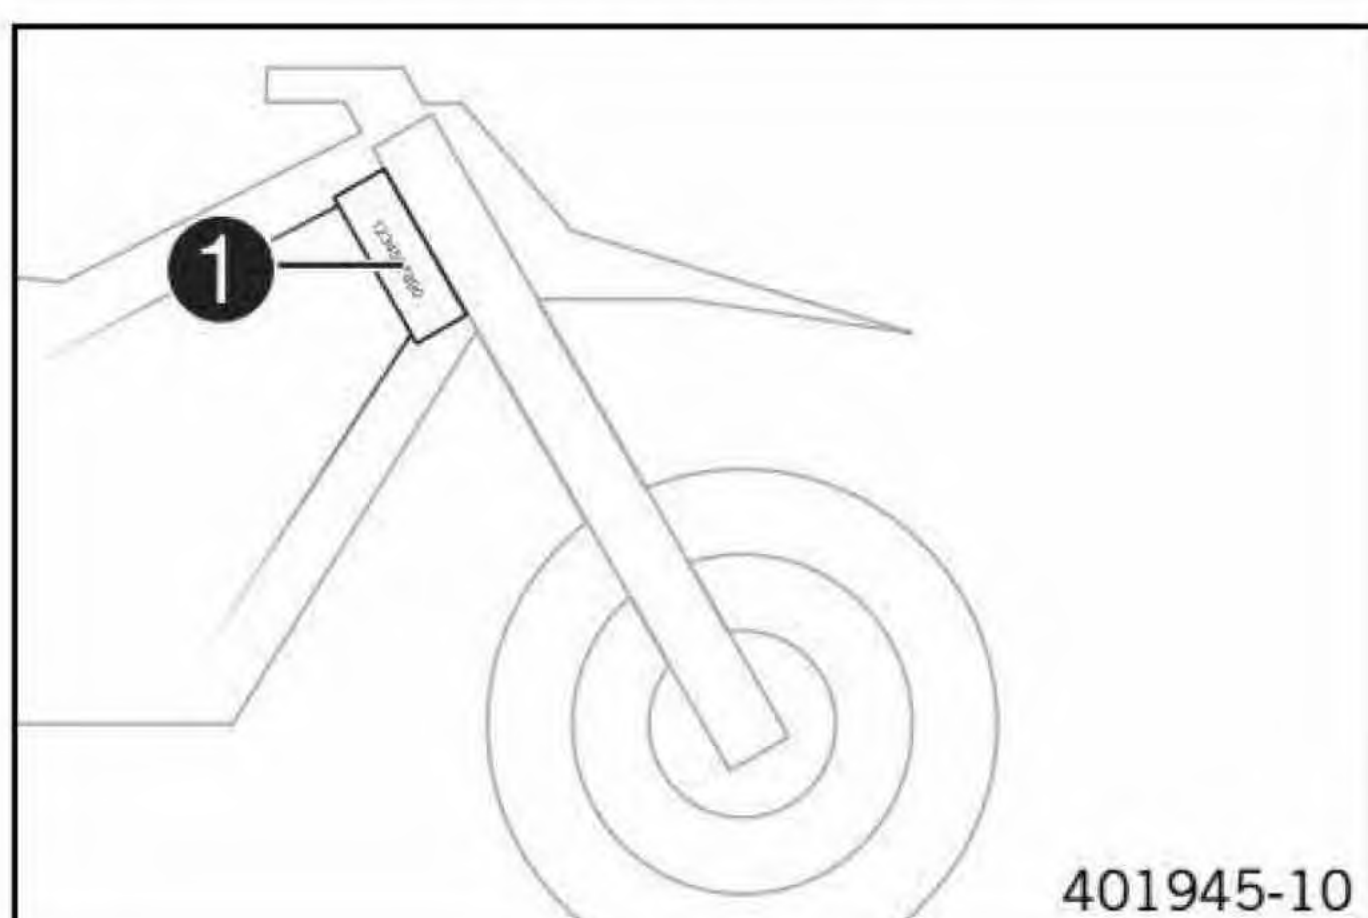


The chassis number **1** is stamped on the steering head on the right.

4.2 Type label

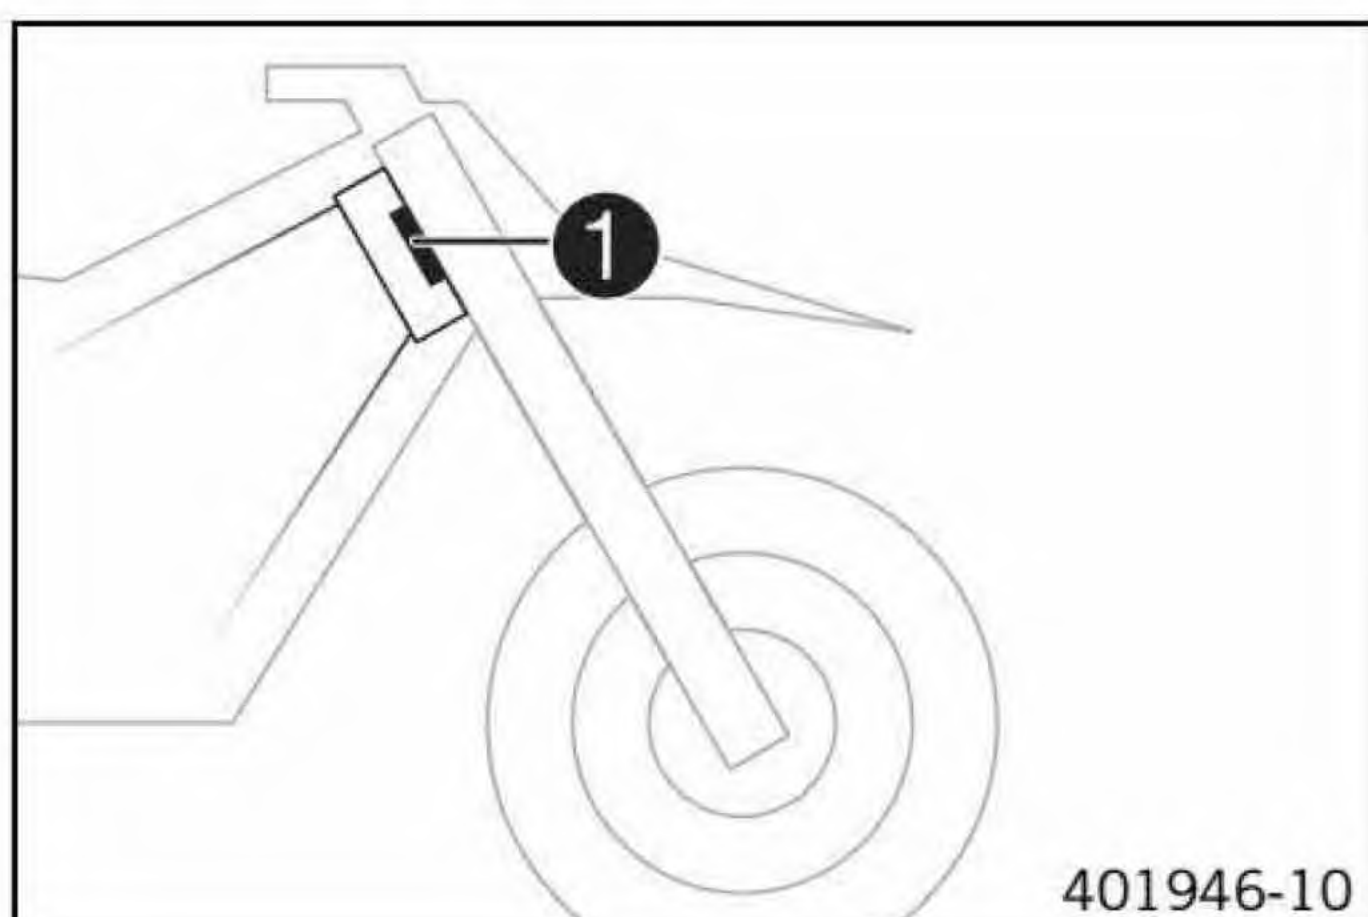

(EXC-F EU/AUS, All XCF-W models, All Six Days models)


The type label **1** is fixed to the front of the steering head.

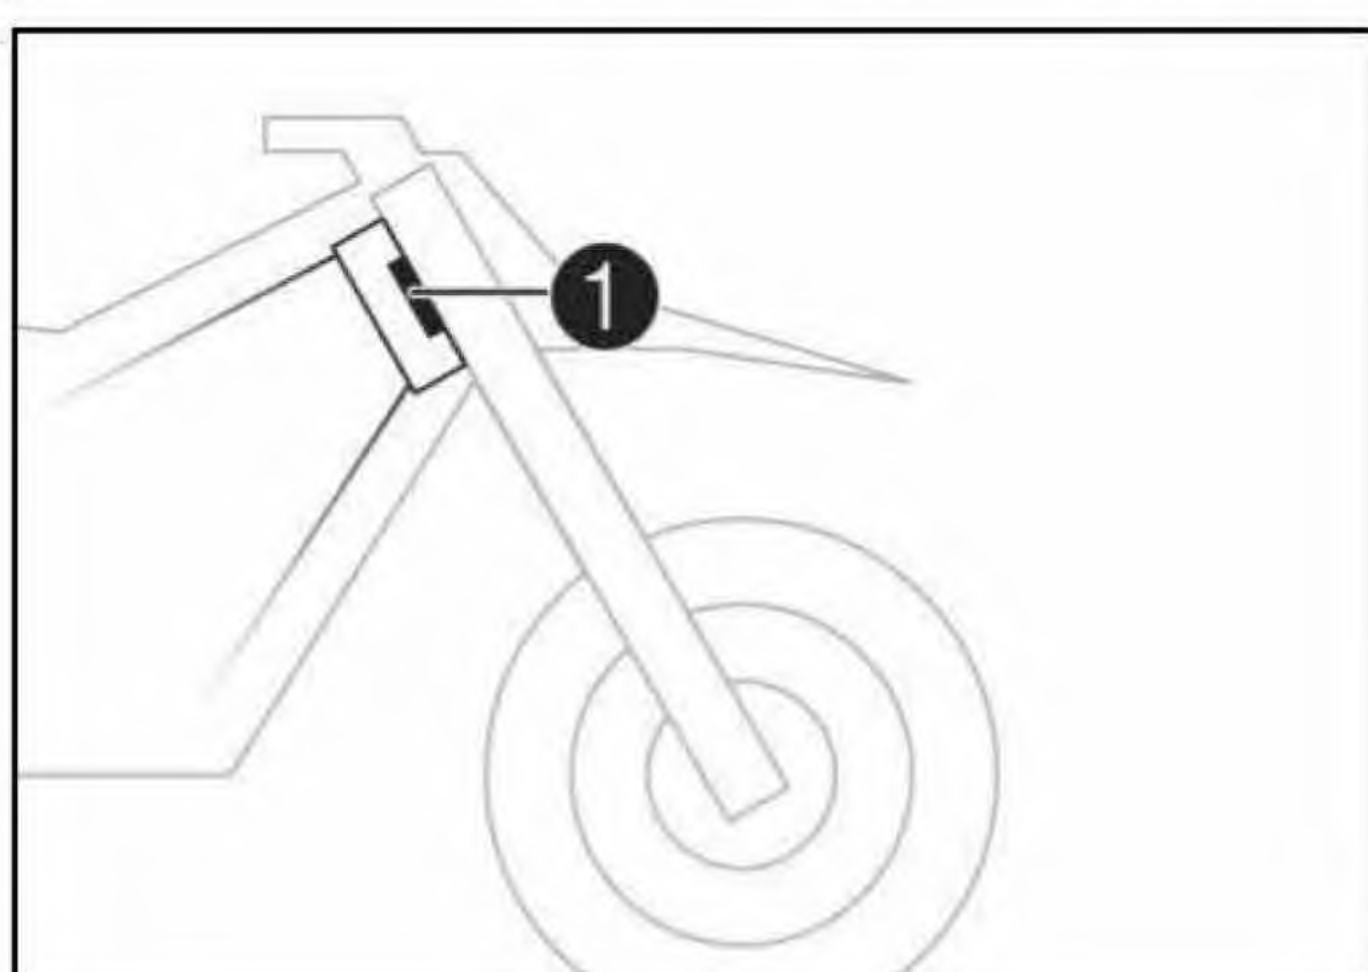


(EXC-F US)

The type label **1** is fixed to the front of the steering head.

The additional type label for Canada **2** is fixed to the front of the front pipe.

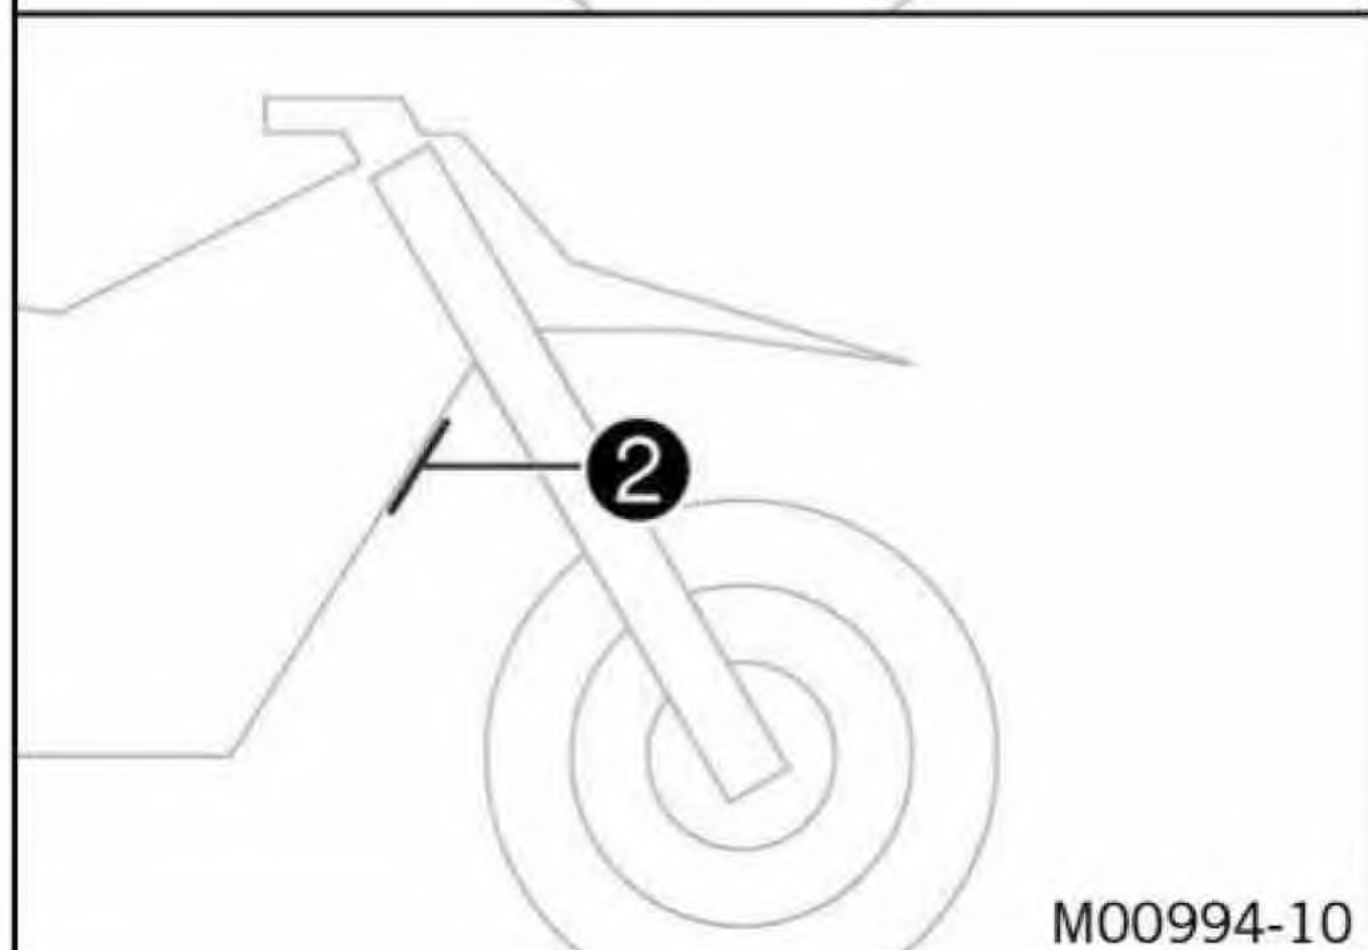

4.3 Key number (All EXC-F models)

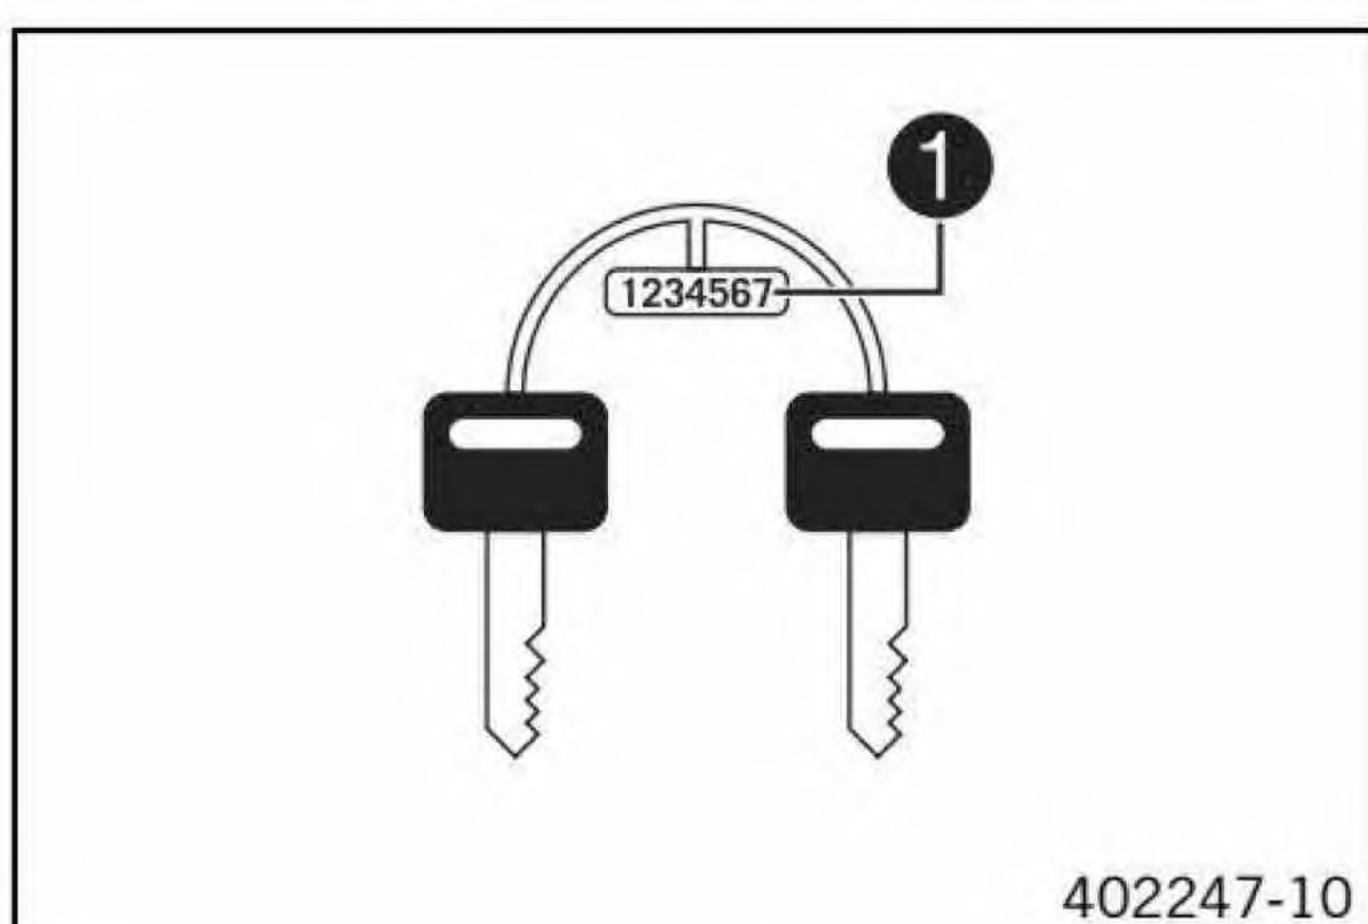

(EXC-F EU/AUS, EXC-F Six Days)

The key number **1** for the steering lock is stamped onto the key connector.