

REPAIR MANUAL 2014



1	MEANS OF REPRESENTATION	6	6.14.14	Assembling the cartridge	32
1.1	Symbols used	6	6.14.15	Assembling the fork legs.....	33
1.2	Formats used.....	6	6.14.16	Bleeding and filling the cartridge.....	37
2	SAFETY ADVICE.....	7	6.14.17	Filling the cartridge with nitrogen	38
2.1	Repair Manual	7	6.15	XC-F	39
2.2	Safety advice.....	7	6.15.1	Performing a fork service	39
2.3	Degrees of risk and symbols	7	6.15.2	Disassembling the fork legs	39
2.4	Work rules.....	7	6.15.3	Removing the spring	41
3	IMPORTANT NOTES.....	8	6.15.4	Disassembling the cartridge	42
3.1	Guarantee, warranty	8	6.15.5	Disassembling the piston rod	43
3.2	Operating and auxiliary substances	8	6.15.6	Disassembling the hydrostop unit	44
3.3	Spare parts, accessories	8	6.15.7	Disassembling the seal ring retainer.....	45
3.4	Figures	8	6.15.8	Checking the fork legs.....	45
4	SERIAL NUMBERS	9	6.15.9	Assembling the seal ring retainer.....	46
4.1	Chassis number	9	6.15.10	Assembling the hydrostop unit	47
4.2	Type label	9	6.15.11	Assembling the piston rod	47
4.3	Engine number	9	6.15.12	Assembling the cartridge	49
4.4	Fork part number	9	6.15.13	Assembling the fork legs.....	50
4.5	Shock absorber part number	9	6.16	SX-F Factory Edition.....	53
5	MOTORCYCLE	10	6.16.1	Performing a fork service	53
5.1	Raising the motorcycle with the lift stand	10	6.16.2	Disassembling the fork legs	54
5.2	Removing the motorcycle from the lift stand	10	6.16.3	Removing the spring	56
5.3	Starting.....	10	6.16.4	Disassembling the cartridge	57
5.4	Starting the motorcycle for a check.....	11	6.16.5	Disassembling the piston rod	58
6	FORK, TRIPLE CLAMP	12	6.16.6	Disassembling the hydrostop unit	59
6.1	Adjusting the compression damping of the fork	12	6.16.7	Disassembling the seal ring retainer.....	59
6.2	Adjusting the rebound damping of the fork	13	6.16.8	Checking the fork legs.....	60
6.3	Bleeding the fork legs.....	14	6.16.9	Assembling the seal ring retainer.....	61
6.4	Cleaning the dust boots of the fork legs.....	14	6.16.10	Assembling the hydrostop unit	61
6.5	Loosening the fork protection (SX-F EU/US, XC-F)	14	6.16.11	Assembling the piston rod	62
6.6	Positioning the fork protection (SX-F EU/US, XC-F)	15	6.16.12	Assembling the cartridge	63
6.7	Removing the fork legs	15	6.16.13	Assembling the fork legs.....	64
6.8	Installing the fork legs.....	15	6.17	Greasing the steering head bearing	68
6.9	Removing the fork protector (SX-F EU/US, XC-F)	16	6.18	Removing the lower triple clamp.....	68
6.10	Installing the fork protector (SX-F EU/US, XC-F)	16	6.19	Installing the lower triple clamp	69
6.11	Removing the fork protector (SX-F Factory Edition).....	17	6.20	Checking the steering head bearing play.....	71
6.12	Installing the fork protector (SX-F Factory Edition).....	17	6.21	Adjusting the play of the steering head bearing	71
6.13	Activating the Factory Start (SX-F Factory Edition).....	17	7	HANDLEBAR, CONTROLS.....	73
6.14	SX-F EU, SX-F USA.....	18	7.1	Handlebar position.....	73
6.14.1	Conducting major fork service	18	7.2	Adjusting the handlebar position	73
6.14.2	Conducting minor fork service.....	18	7.3	Adjusting the basic position of the clutch lever	73
6.14.3	Disassembling the fork legs	19	7.4	Checking the throttle cable routing	74
6.14.4	Disassembling the cartridge	21	7.5	Checking the play in the throttle cable	74
6.14.5	Disassembling the piston rod	23	7.6	Adjusting the play in the throttle cable.....	75
6.14.6	Disassembling the screw cap with the membrane holder.....	24	8	SHOCK ABSORBER, SWINGARM	76
6.14.7	Disassembling the screw sleeve.....	25	8.1	Adjusting the high-speed compression damping of the shock absorber.....	76
6.14.8	Checking the fork legs.....	26	8.2	Adjusting the low-speed compression damping of the shock absorber	76
6.14.9	Checking the fork legs - during a minor fork service.....	27	8.3	Adjusting the rebound damping of the shock absorber.....	77
6.14.10	Changing the pilot bushing	29	8.4	Measuring rear wheel sag unloaded.....	78
6.14.11	Assembling the screw sleeve	29	8.5	Checking the static sag of the shock absorber	79
6.14.12	Assembling the screw cap with the membrane holder.....	30	8.6	Checking the riding sag of the shock absorber....	79
6.14.13	Assembling the piston rod	31	8.7	Adjusting the spring preload of the shock absorber.....	79
			8.8	Adjusting the riding sag	80
			8.9	Removing the shock absorber.....	81
			8.10	Installing the shock absorber.....	82
			8.11	Checking the shock absorber linkage.....	83

8.12	Servicing the shock absorber.....	85	13.6.2	Installing the rear wheel	125
8.13	Removing the spring.....	85	13.6.3	Removing the brake disc of the rear brake.....	126
8.14	Disassembling the damper	86	13.6.4	Installing the brake disc of the rear brake....	126
8.15	Disassembling the piston rod	87	13.6.5	Checking the chain tension.....	127
8.16	Disassembling the seal ring retainer.....	88	13.6.6	Adjusting the chain tension	127
8.17	Changing the pilot bushing	89	13.6.7	Adjusting the chain guide.....	128
8.18	Checking the damper	90	13.6.8	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	128
8.19	Removing the heim joint.....	90	13.6.9	Checking for chain dirt accumulation.....	130
8.20	Installing the heim joint.....	91	13.6.10	Cleaning the chain	130
8.21	Assembling the seal ring retainer.....	92	14	WIRING HARNESS, BATTERY.....	131
8.22	Assembling the piston rod.....	93	14.1	Changing the main fuse.....	131
8.23	Assembling the damper	94	14.2	Removing the battery	132
8.24	Bleeding and filling the damper	96	14.3	Installing the battery	132
8.25	Filling the damper with nitrogen.....	98	14.4	Charging the battery.....	133
8.26	Installing the spring (SX-F EU).....	99	14.5	Checking the charging voltage.....	134
8.27	Installing the spring (SX-F USA, XC-F)	100	14.6	Checking the quiescent current	134
8.28	Installing the spring (SX-F Factory Edition).....	101	14.7	Checking the capacitor	134
9	EXHAUST	103	14.8	Checking the starter relay	135
9.1	Removing the manifold.....	103	14.9	Map-Select switch for the basic setting (SX-F Factory Edition)	137
9.2	Installing the manifold	103	14.10	Map-Select switch for vehicle operation (SX-F Factory Edition)	137
9.3	Removing the main silencer	104	15	BRAKE SYSTEM	138
9.4	Installing the main silencer.....	104	15.1	Checking the front brake linings.....	138
9.5	Changing the glass fiber yarn filling of the main silencer.....	104	15.2	Changing the front brake linings.....	138
10	AIR FILTER	106	15.3	Checking the free travel of the hand brake lever	139
10.1	Removing the air filter box lid	106	15.4	Adjusting the basic position of the hand brake lever	140
10.2	Installing the air filter box lid	106	15.5	Checking the brake fluid level of the front brake	140
10.3	Removing the air filter.....	106	15.6	Adding front brake fluid.....	141
10.4	Installing the air filter.....	107	15.7	Changing the front brake fluid.....	142
10.5	Cleaning the air filter and air filter box.....	107	15.8	Checking the rear brake linings	143
10.6	Sealing the air filter box	108	15.9	Changing the rear brake linings	143
10.7	Securing the air filter box lid.....	108	15.10	Checking the free travel of foot brake lever	145
11	FUEL TANK, SEAT, TRIM	109	15.11	Adjusting the basic position of the foot brake lever	145
11.1	Opening the filler cap.....	109	15.12	Checking the rear brake fluid level.....	145
11.2	Closing the filler cap	109	15.13	Adding rear brake fluid	146
11.3	Removing the seat	110	15.14	Changing the rear brake fluid	147
11.4	Mounting the seat	110	16	ENGINE	149
11.5	Removing the fuel tank.....	110	16.1	Removing the engine.....	149
11.6	Installing the fuel tank	111	16.2	Installing the engine.....	153
11.7	Checking the fuel pressure.....	112	16.3	Engine disassembly.....	159
11.8	Changing the fuel pump	113	16.3.1	Preparations.....	159
11.9	Changing the fuel filter.....	115	16.3.2	Draining the engine oil	159
11.10	Changing the fuel screen	117	16.3.3	Removing the clutch push rod.....	160
12	MASK, FENDER.....	119	16.3.4	Removing the oil filter.....	160
12.1	Removing the front fender	119	16.3.5	Removing the starter motor.....	160
12.2	Installing the front fender	119	16.3.6	Removing the spark plug	160
12.3	Removing the start number plate.....	119	16.3.7	Removing the valve cover.....	161
12.4	Installing the start number plate.....	120	16.3.8	Removing the alternator cover	161
13	WHEELS	121	16.3.9	Positioning the engine at ignition top dead center.....	161
13.1	Checking the tire air pressure.....	121	16.3.10	Removing the timing chain tensioner	162
13.2	Checking the tire condition	121	16.3.11	Removing the camshaft.....	162
13.3	Checking the brake discs	121	16.3.12	Removing the cylinder head.....	163
13.4	Checking the spoke tension.....	122	16.3.13	Removing the piston	163
13.5	Front wheel	122	16.3.14	Removing the rotor.....	163
13.5.1	Removing the front wheel	122	16.3.15	Removing the timing chain	164
13.5.2	Installing the front wheel.....	123			
13.5.3	Removing the brake disc of the front brake.....	124			
13.5.4	Installing the brake disc of the front brake.....	124			
13.6	Rear wheel	125			
13.6.1	Removing the rear wheel	125			

16.3.16	Removing the ignition pulse generator	164	16.4.35	Preassembling the shift shaft.....	194
16.3.17	Removing the suction pump.....	165	16.4.36	Disassembling the main shaft	195
16.3.18	Removing the water pump cover.....	165	16.4.37	Disassembling the countershaft.....	196
16.3.19	Removing the clutch cover.....	165	16.4.38	Checking the transmission	197
16.3.20	Removing the clutch discs.....	166	16.4.39	Assembling the main shaft.....	200
16.3.21	Removing the outer clutch hub	167	16.4.40	Assembling the countershaft.....	201
16.3.22	Removing the torque limiter.....	168	16.4.41	Checking the starter drive	204
16.3.23	Removing the starter idler gear.....	168	16.4.42	Checking the freewheel	204
16.3.24	Removing the shift shaft.....	168	16.4.43	Removing the freewheel	205
16.3.25	Removing the shift drum locating unit	168	16.4.44	Installing the freewheel	205
16.3.26	Removing the locking lever	168	16.5	Engine assembly.....	206
16.3.27	Removing the force pump.....	169	16.5.1	Installing the crankshaft	206
16.3.28	Removing the primary gear	170	16.5.2	Installing the transmission shafts	206
16.3.29	Removing the freewheel gear	170	16.5.3	Installing the shift forks.....	207
16.3.30	Removing the left engine case section	170	16.5.4	Installing the shift drum	207
16.3.31	Removing the shift rails.....	171	16.5.5	Installing the shift rails	208
16.3.32	Removing the shift drum	171	16.5.6	Installing the left engine case	208
16.3.33	Removing the shift forks.....	172	16.5.7	Installing the freewheel gear	210
16.3.34	Removing the transmission shafts.....	172	16.5.8	Installing the primary gear	210
16.3.35	Removing the crankshaft	173	16.5.9	Installing the force pump.....	210
16.4	Work on individual parts	174	16.5.10	Installing the locking lever.....	211
16.4.1	Work on the right section of the engine case	174	16.5.11	Installing the shift drum locating unit	211
16.4.2	Work on the left section of the engine case	175	16.5.12	Installing the shift shaft	211
16.4.3	Removing the oil pressure regulator valve	176	16.5.13	Installing the starter idler gear	212
16.4.4	Checking spring length of oil pressure regulator valve	176	16.5.14	Installing the torque limiter	212
16.4.5	Installing the oil pressure regulator valve.....	177	16.5.15	Installing the outer clutch hub	212
16.4.6	Changing the crankshaft seal ring in the clutch cover	177	16.5.16	Installing the clutch discs.....	213
16.4.7	Removing the water pump	177	16.5.17	Installing the clutch cover	214
16.4.8	Installing the water pump	178	16.5.18	Installing the water pump cover.....	215
16.4.9	Removing the timing chain sprocket	179	16.5.19	Installing the suction pump	215
16.4.10	Installing the timing chain sprocket.....	179	16.5.20	Installing the ignition pulse generator	216
16.4.11	Changing the connecting rod, conrod bearing, and crank pin	179	16.5.21	Installing the timing chain.....	216
16.4.12	Checking crankshaft run-out at bearing pin	181	16.5.22	Installing the rotor	217
16.4.13	Cylinder - Nikasil® coating	181	16.5.23	Installing the piston	217
16.4.14	Checking/measuring the cylinder	181	16.5.24	Installing the cylinder head.....	219
16.4.15	Checking/measuring the piston.....	182	16.5.25	Installing the camshaft.....	220
16.4.16	Checking the piston ring end gap	182	16.5.26	Installing the timing chain tensioner.....	220
16.4.17	Measuring the piston/cylinder mounting clearance	183	16.5.27	Checking the valve clearance	221
16.4.18	Checking the oil pumps.....	183	16.5.28	Adjusting the valve clearance.....	221
16.4.19	Disassembling the autodecompressor.....	183	16.5.29	Installing the alternator cover.....	221
16.4.20	Assembling the autodecompressor	184	16.5.30	Installing the valve cover	222
16.4.21	Checking camshaft	185	16.5.31	Installing the spark plug	222
16.4.22	Checking the timing assembly.....	185	16.5.32	Installing the starter motor.....	222
16.4.23	Removing the rocker arm	186	16.5.33	Installing the oil filter.....	222
16.4.24	Removing the valves.....	186	16.5.34	Installing the clutch push rod	223
16.4.25	Changing camshaft bearing.....	187	16.5.35	Installing the oil screens.....	223
16.4.26	Checking the valves	187	16.5.36	Removing the engine from the engine assembly stand.....	224
16.4.27	Checking valve springs	188	17	CLUTCH.....	225
16.4.28	Checking valve spring seat.....	188	17.1	Checking/correcting the fluid level of the hydraulic clutch.....	225
16.4.29	Checking the cylinder head.....	188	17.2	Changing the hydraulic clutch fluid	225
16.4.30	Checking the rocker arm shafts	189	18	WATER PUMP, COOLING SYSTEM	226
16.4.31	Installing the valves	189	18.1	Cooling system	226
16.4.32	Installing the rocker arm.....	190	18.2	Checking the antifreeze and coolant level	226
16.4.33	Checking the clutch	191	18.3	Checking the coolant level	226
16.4.34	Checking the shift mechanism	192	18.4	Draining the coolant	227
			18.5	Refilling coolant	228
			19	LUBRICATION SYSTEM.....	229
			19.1	Oil circuit.....	229
			19.2	Checking the engine oil level.....	229

19.3	Changing the engine oil and oil filter, cleaning the oil screens	230
19.4	Adding engine oil	232
19.5	Checking the engine oil pressure	232
20	IGNITION SYSTEM	234
20.1	Ignition coil - checking the secondary winding	234
20.2	Checking the spark plug connector	234
20.3	Alternator - checking stator winding	234
20.4	Removing the stator	235
20.5	Installing the stator	235
21	ELECTRIC STARTER	236
21.1	Checking the starter motor	236
22	THROTTLE VALVE BODY	237
22.1	Adjusting the idle speed	237
22.2	Executing the initialization run	237
23	TECHNICAL DATA	238
23.1	Engine	238
23.2	Engine tolerance, wear limits	238
23.3	Engine tightening torques	239
23.4	Capacities	240
23.4.1	Engine oil	240
23.4.2	Coolant	240
23.4.3	Fuel	240
23.5	Chassis	240
23.6	Electrical system	241
23.7	Tires	242
23.8	Fork	242
23.8.1	SX-F EU	242
23.8.2	SX-F USA	242
23.8.3	XC-F	243
23.8.4	SX-F Factory Edition	243
23.9	Shock absorber	244
23.9.1	SX-F EU	244
23.9.2	SX-F USA	244
23.9.3	XC-F	245
23.9.4	SX-F Factory Edition	245
23.10	Chassis tightening torques	246
24	CLEANING/PROTECTIVE TREATMENT	248
24.1	Cleaning the motorcycle	248
25	STORAGE	249
25.1	Storage	249
25.2	Preparing for use after storage	249
26	SERVICE SCHEDULE	250
26.1	Service schedule	250
26.2	Service work (as additional order)	251
27	WIRING DIAGRAM	252
27.1	Page 1 of 3 (All SX-F models)	252
27.2	Page 2 of 3 (All SX-F models)	254
27.3	Page 3 of 3 (All SX-F models)	256
27.4	Page 1 of 3 (XC-F)	258
27.5	Page 2 of 3 (XC-F)	260
27.6	Page 3 of 3 (XC-F)	262
28	SUBSTANCES	264
29	AUXILIARY SUBSTANCES	266
30	SPECIAL TOOLS	268
31	STANDARDS	283
	INDEX	284

1.1 Symbols used

The meaning of specific symbols is described below.

	Indicates an expected reaction (e.g. of a work step or a function).
	Indicates an unexpected reaction (e.g. of a work step or a function).
	Indicates a page reference (more information is provided on the specified page).
	Indicates information with more details or tips.
	Indicates the result of a testing step.
	Denotes a voltage measurement.
	Denotes a current measurement.
	Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special KTM tools and KTM workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Identifies a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite®**) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Guarantee, warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's Service & Warranty Booklet and in the **KTM dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage resulting from manipulations and/or alterations to the vehicle.

Additional information on the guarantee or warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by KTM. KTM accepts no liability for other products and any resulting damage or loss.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.


International KTM Website: <http://www.ktm.com>

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

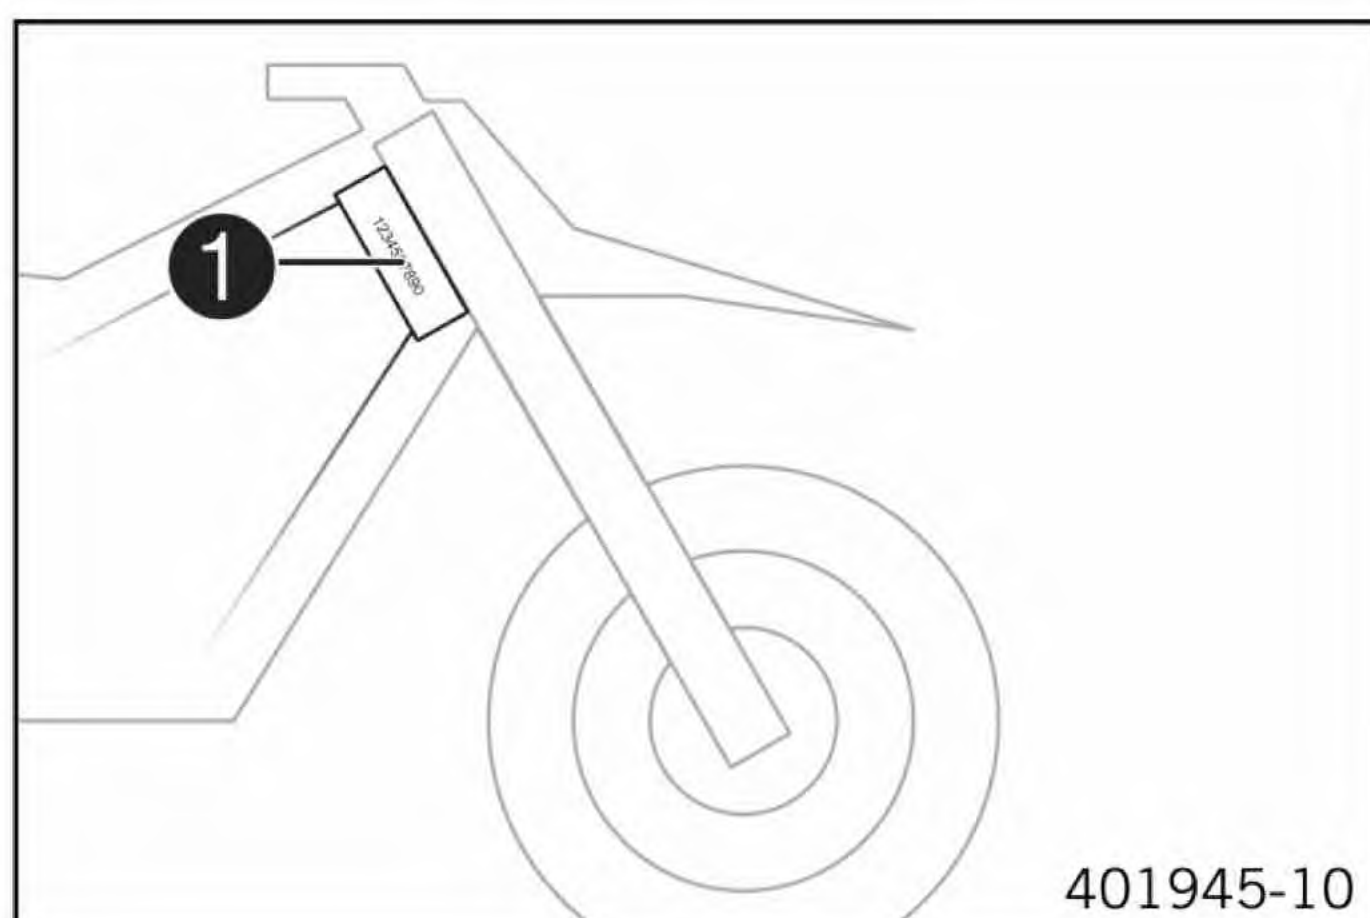


The chassis number ❶ is stamped on the right side of the steering head.

4.2 Type label

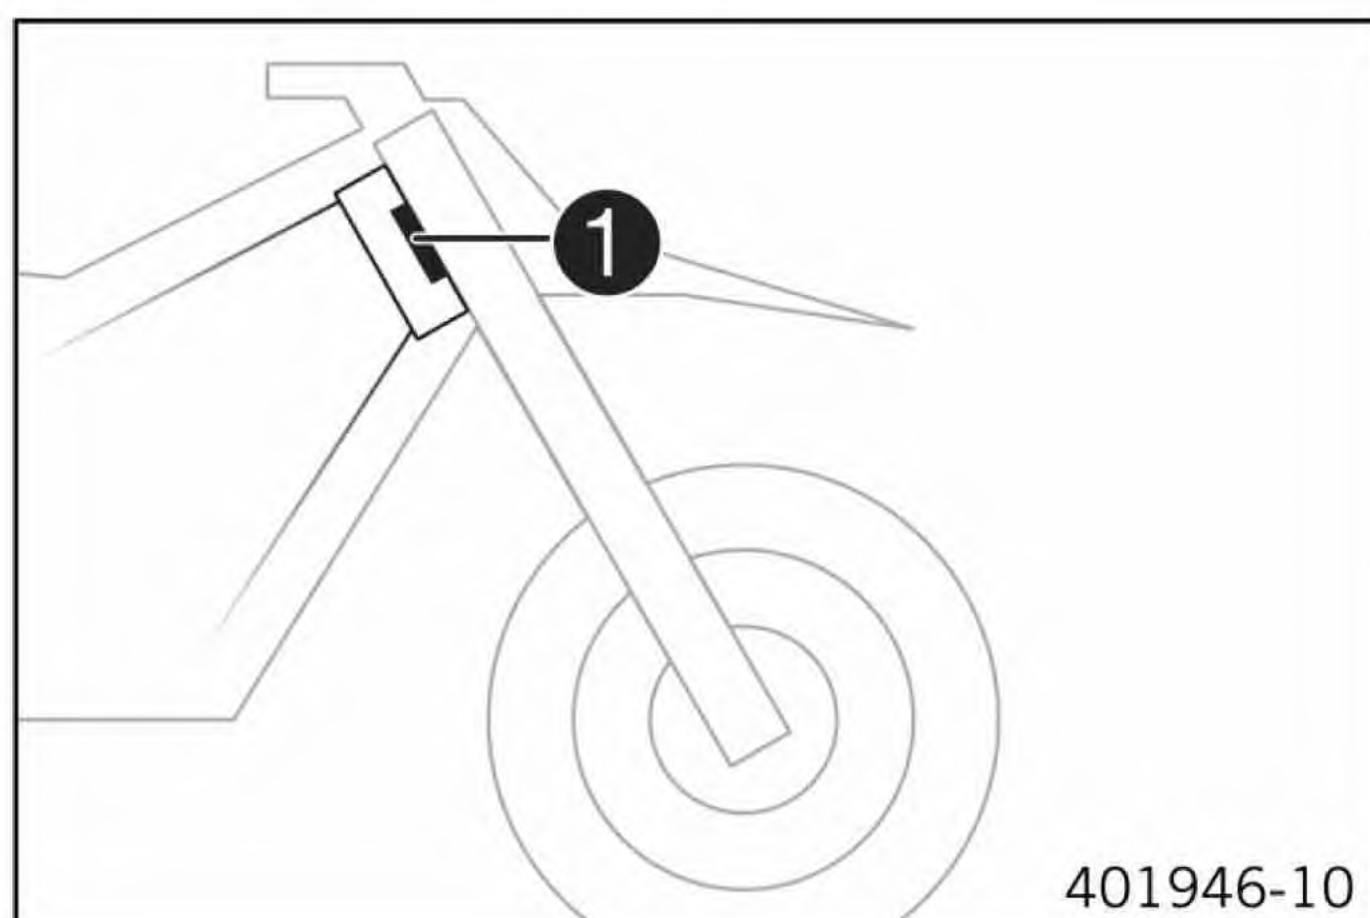


The type label ❶ is fixed to the front of the steering head.

4.3 Engine number

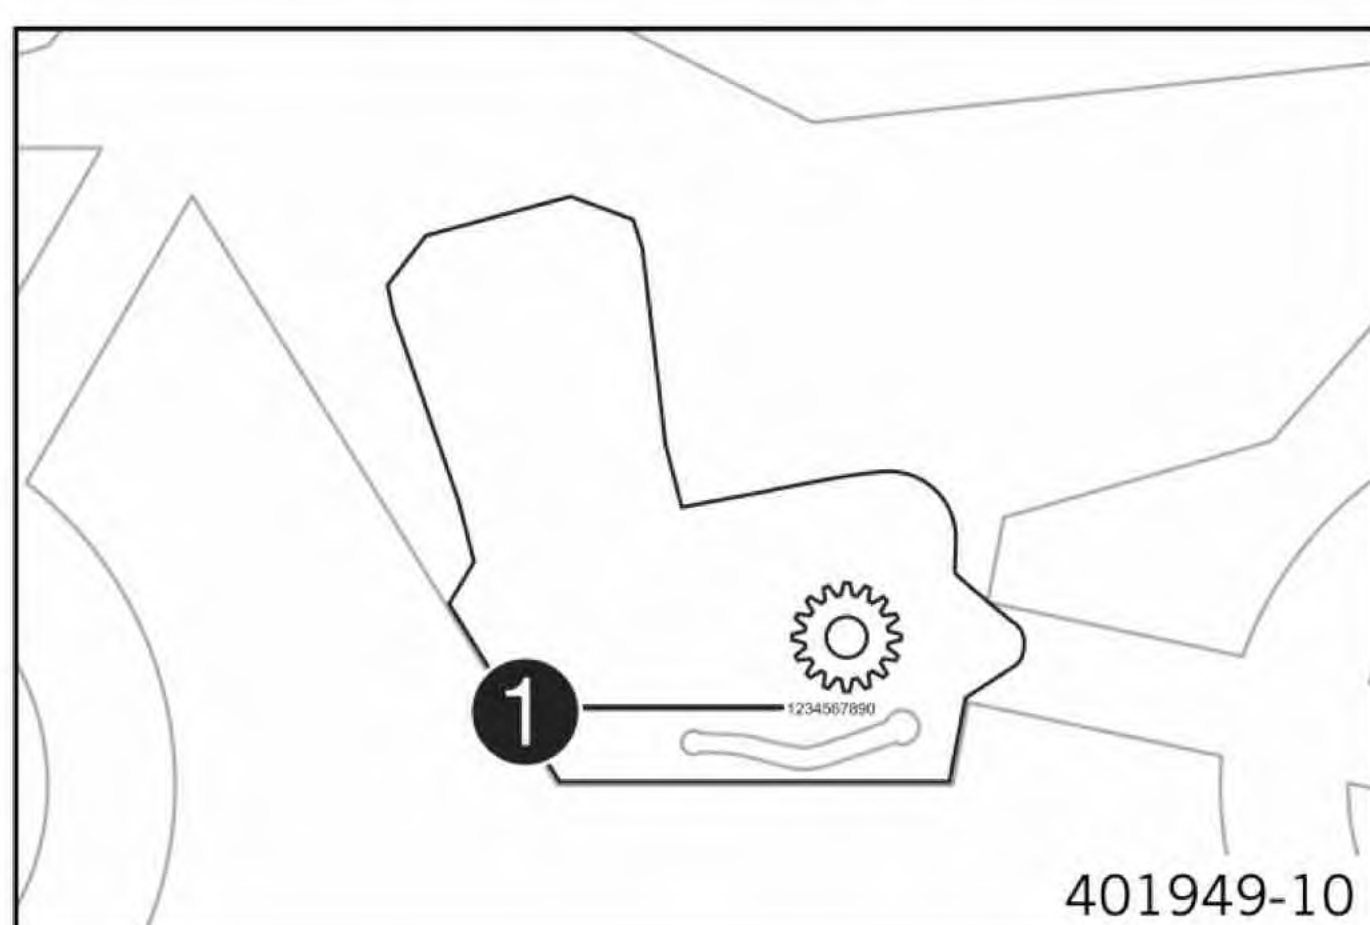


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

4.4 Fork part number

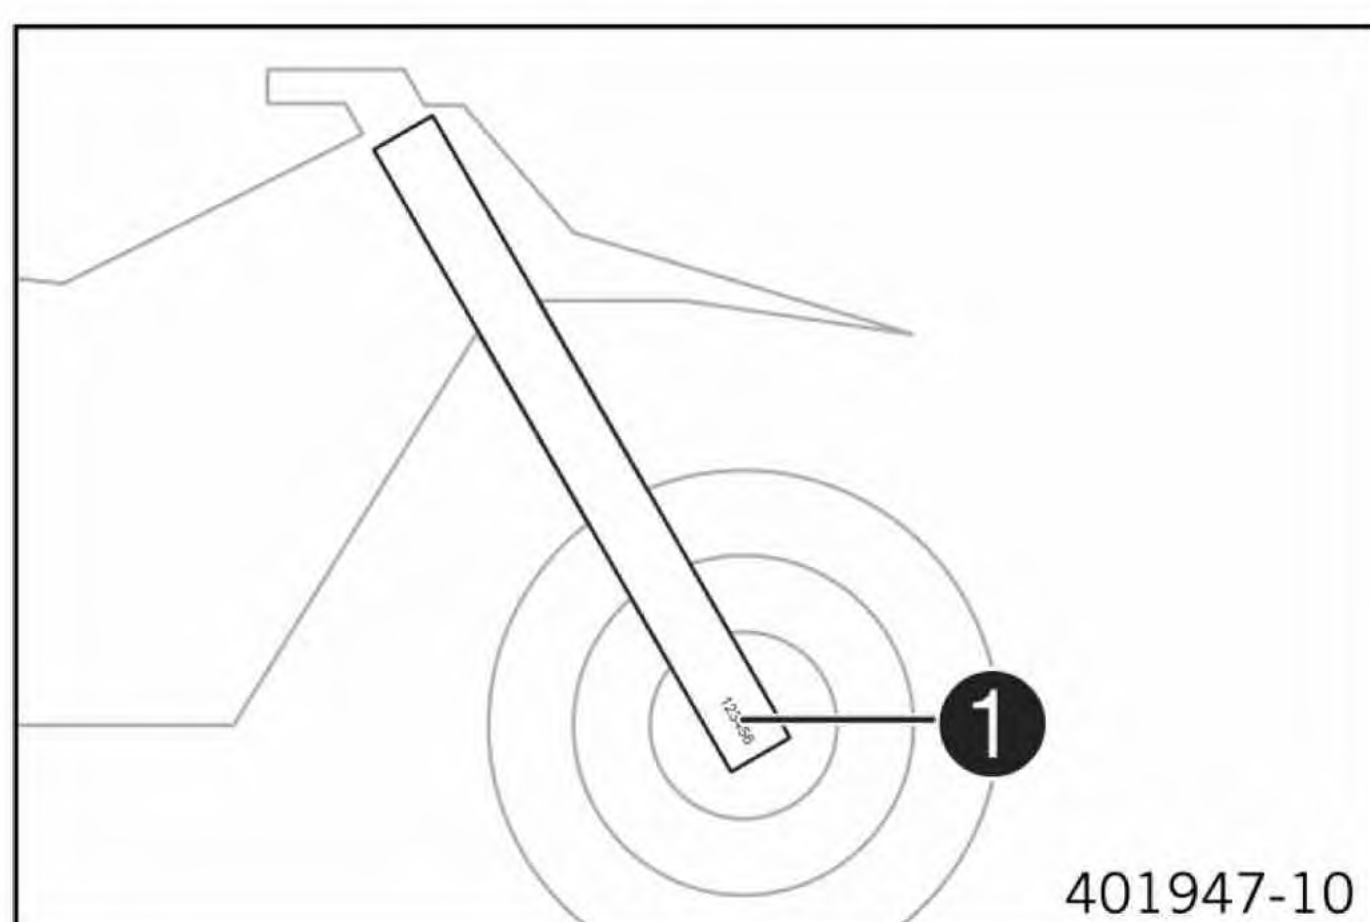

The fork part number ❶ is stamped on the inner side of the axle clamp.

4.5 Shock absorber part number

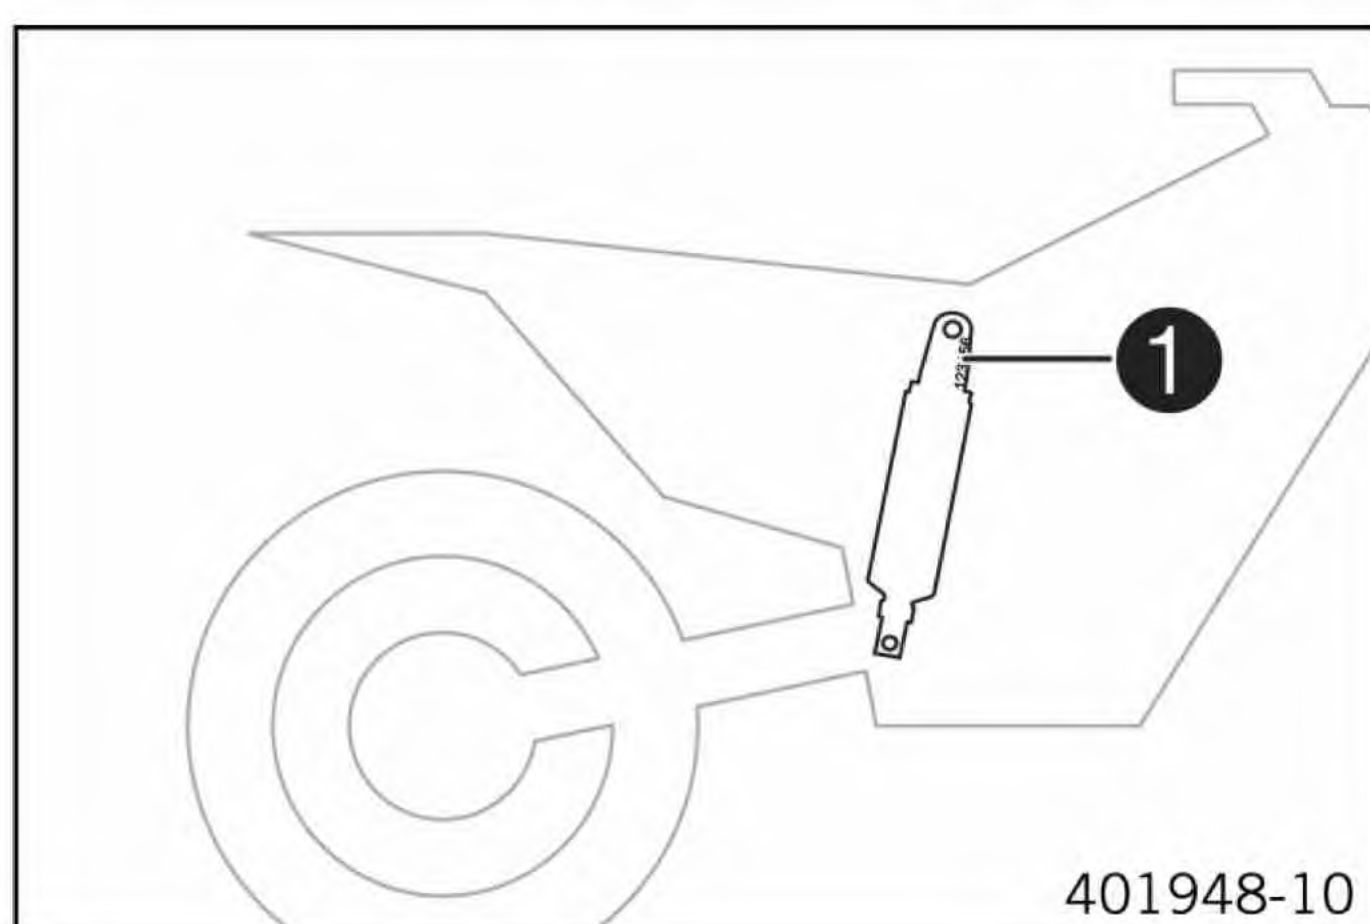

The shock absorber part number ❶ is stamped on the top of the shock absorber above the adjusting ring on the engine side.