

REPAIR MANUAL 2014



1	MEANS OF REPRESENTATION	5	8.8	Removing the shock absorber.....	35
1.1	Symbols used	5	8.9	Installing shock absorber	35
1.2	Formats used.....	5	8.10	Servicing the shock absorber.....	35
2	SAFETY ADVICE.....	6	8.11	Removing the spring.....	36
2.1	Guarantee, warranty	6	8.12	Disassembling the damper	36
2.2	Operating and auxiliary substances	6	8.13	Disassembling the piston rod	37
2.3	Spare parts, accessories	6	8.14	Checking the damper	38
2.4	Work rules.....	6	8.15	Removing the heim joint.....	39
2.5	Safety advice.....	6	8.16	Installing the heim joint.....	40
2.6	Degrees of risk and symbols	6	8.17	Assembling the piston rod.....	41
2.7	Repair Manual	7	8.18	Assembling the damper	42
3	IMPORTANT NOTES.....	8	8.19	Bleeding and filling the damper	43
3.1	Figures	8	8.20	Filling the damper with nitrogen	46
4	SERIAL NUMBERS	9	8.21	Installing the spring	47
4.1	Chassis number	9	8.22	Removing the chain guard	47
4.2	Engine number	9	8.23	Installing the chain guard	47
4.3	Shock absorber part number	9	9	EXHAUST	48
5	MOTORCYCLE	10	9.1	Removing the exhaust manifold.....	48
5.1	Raising the motorcycle with a lift stand.....	10	9.2	Installing the exhaust manifold	48
5.2	Removing the motorcycle from the lift stand.....	10	9.3	Removing main silencer.....	49
5.3	Starting.....	10	9.4	Installing the main silencer	49
6	FORK, TRIPLE CLAMP	12	9.5	Changing the glass fiber yarn filling of the main silencer.....	50
6.1	Adjusting the compression damping of the fork	12	10	AIR FILTER	51
6.2	Adjusting the rebound damping of the fork	12	10.1	Removing the air filter.....	51
6.3	Bleeding fork legs	12	10.2	Installing the air filter.....	51
6.4	Cleaning the dust boots of the fork legs.....	13	10.3	Cleaning the air filter and air filter box.....	51
6.5	Removing the fork protector	13	11	FUEL TANK, SEAT, TRIM	53
6.6	Installing the fork protector.....	13	11.1	Removing the seat	53
6.7	Removing the fork legs	14	11.2	Mounting the seat	53
6.8	Installing the fork legs.....	14	11.3	Dismounting the fuel tank.....	53
6.9	Servicing the fork.....	15	11.4	Installing the fuel tank	54
6.10	Disassembling the fork legs.....	15	12	MASK, FENDER.....	56
6.11	Disassembling the piston rod	18	12.1	Dismounting the front fender	56
6.12	Checking the fork legs	19	12.2	Installing the front fender	56
6.13	Changing the pilot bushing	20	12.3	Dismounting the start number plate.....	56
6.14	Assembling the piston rod.....	21	12.4	Installing the start number plate.....	56
6.15	Assembling the fork legs.....	22	13	WHEELS	58
6.16	Greasing the steering head bearing	25	13.1	Checking tire air pressure	58
6.17	Removing the lower triple clamp.....	25	13.2	Checking the tire condition	58
6.18	Installing the lower triple clamp	26	13.3	Checking brake discs.....	58
6.19	Checking play of steering head bearing	27	13.4	Checking spoke tension	59
6.20	Adjusting the play of the steering head bearing	28	13.5	Front wheel	59
7	HANDLEBAR, CONTROLS.....	29	13.5.1	Removing the front wheel	59
7.1	Adjusting basic position of clutch lever	29	13.5.2	Installing the front wheel	60
7.2	Checking the play in the throttle cable	29	13.6	Rear wheel	60
7.3	Checking the routing of the throttle cable.....	29	13.6.1	Removing the rear wheel	60
7.4	Adjusting the play in the throttle cable.....	30	13.6.2	Installing the rear wheel	61
7.5	Handlebar position.....	30	13.6.3	Checking chain dirt.....	62
7.6	Adjusting handlebar position.....	30	13.6.4	Cleaning the chain	62
8	SHOCK ABSORBER, SWINGARM	32	13.6.5	Checking the chain tension.....	62
8.1	Adjusting the compression damping of the shock absorber	32	13.6.6	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	63
8.2	Adjusting the rebound damping of the shock absorber.....	32	13.6.7	Adjusting the chain tension	65
8.3	Measuring rear wheel sag unloaded.....	32	13.6.8	Adjusting the chain guide.....	65
8.4	Checking the static sag of the shock absorber....	33	14	BRAKE SYSTEM	66
8.5	Checking the riding sag of the shock absorber....	33	14.1	Checking free travel of hand brake lever	66
8.6	Adjusting the spring preload of the shock absorber.....	33	14.2	Adjusting the basic position of the hand brake lever	66
8.7	Adjusting the riding sag.....	34	14.3	Checking front brake fluid level	66
			14.4	Adding front brake fluid.....	67
			14.5	Changing the front brake fluid.....	68

14.6	Checking the front brake linings	69	15.4.6	Installing the water pump	94
14.7	Removing front brake linings	69	15.4.7	Checking/measuring the cylinder	95
14.8	Installing the front brake linings	70	15.4.8	Checking/measuring the piston	95
14.9	Changing the front brake linings	70	15.4.9	Determining the piston/cylinder mounting clearance	96
14.10	Checking the free travel of the foot brake lever	71	15.4.10	Checking the piston ring end gap	96
14.11	Adjusting the free travel of the foot brake lever	71	15.4.11	Checking the reed valve housing, diaphragm and intake flange	97
14.12	Adjusting the basic position of the foot brake lever	72	15.4.12	Disassembling the clutch	97
14.13	Checking rear brake fluid level	72	15.4.13	Checking the clutch	98
14.14	Adding rear brake fluid	73	15.4.14	Premounting the clutch	98
14.15	Changing the rear brake fluid	74	15.4.15	Checking the shift mechanism	99
14.16	Checking the rear brake linings	75	15.4.16	Preamsembling the shift shaft	100
14.17	Removing rear brake linings	75	15.4.17	Disassembling the main shaft	100
14.18	Installing the rear brake linings	76	15.4.18	Assembling the main shaft	101
14.19	Changing the rear brake linings	76	15.4.19	Dismantling the countershaft	101
15	ENGINE	78	15.4.20	Assembling the countershaft	102
15.1	Removing the engine	78	15.4.21	Checking the transmission	102
15.2	Installing the engine	79	15.4.22	Premounting the kickstarter shaft	104
15.3	Engine disassembly	82	15.5	Engine assembly	105
15.3.1	Clamping the engine into the engine work stand	82	15.5.1	Installing the crankshaft	105
15.3.2	Removing the clutch pressure piece	82	15.5.2	Installing the transmission shafts	105
15.3.3	Removing the oil drain plug	82	15.5.3	Installing the shift forks	105
15.3.4	Removing the spark plug	82	15.5.4	Installing the shift drum	105
15.3.5	Removing the exhaust control	82	15.5.5	Installing the shift rails	106
15.3.6	Removing the cylinder head	83	15.5.6	Installing the left engine case section	106
15.3.7	Removing the exhaust control valve	84	15.5.7	Installing the reed valve housing	106
15.3.8	Removing the cylinder	84	15.5.8	Installing the locking lever	107
15.3.9	Removing the piston	84	15.5.9	Installing the shift drum locating	107
15.3.10	Removing the engine sprocket	84	15.5.10	Installing the shift shaft	107
15.3.11	Removing the spacer	85	15.5.11	Installing the intermediate kickstarter gear	108
15.3.12	Removing the alternator cover	85	15.5.12	Installing the kickstarter shaft	108
15.3.13	Removing the rotor	85	15.5.13	Installing the primary gear	108
15.3.14	Removing the stator	86	15.5.14	Installing the outer clutch hub	108
15.3.15	Removing the kickstarter	86	15.5.15	Installing the clutch cover	109
15.3.16	Removing the water pump cover	86	15.5.16	Mounting the water pump cover	110
15.3.17	Removing the clutch cover	86	15.5.17	Installing the kickstarter	110
15.3.18	Removing the outer clutch hub	86	15.5.18	Installing the stator	110
15.3.19	Removing the primary gear	87	15.5.19	Installing the rotor	110
15.3.20	Removing the kickstarter shaft	88	15.5.20	Installing the piston	111
15.3.21	Removing the intermediate kickstarter gear ...	88	15.5.21	Installing the cylinder	111
15.3.22	Removing the shift shaft	88	15.5.22	Checking the X-distance	112
15.3.23	Removing the shift drum locating	88	15.5.23	Setting the X-distance	112
15.3.24	Removing the locking lever	88	15.5.24	Adjusting the ignition	113
15.3.25	Removing the reed valve housing	89	15.5.25	Installing the alternator cover	113
15.3.26	Removing the left engine case section	89	15.5.26	Installing the spacer	113
15.3.27	Removing the shift rails	90	15.5.27	Installing the engine sprocket	114
15.3.28	Removing the shift drum	90	15.5.28	Installing the exhaust control valve	114
15.3.29	Removing the shift forks	90	15.5.29	Installing the cylinder head	114
15.3.30	Removing the transmission shaft	90	15.5.30	Installing the exhaust control	115
15.3.31	Removing the crankshaft	91	15.5.31	Installing the spark plug	116
15.4	work on individual parts	91	15.5.32	Installing the oil drain plug	116
15.4.1	Work on the right section of the engine case	91	15.5.33	Installing the clutch pressure piece	116
15.4.2	Work on the left section of the engine case ...	92	15.5.34	Removing the engine from the universal mounting rack	116
15.4.3	Changing the connecting rod, conrod bearing, and crank pin	92	16	CARBURETOR	117
15.4.4	Checking the crankshaft run-out on the bearing pin	94	16.1	Removing the carburetor	117
15.4.5	Removing the water pump	94	16.2	Installing the carburetor	118
			16.3	Disassembling the carburetor	119
			16.4	Assembling the carburetor	121
			16.5	Checking/setting the carburetor components ...	123

16.6	Checking the jet needle	124
16.7	Checking the throttle slide	124
16.8	Checking the float needle valve	124
16.9	Checking the choke slide	124
16.10	Checking/setting the float level.....	125
16.11	Carburetor - adjusting the idle speed	125
16.12	Emptying the carburetor float chamber	126
17	CLUTCH.....	127
17.1	Checking the fluid level of the hydraulic clutch	127
17.2	Changing the hydraulic clutch fluid	127
18	WATER PUMP, COOLING SYSTEM	128
18.1	Draining the coolant.....	128
18.2	Refilling the coolant.....	128
18.3	Checking the antifreeze and coolant level	129
18.4	Checking the coolant level	129
19	LUBRICATION SYSTEM.....	131
19.1	Checking the gear oil level	131
19.2	Changing the gear oil.....	131
19.3	Draining the gear oil.....	131
19.4	Filling up with gear oil.....	132
19.5	Adding gear oil	132
20	IGNITION SYSTEM.....	134
20.1	Checking the ignition system.....	134
20.2	Checking the kill switch.....	134
20.3	Checking the ignition pulse generator	135
20.4	Checking the alternator.....	135
20.5	Checking the spark plug connector	136
20.6	Checking the CDI controller	136
20.7	Checking the ignition coil	136
21	TECHNICAL DATA.....	138
21.1	Engine	138
21.2	Engine tolerance, wear limits	138
21.3	engine tightening torques	139
21.4	carburetor	140
21.4.1	Carburetor tuning.....	140
21.5	capacities	141
21.5.1	Gear oil.....	141
21.5.2	Coolant.....	141
21.5.3	Fuel	141
21.6	Chassis	141
21.7	Fork.....	142
21.8	shock absorber	142
21.9	chassis tightening torques.....	142
22	CLEANING/PROTECTIVE TREATMENT.....	144
22.1	Cleaning motorcycle	144
23	STORAGE	145
23.1	Storage	145
23.2	Preparing for use after storage.....	145
24	SERVICE SCHEDULE	146
24.1	Service schedule.....	146
25	WIRING DIAGRAM	148
25.1	Wiring diagram	148
26	SUBSTANCES	150
27	AUXILIARY SUBSTANCES	152
28	SPECIAL TOOLS	154
29	STANDARDS	164
	INDEX.....	165

1.1 Symbols used

The meaning of specific symbols is described below.

	Indicates an expected reaction (e.g. of a work step or a function).
	Indicates an unexpected reaction (e.g. of a work step or a function).
	Indicates a page reference (more information is provided on the specified page).
	Indicates information with more details or tips.
	Indicates the result of a testing step.
	Denotes a voltage measurement.
	Denotes a current measurement.
	Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Guarantee, warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's Service & Warranty Booklet and in the **KTM Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage resulting from manipulations and/or alterations to the vehicle.
Additional information on the guarantee or warranty and the procedures involved can be found in the Service & Warranty Booklet.

2.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

2.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by KTM. KTM accepts no liability for other products and any resulting damage or loss.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.
International KTM Website: <http://www.ktm.com>

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)
During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.
In some instances, a thread locker (e.g. **Loctite®**) is required. The manufacturer instructions for use must be followed.
After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.
After you complete the repair or service work, check the operating safety of the vehicle.

2.5 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.6 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.7 Repair Manual


Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special KTM tools and KTM workplace and workshop equipment are available.

3.1 Figures


The figures contained in the manual may depict special equipment.
In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

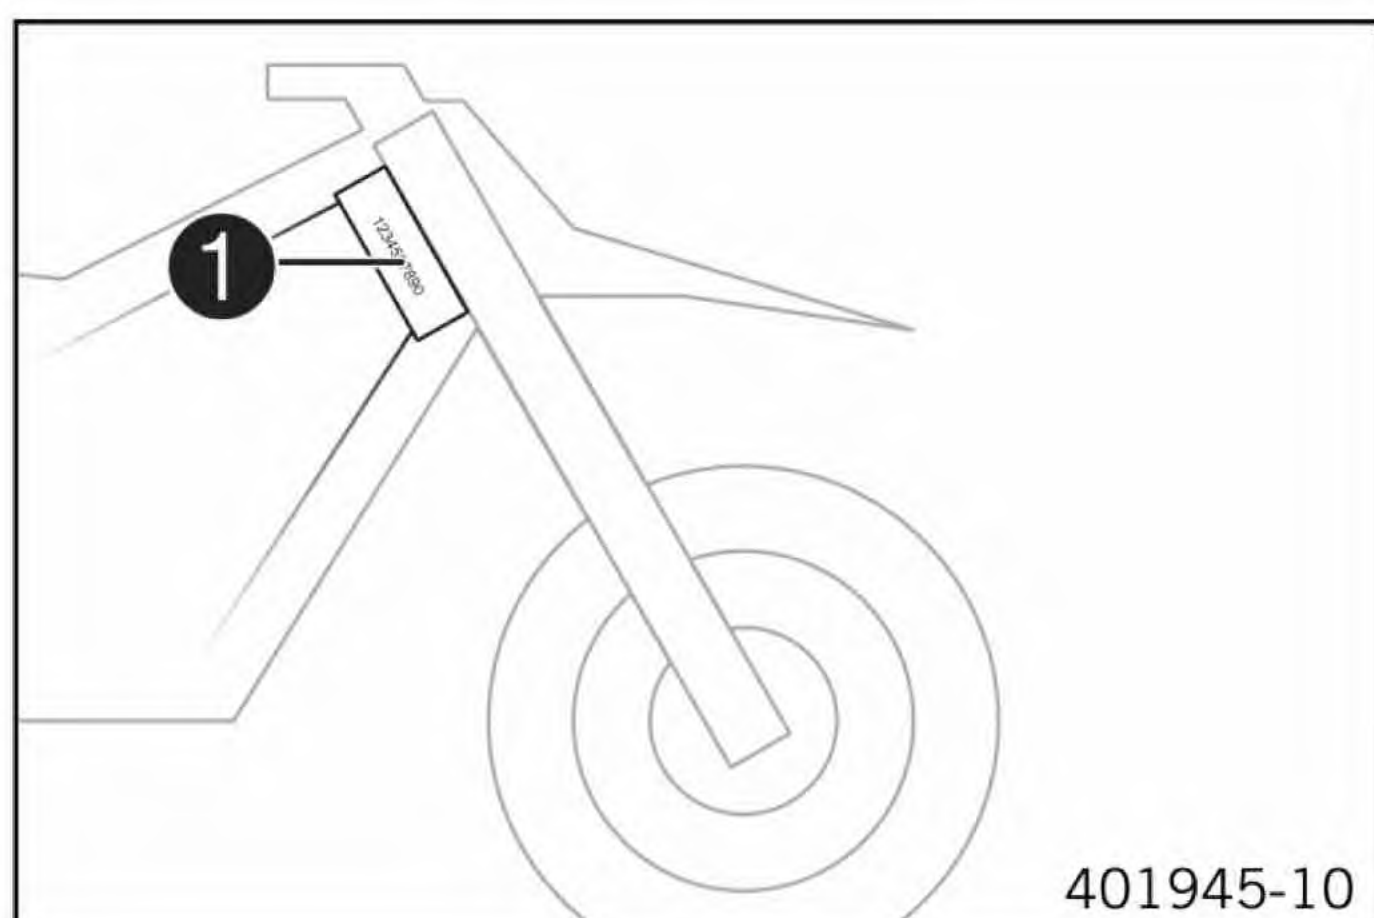


The chassis number ❶ is stamped on the right side of the steering head.

4.2 Engine number

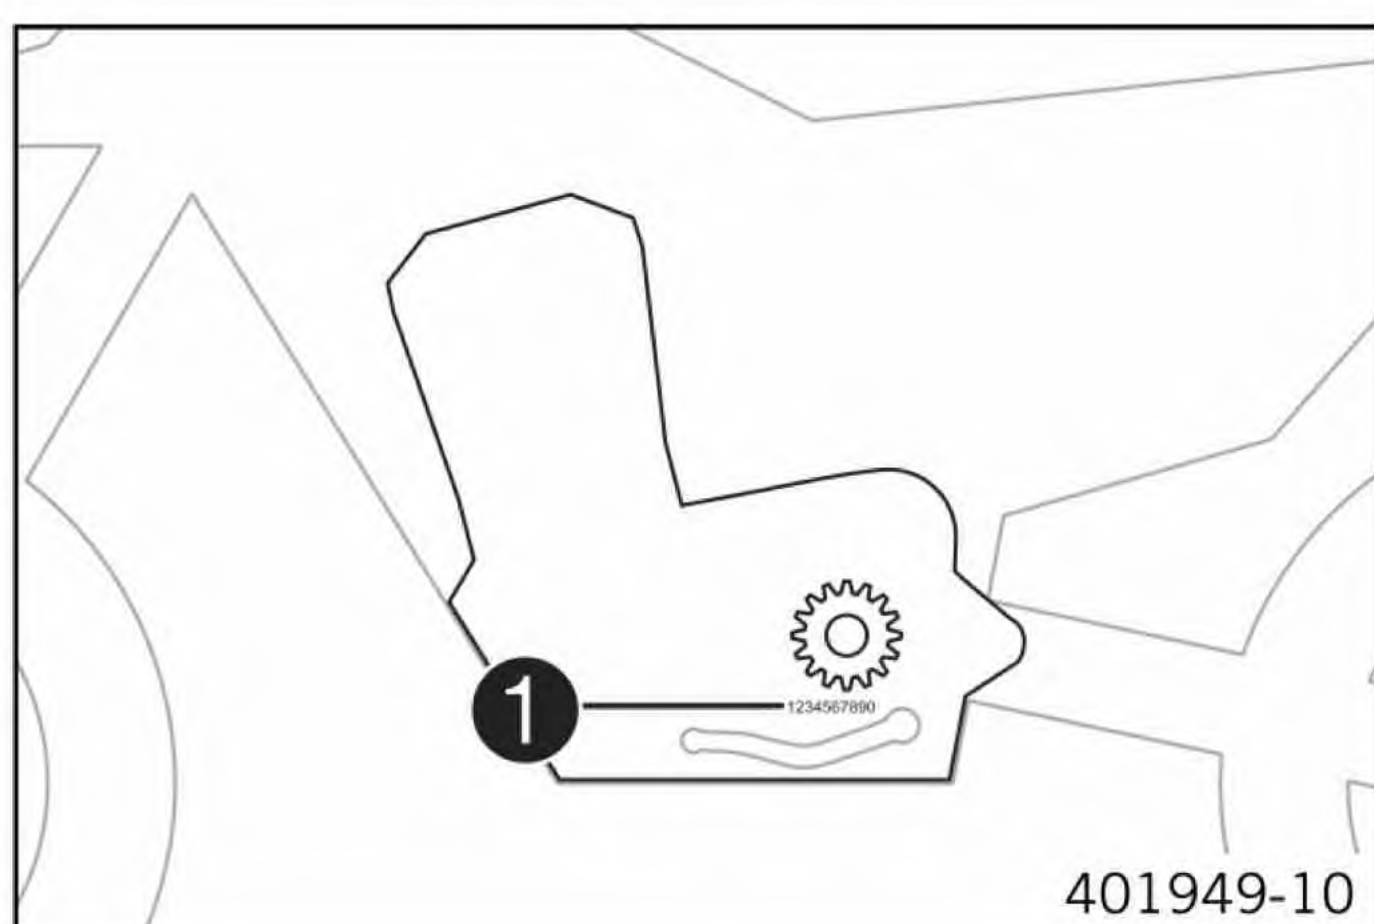

The engine number ❶ is located on the left side of the engine under the engine sprocket.

4.3 Shock absorber part number

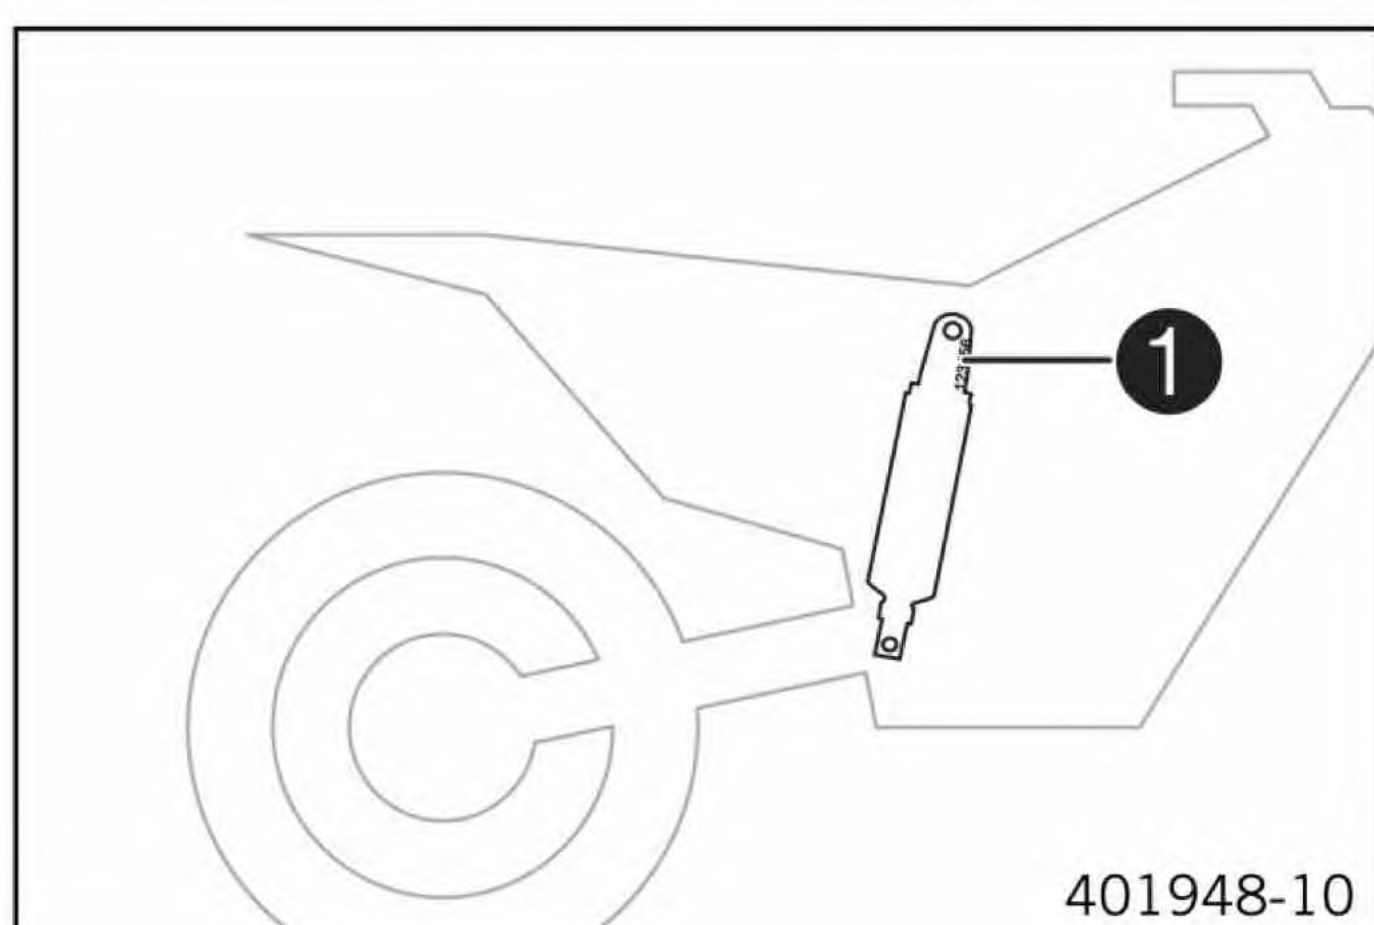

The shock absorber part number ❶ is stamped on the top part of the shock absorber above the adjusting ring on the engine side.