



YZFR6V(C)

SERVICE MANUAL

EAS20050

YZFR6V(C)
SERVICE MANUAL
©2005 by Yamaha Motor Corporation, U.S.A.
First edition, December 2005
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.
Printed in U.S.A.
P/N LIT-11616-19-78

NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform to federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



WARNING

Failure to follow WARNING instructions could result in severe injury or death to the vehicle operator, a bystander or a person checking or repairing the vehicle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the vehicle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- The manual is divided into chapters and each chapter is divided into sections. The current section title "1" is shown at the top of each page.
- Sub-section titles "2" appear in smaller print than the section title.
- To help identify parts and clarify procedure steps, there are exploded diagrams "3" at the start of each removal and disassembly section.
- Numbers "4" are given in the order of the jobs in the exploded diagram. A number indicates a disassembly step.
- Symbols "5" indicate parts to be lubricated or replaced.
- Refer to "SYMBOLS".
- A job instruction chart "6" accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- Jobs "7" requiring more information (such as special tools and technical data) are described sequentially.

1
↓
CLUTCH

CLUTCH

Removing the clutch cover

1. 12 Nm (1.2 m - kg, 8.7 ft - lb)

2. 12 Nm (1.2 m - kg, 8.7 ft - lb)

3. 12 Nm (1.2 m - kg, 8.7 ft - lb)

4. 12 Nm (1.2 m - kg, 8.7 ft - lb)

5. 12 Nm (1.2 m - kg, 8.7 ft - lb)

6. 12 Nm (1.2 m - kg, 8.7 ft - lb)

7. 12 Nm (1.2 m - kg, 8.7 ft - lb)

Order	Job/Parts to remove	Qty	Remarks
	Right section covering		Refer to "GENERAL CHASSIS" on page 4-1
	Engine oil		Down. Refer to "CHANGING THE ENGINE OIL" on page 1-11
	Coolant		Down. Refer to "CHANGING THE COOLANT" on page 2-11
1	Water pump breather tube	1	Disconnect
2	Clutch cable	1	Disconnect
3	Ball lower	1	
4	Ball lower spring	1	
5	Clutch cover	1	
6	Clutch cover gasket	1	
7	Dowel pin	2	

For installation, reverse the removal procedure.

CLUTCH

REMOVING THE CLUTCH

1. Remove:

- Friction plates
- Clutch plates

NOTE:

Be sure to mark the friction plates and clutch plates or note the position of each part so that they are installed in their original positions.

2. Loosen:

- Clutch base nut "1"

NOTE:

While holding the clutch base "2" with the universal clutch holder "3", loosen the clutch base nut.

Universal clutch holder
90890-04085
YM-91042

3. Remove:

- Spacer "1"
- Bearing
- Clutch housing "2"
- Oil pump drive chain

NOTE:

Remove the spacer and bearing from the main axle, then remove the oil pump drive chain from the oil pump driven sprocket, and then remove the clutch housing and oil pump drive chain from the main axle.

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

1. Check:

- Friction plate
- Damage/wear → Replace the friction plates as a set.

2. Measure:

- Friction plate thickness
- Out of specification → Replace the friction plates as a set.

NOTE:

Measure the friction plate at four places.

Friction plate thickness
2.80-3.08 mm (0.110-0.121 in)
Wear limit
2.80 mm (0.1102 in)

CHECKING THE CLUTCH PLATES

The following procedure applies to all of the clutch plates.

1. Check:

- Clutch plate
- Damage → Replace the clutch plates as a set.

2. Measure:

- Clutch plate warpage (with a surface plate and thickness gauge "1")
- Out of specification → Replace the clutch plates as a set.

Thickness gauge
90890-03180
Feeler gauge set
YU-06900-B

Clutch plate thickness
1.90-2.10 mm (0.075-0.083 in)
Warpage limit
0.10 mm (0.0039 in)

5-37



5-41

SYMBOLS

The following symbols are used in this manual for easier understanding.

NOTE:

The following symbols are not relevant to every vehicle.

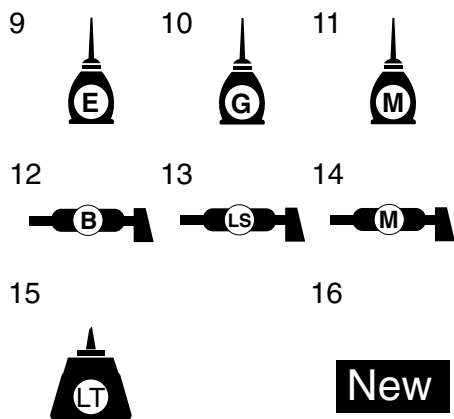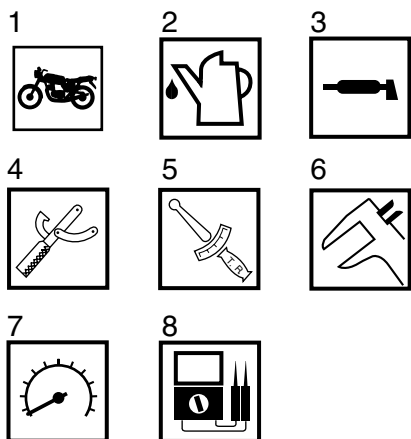

1. Serviceable with engine mounted
2. Filling fluid
3. Lubricant
4. Special tool
5. Tightening torque
6. Wear limit, clearance
7. Engine speed
8. Electrical data
9. Engine oil
10. Gear oil
11. Molybdenum disulfide oil
12. Wheel bearing grease
13. Lithium-soap-based grease
14. Molybdenum disulfide grease
15. Apply locking agent (LOCTITE®).
16. Replace the part with a new one.

TABLE OF CONTENTS

GENERAL INFORMATION	1
SPECIFICATIONS	2
PERIODIC CHECKS AND ADJUSTMENTS	3
CHASSIS	4
ENGINE	5
COOLING SYSTEM	6
FUEL SYSTEM	7
ELECTRICAL SYSTEM	8
TROUBLESHOOTING	9

GENERAL INFORMATION

IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER.....	1-1
MODEL LABEL	1-1
 FEATURES	1-2
OUTLINE OF THE FI SYSTEM.....	1-2
FI SYSTEM	1-3
YCC-T (Yamaha Chip Controlled Throttle).....	1-4
INSTRUMENT FUNCTIONS.....	1-7
 IMPORTANT INFORMATION	1-11
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-11
REPLACEMENT PARTS	1-11
GASKETS, OIL SEALS AND O-RINGS	1-11
LOCK WASHERS/PLATES AND COTTER PINS.....	1-11
BEARINGS AND OIL SEALS.....	1-12
CIRCLIPS.....	1-12
 CHECKING THE CONNECTIONS	1-13
 SPECIAL TOOLS	1-14


EAS20130

IDENTIFICATION

EAS20140

VEHICLE IDENTIFICATION NUMBER


The vehicle identification number “1” is stamped on the right side of the steering head pipe.

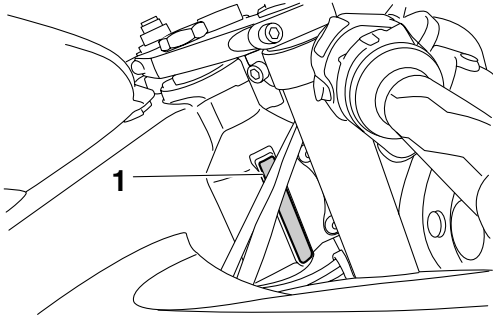

EAS20150

MODEL LABEL

The model label “1” is affixed to the frame under the passenger seat. This information will be needed to order spare parts.

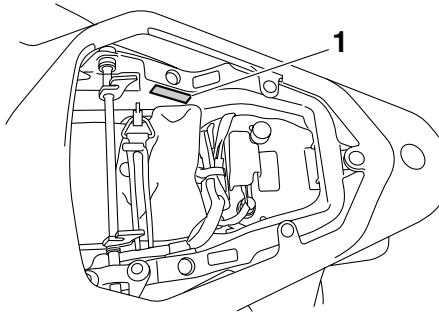

EAS20170

FEATURES

ET2C01025


OUTLINE OF THE FI SYSTEM

The main function of a fuel supply system is to provide fuel to the combustion chamber at the optimum air-fuel ratio in accordance with the engine operating conditions and the atmospheric temperature. In the conventional carburetor system, the air-fuel ratio of the mixture that is supplied to the combustion chamber is created by the volume of the intake air and the fuel that is metered by the jet used in the respective carburetor.

Despite the same volume of intake air, the fuel volume requirement varies by the engine operating conditions, such as acceleration, deceleration, or operating under a heavy load. Carburetors that meter the fuel through the use of jets have been provided with various auxiliary devices, so that an optimum air-fuel ratio can be achieved to accommodate the constant changes in the operating conditions of the engine.

As the requirements for the engine to deliver more performance and cleaner exhaust gases increase, it becomes necessary to control the air-fuel ratio in a more precise and finely tuned manner. To accommodate this need, this model has adopted an electronically controlled fuel injection (FI) system, in place of the conventional carburetor system. This system can achieve an optimum air-fuel ratio required by the engine at all times by using a microprocessor that regulates the fuel injection volume according to the engine operating conditions detected by various sensors.

The adoption of the FI system has resulted in a highly precise fuel supply, improved engine response, better fuel economy, and reduced exhaust emissions.

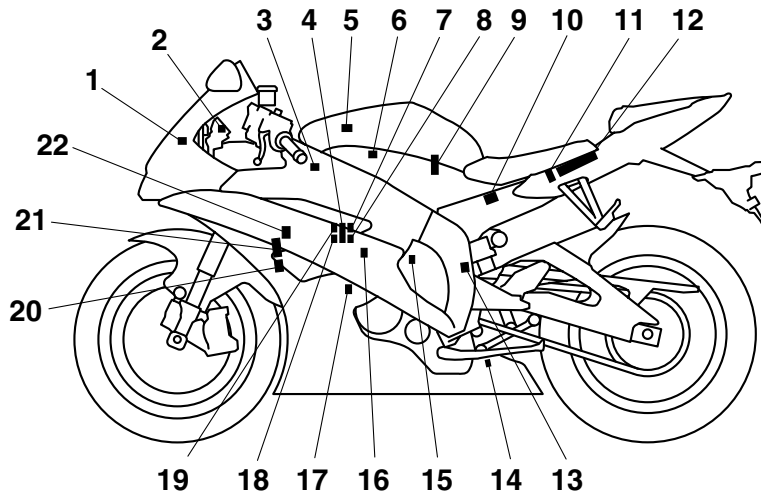


- | | |
|----------------------------------|--|
| 1. Air temperature sensor | 15. Speed sensor |
| 2. Engine trouble warning light | 16. Coolant temperature sensor |
| 3. Air induction system solenoid | 17. Crankshaft position sensor |
| 4. Throttle servo motor | 18. Throttle position sensor (for throttle cable pulley) |
| 5. Atmospheric pressure sensor | 19. Throttle position sensor (for throttle valves) |
| 6. Secondary injectors | 20. Spark plug |
| 7. Primary injectors | 21. Ignition coil |
| 8. Intake air pressure sensor | 22. Cylinder identification sensor |
| 9. Fuel pump | |
| 10. Relay unit (fuel pump relay) | |
| 11. Lean angle sensor | |
| 12. ECU (engine control unit) | |
| 13. EXUP servo motor | |
| 14. O ₂ sensor | |

ET2C01019

FI SYSTEM

The fuel pump delivers fuel to the fuel injector via the fuel filter. The pressure regulator maintains the fuel pressure that is applied to the fuel injector at only 324 kPa (3.24 kg/cm², 46.1 psi). Accordingly, when the energizing signal from the ECU energizes the fuel injector, the fuel passage opens, causing the fuel to be injected into the intake manifold only during the time the passage remains open. Therefore, the longer the length of time the fuel injector is energized (injection duration), the greater the volume of fuel that is supplied. Conversely, the shorter the length of time the fuel injector is energized (injection duration), the lesser the volume of fuel that is supplied.

The injection duration and the injection timing are controlled by the ECU. Signals that are input from the throttle position sensor (for throttle cable pulley), throttle position sensor (for throttle valves), coolant temperature sensor, atmospheric pressure sensor, cylinder identification sensor, lean angle sensor, crankshaft position sensor, intake air pressure sensor, air temperature sensor, speed sensor and O₂ sensor enable the ECU to determine the injection duration. The injection timing is determined through the signals from the crankshaft position sensor. As a result, the volume of fuel that is required by the engine can be supplied at all times in accordance with the driving conditions.

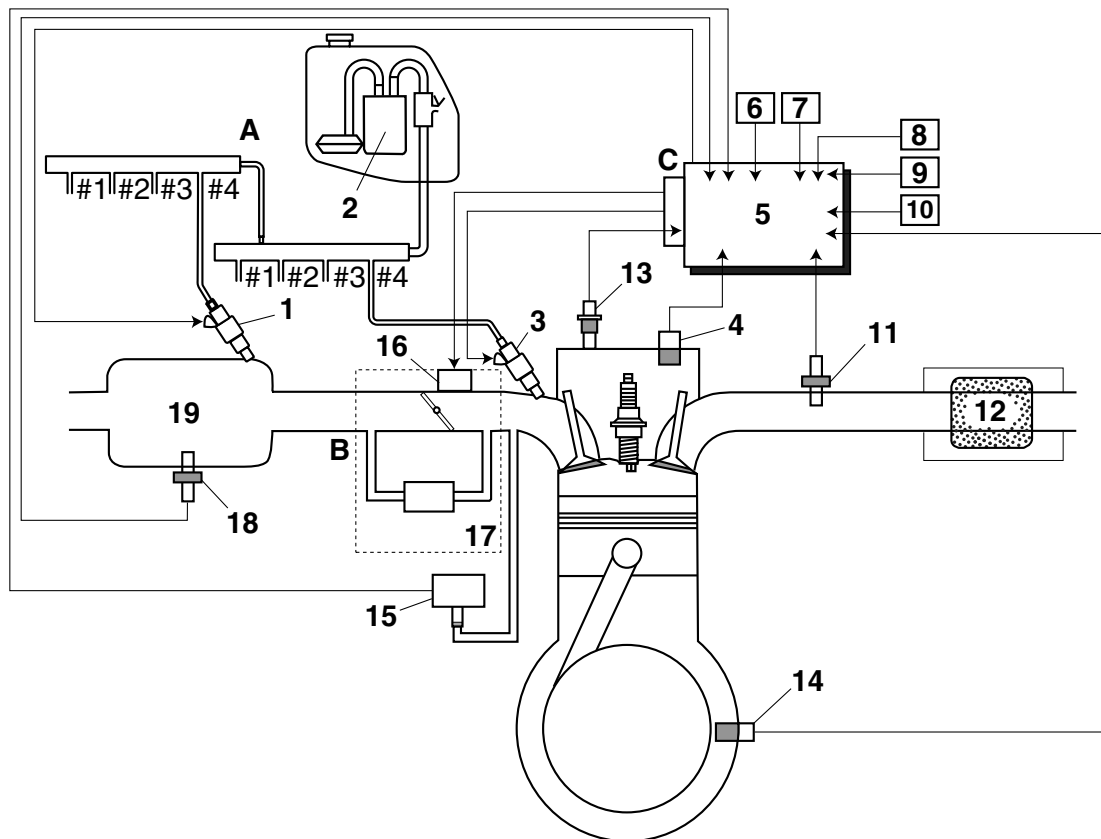

1. Secondary injector
2. Fuel pump
3. Primary injector
4. Cylinder identification sensor
5. ECU (engine control unit)
6. Throttle position sensor (for throttle cable pulley)
7. Throttle position sensor (for throttle valves)
8. Speed sensor
9. Air temperature sensor
10. Lean angle sensor
11. O₂ sensor

12. Catalytic converter
13. Coolant temperature sensor
14. Crankshaft position sensor
15. Intake air pressure sensor
16. Throttle servo motor
17. Throttle body
18. Atmospheric pressure sensor
19. Air filter case

- A. Fuel system
B. Air system
C. Control system

ET2C01026

YCC-T (Yamaha Chip Controlled Throttle)

Mechanism characteristics


Yamaha developed the YCC-T system employing the most advanced electronic control technologies. Electronic control throttle systems have been used on automobiles, but Yamaha has developed a faster, more compact system specifically for the needs of a sports motorcycle. The Yamaha-developed system has a high-speed calculating capacity that produces computations of running conditions every 1/1000th of a second.

The YCC-T system is designed to respond to the throttle action of the rider by having the ECU instantaneously calculate the ideal throttle valve opening and generate signals to operate the motor-driven throttle valves and thus actively control the intake air volume.

The ECU contains three CPUs with a capacity about five times that of conventional units, making it possible for the system to respond extremely quickly to the slightest adjustments made by the rider. In particular, optimized control of the throttle valve opening provides the optimum volume of intake air for easy-to-use torque, even in a high-revving engine.

Aims and advantages of using YCC-T

- Increased engine power
By shortening the air intake path, higher engine speed is possible → Increased engine power.
- Improved driveability
Air intake volume is controlled according to the operating conditions → Improved throttle response to meet engine requirement.
Driving force is controlled at the optimal level according to the transmission gear position and engine speed → Improved throttle control.
- Engine braking control
Due to the throttle control, optimal engine braking is made possible.
- Simplified idle speed control (ISC) mechanism
The bypass mechanism and ISC actuator are eliminated → A simple mechanism is used to maintain a steady idle speed.
- Reduced weight
Compared to using a sub-throttle mechanism, weight is reduced.

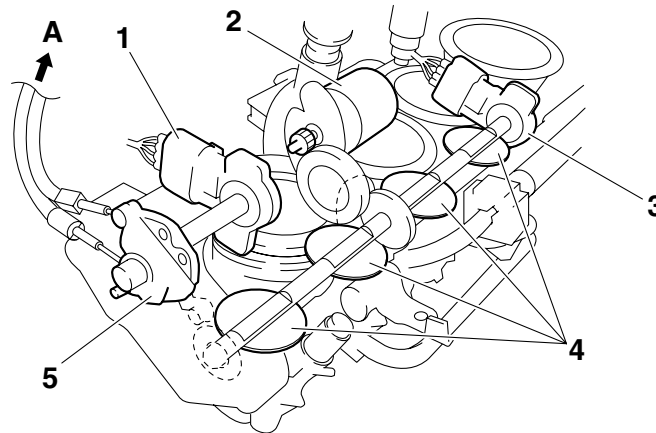

1. Throttle position sensor (for throttle cable pulley)
2. Throttle servo motor
3. Throttle position sensor (for throttle valves)
4. Throttle valves
5. Throttle cable pulley with linkage guard
- A. To throttle grip