# 1-4 GENERAL INFORMATION

### **Model Identification**

## KVF360-A1



## **GENERAL INFORMATION 1-5**

### **Model Identification**

### KVF360-A1




#### 11-46 FINAL DRIVE

#### Rear Final Gear Case

Tighten the rear final gear case bolts following the tightening sequence [1. 40].

Torque - Rear Final Gear Case Bolts: 42 N-m (4.3 kgf-m, 31 ft-lb)

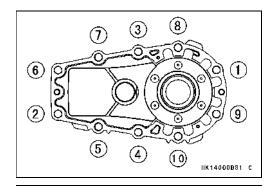


#### Rear Final Gear Case Disassembly

• Remove:


Rear Final Gear Case (see Rear Final Gear Case Removal)

Rear Final Gear Case Right Cover Bolts [A]


Rear Final Gear Case Right Cover [B]

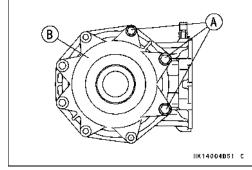

Remove: Shim(s) [A] Ring Gear [B]

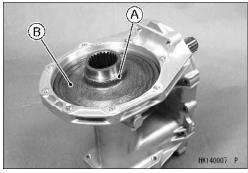

 Remove: Pinion Gear Bearing Holder [A]

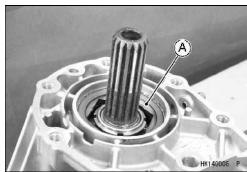

O Hold the rear final gear case [A] in a vise, and remove the bearing holder using the socket wrench [B].

Special Tool - Socket Wrench, Hex 50: 57001-1478

O If the holder seems too difficult to break free, apply heat to softer the locking agent.

